

WASHER NOZZLE


66099-02

ADJUSTMENT

1. INSPECT WASHER NOZZLE

- (a) With the engine running, check that the point where the washer fluid hits the windshield and the rear window is within the range indicated by the hatched line.

Front:

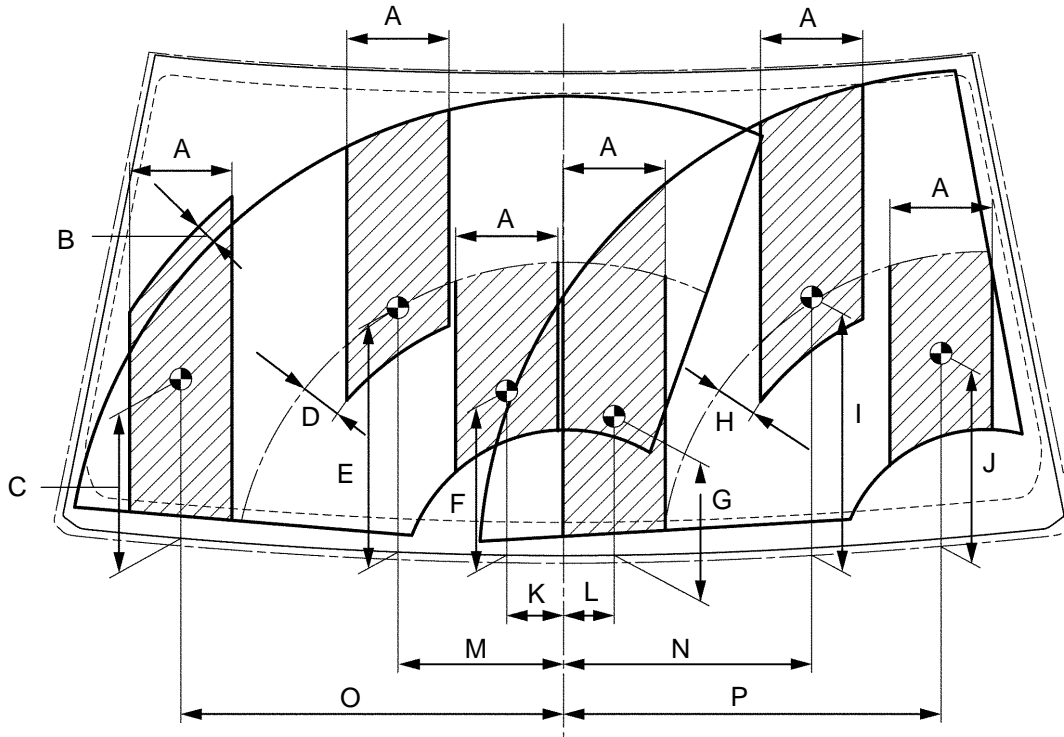


A: 150mm(5.91in.)	I: 384.6mm(15.142in.)
B: 30mm(1.18in.)	J: 288.2mm(11.346in.)
C: 236.5mm(9.311in.)	K: 85.2mm(3.354in.)
D: 60mm(2.36in.)	L: 77.1mm(3.035in.)
E: 364.4mm(14.346in.)	M: 247mm(9.72in.)
F: 240.1mm(9.453in.)	N: 366.7mm(14.437in.)
G: 207.8mm(8.181in.)	O: 568.3mm(22.374in.)
H: 60mm(2.36in.)	P: 557.2mm(21.937in.)

P

133029

Rear:

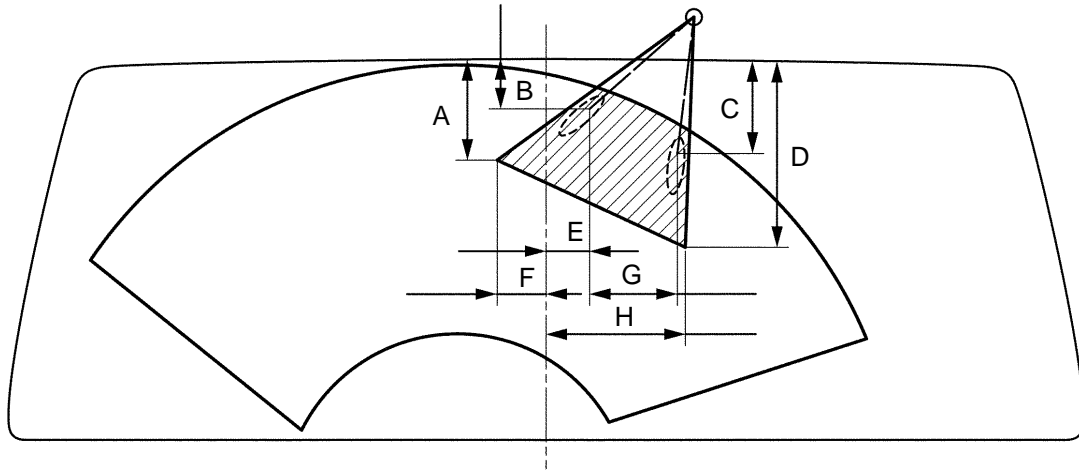

- A: 114.2mm(4.496in.)
- B: 60.3mm(2.374in.)
- C: 107mm(4.21in.)
- D: 210.4mm(8.283in.)
- E: 41.6mm(1.638in.)
- F: 56.4mm(2.22in.)
- G: 102.7mm(4.043in.)
- H: 153.8mm(6.055in.)