


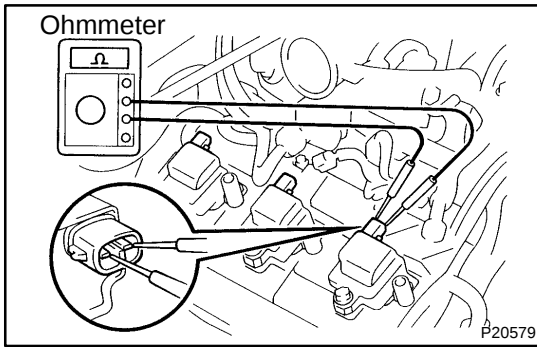


- (c) Using an ohmmeter, measure the resistance between the positive (+) and negative (-) terminals.

Primary coil resistance :

Cold	0.67 - 1.05 Ω
Hot	0.85 - 1.23 Ω

If the resistance is not as specified, replace the ignition coil.

- (d) Remove the ignition coils.

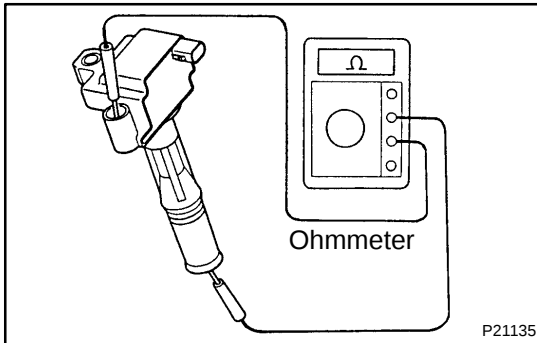


- (e) Using an ohmmeter, measure the resistance between the positive (+) and high-tension terminals.

Secondary coil resistance:

Cold	9.3 - 16.0 Ω
Hot	11.7 - 18.8 Ω

If the resistance is not as specified, replace the ignition coil.

- (f) Install the ignition coils.
 (g) Connect the ignition coil connectors and high-tension cords.
 (h) Install the air cleaner hose.

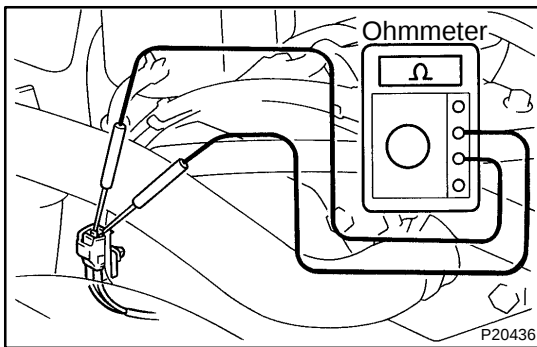

5. INSPECTION CAMSHAFT POSITION SENSOR

- (a) Disconnect the camshaft position sensor connector.
 (b) Using an ohmmeter, measure the resistance between terminals.

Resistance:

Cold	835 - 1,400 Ω
Hot	1,060 - 1,645 Ω

If the resistance is not as specified, replace the camshaft position sensor.

- (c) Connect the camshaft position sensor connector.