

ENGINE

GENERAL MAINTENANCE

HINT:

Inspect these items on a cooled down engine.

1. REPLACE TIMING BELT

Type	See procedures
2UZ-FE	See page EM-19

2. INSPECT DRIVE BELT

Type	See procedures
1GR-FE	See page EM-6
2UZ-FE	See page EM-6

3. REPLACE SPARK PLUGS

Type	See procedures
1GR-FE	See page IG-3
2UZ-FE	See page IG-1

4. REPLACE ENGINE OIL AND OIL FILTER

Type	See procedures
1GR-FE	See page LU-1
2UZ-FE	See page LU-1

5. REPLACE ENGINE COOLANT

Type	See procedures
1GR-FE	See page CO-1
2UZ-FE	See page CO-1

6. INSPECT EXHAUST PIPES AND MOUNTINGS

- (a) Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.

7. INSPECT BATTERY

Type	See procedures
1GR-FE	See page CH-3
2UZ-FE	See page CH-3

8. INSPECT AIR CLEANER FILTER


- (a) Remove the air filter.
- (b) Visually check that the air filter is not excessively damaged or oily. If necessary, replace the air filter.
- (c) Reinstall the air filter.

9. REPLACE AIR CLEANER FILTER

- (a) Replace the air filter with a new one.

10. INSPECT FUEL TANK CAP GASKET

Type	See procedures
1GR-FE	See page EC-2
2UZ-FE	See page EC-5

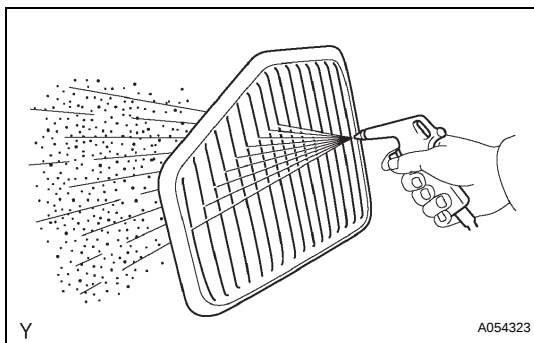

11. INSPECT FUEL LINES AND CONNECTIONS AND FUEL TANK VAPOR VENT SYSTEM HOSES AND FUEL TANK BANDS

- (a) Visually check the fuel lines for cracks, leakage, loose connections, deformation or tank band looseness.

12. INSPECT CHARCOAL CANISTER

Type	See procedures
1GR-FE	See page EC-2
2UZ-FE	See page EC-5

13. INSPECT VALVE CLEARANCE

Type	See procedures
1GR-FE	See page EM-8
2UZ-FE	See page EM-7