



F RELAY LOCATIONS


[Engine Compartment]

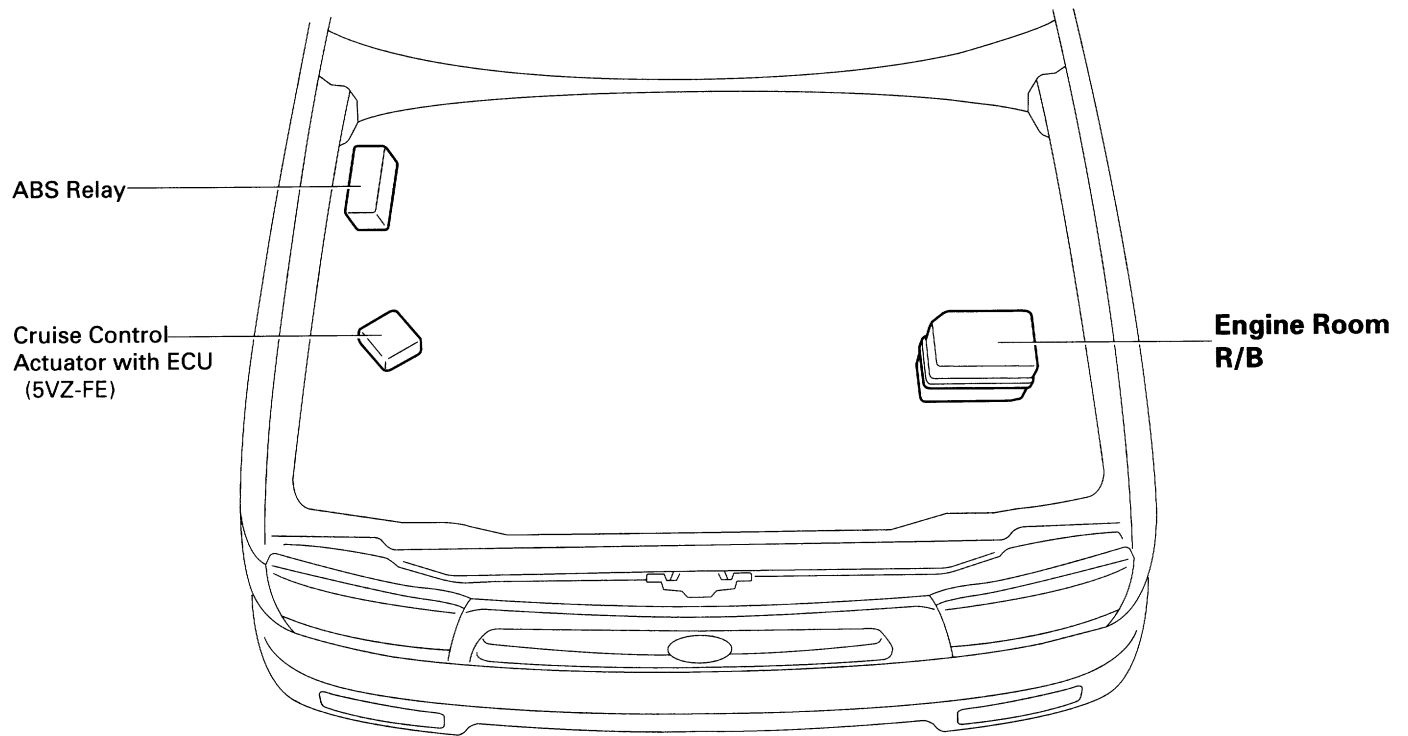

[Body]

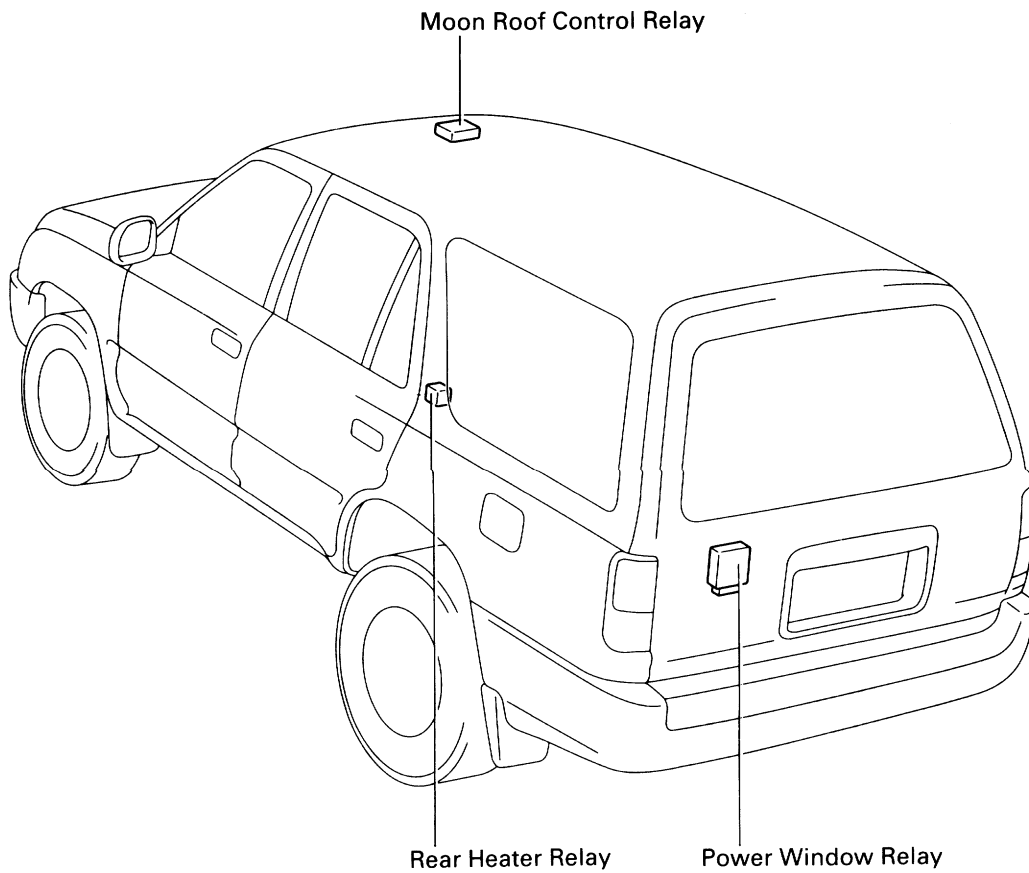


[Instrument Panel]

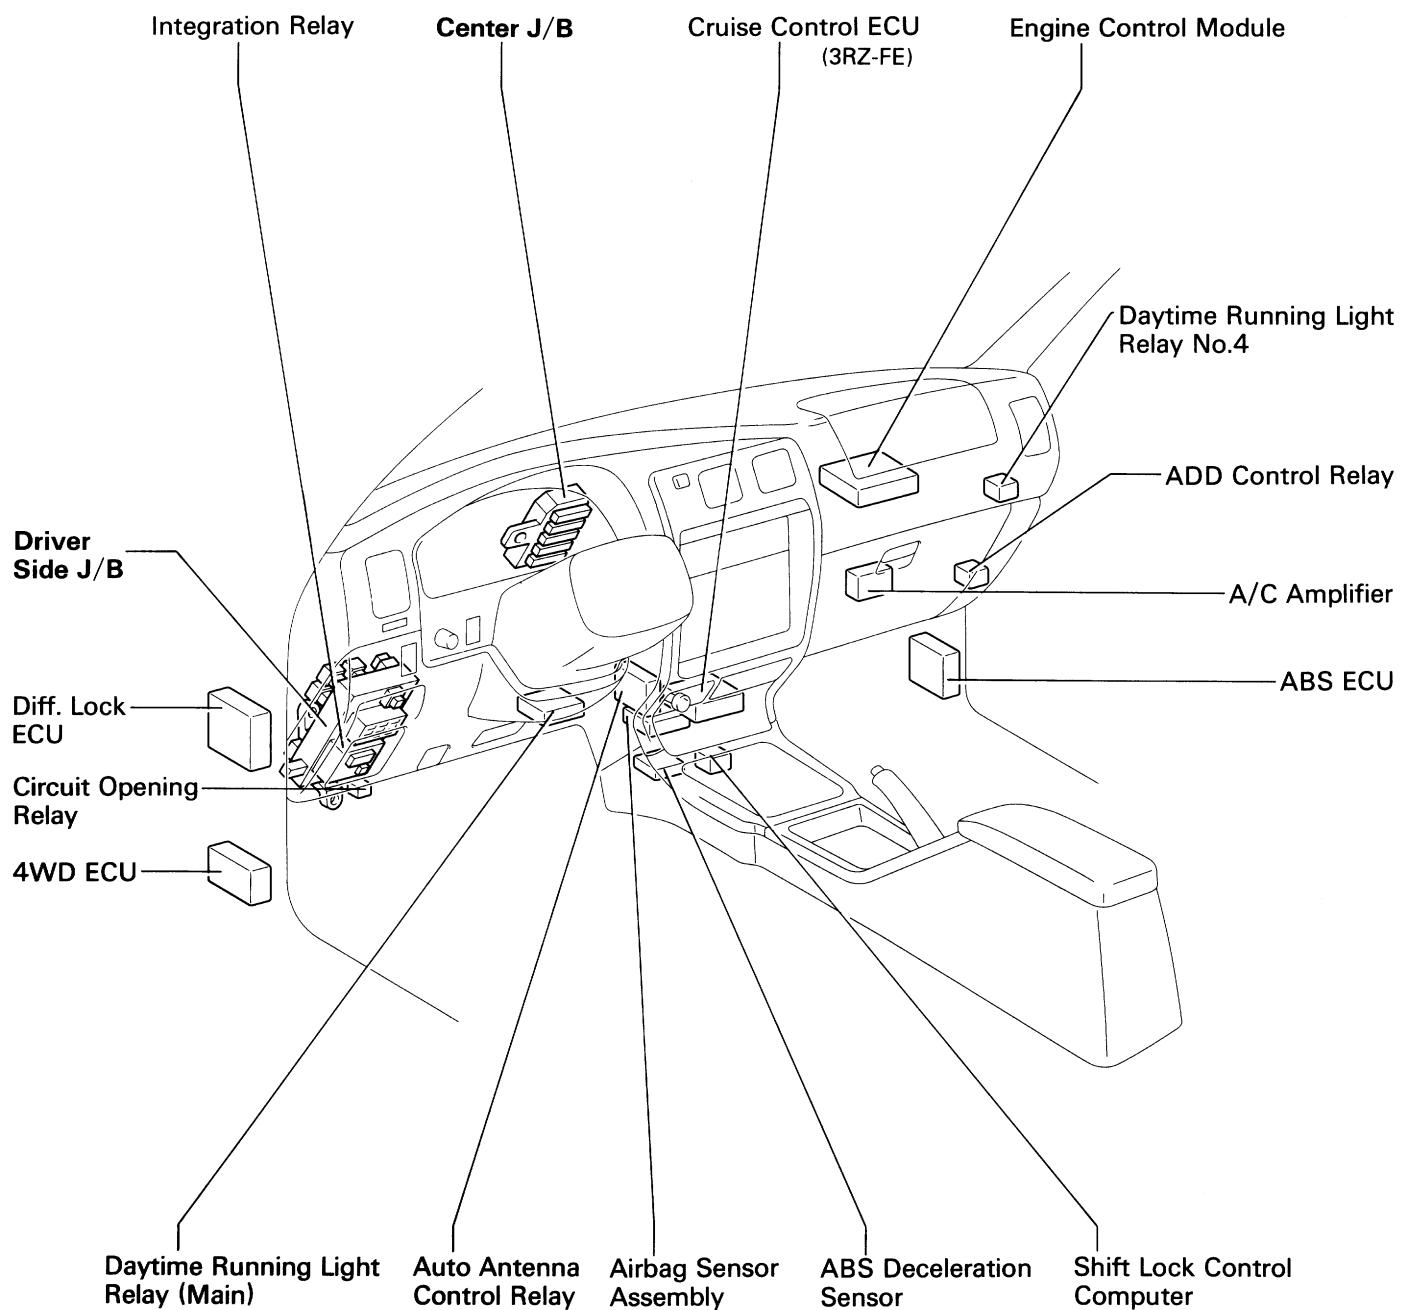


F RELAY LOCATIONS

② : Engine Room R/B Engine Compartment Left (See Page 18)

(USA)

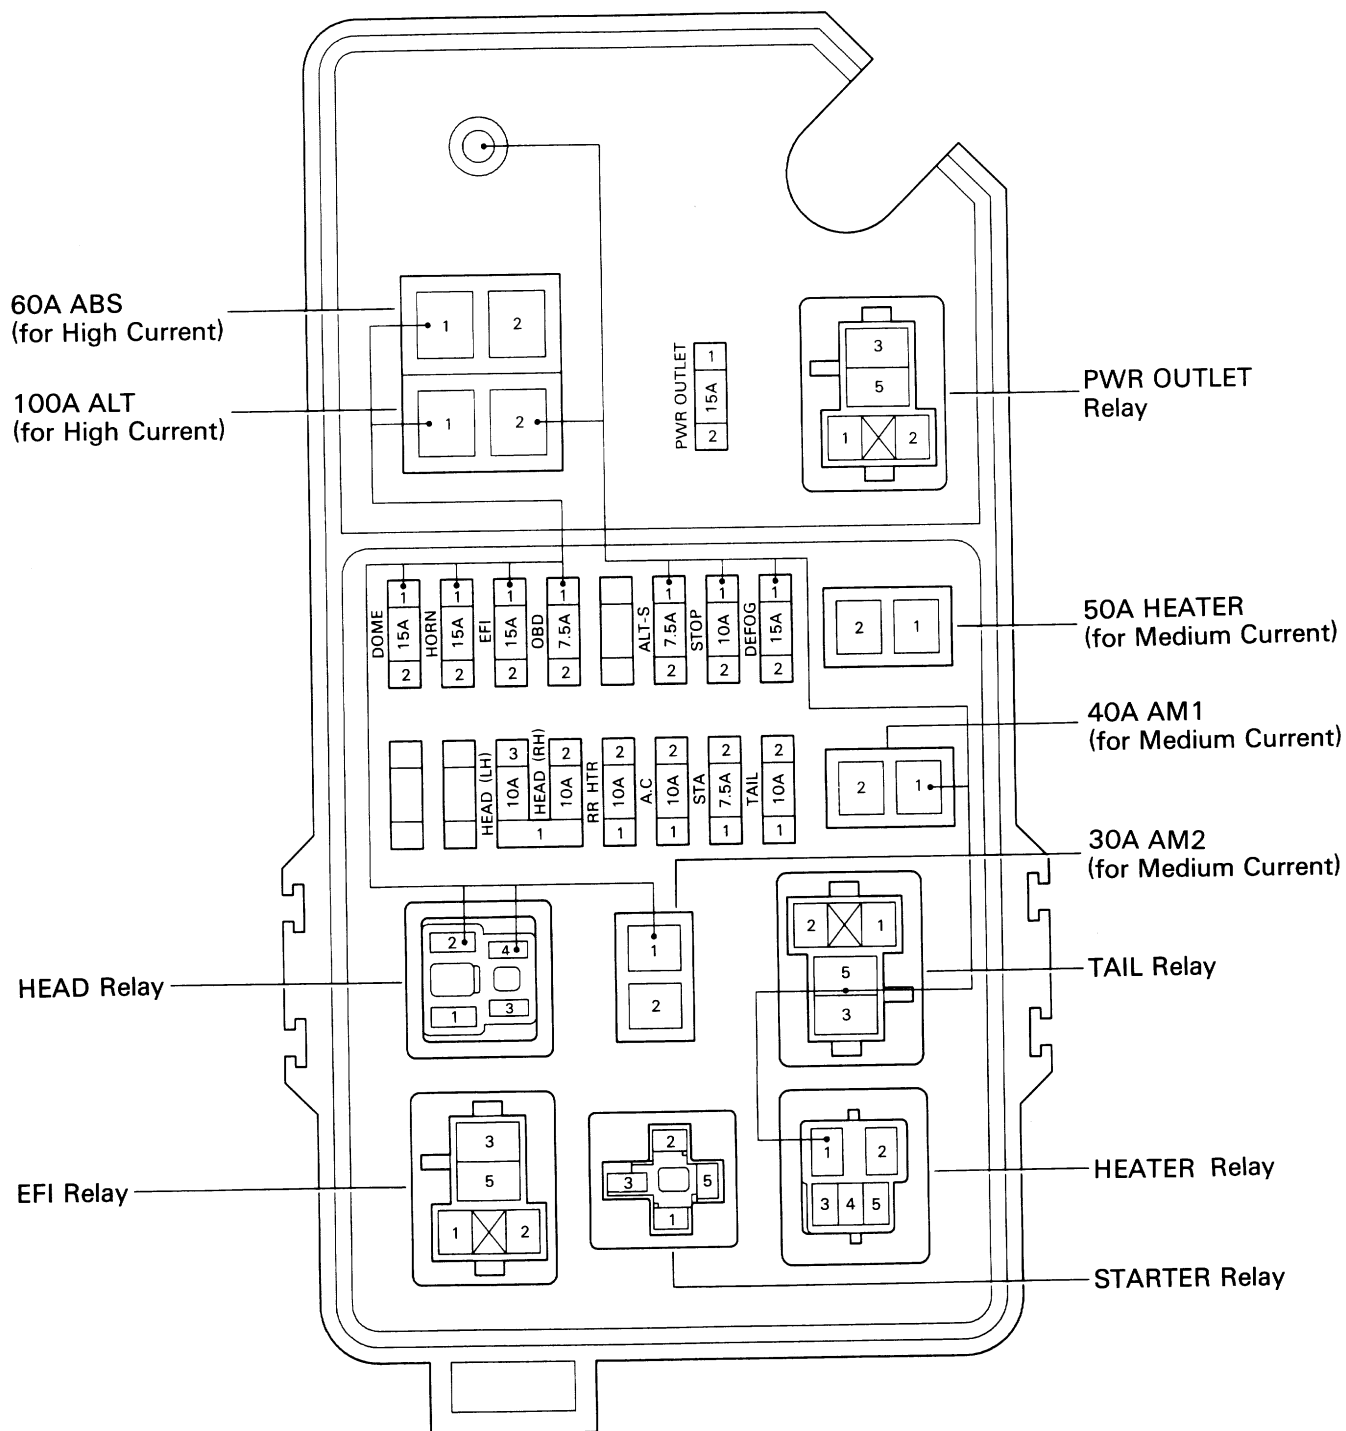



(Canada)

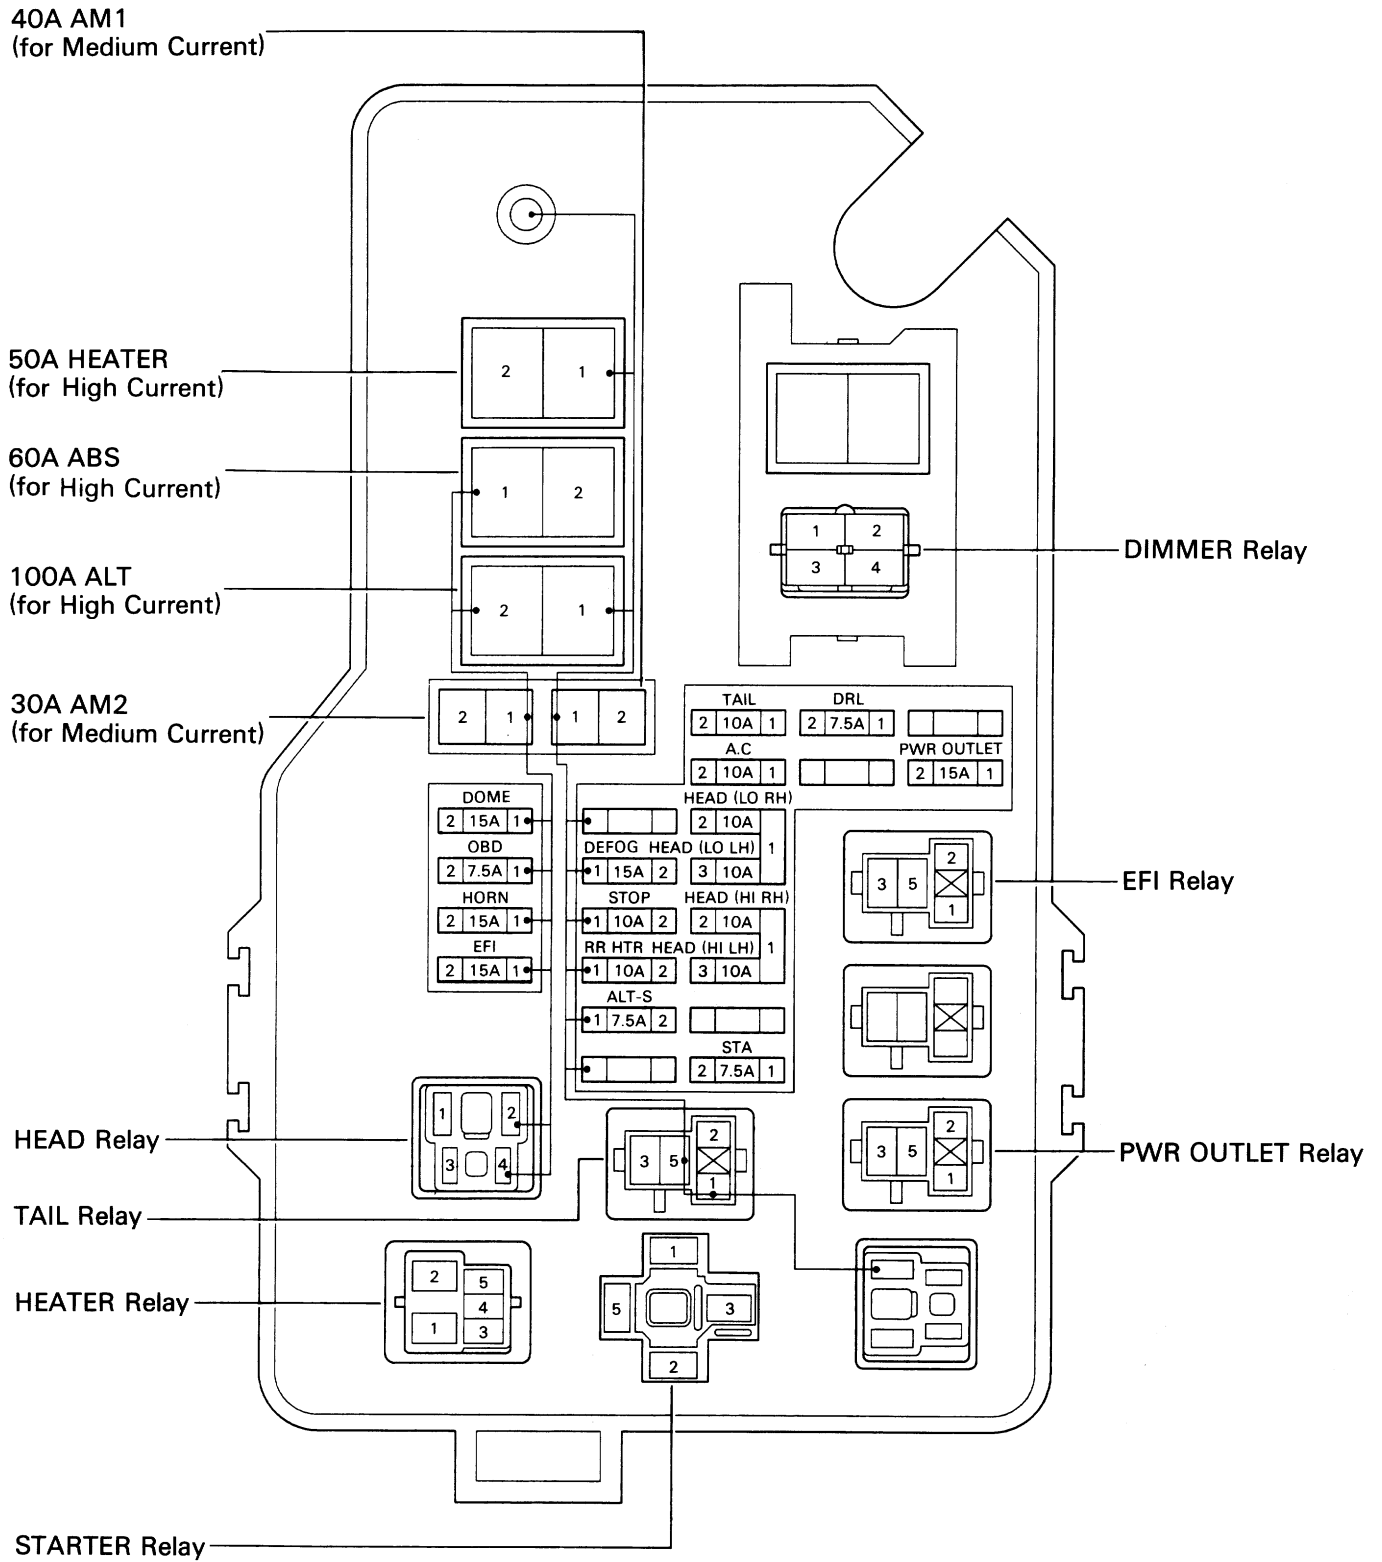


F RELAY LOCATIONS

○ : Driver Side J/B

Lower Finish Panel (See Page 19)

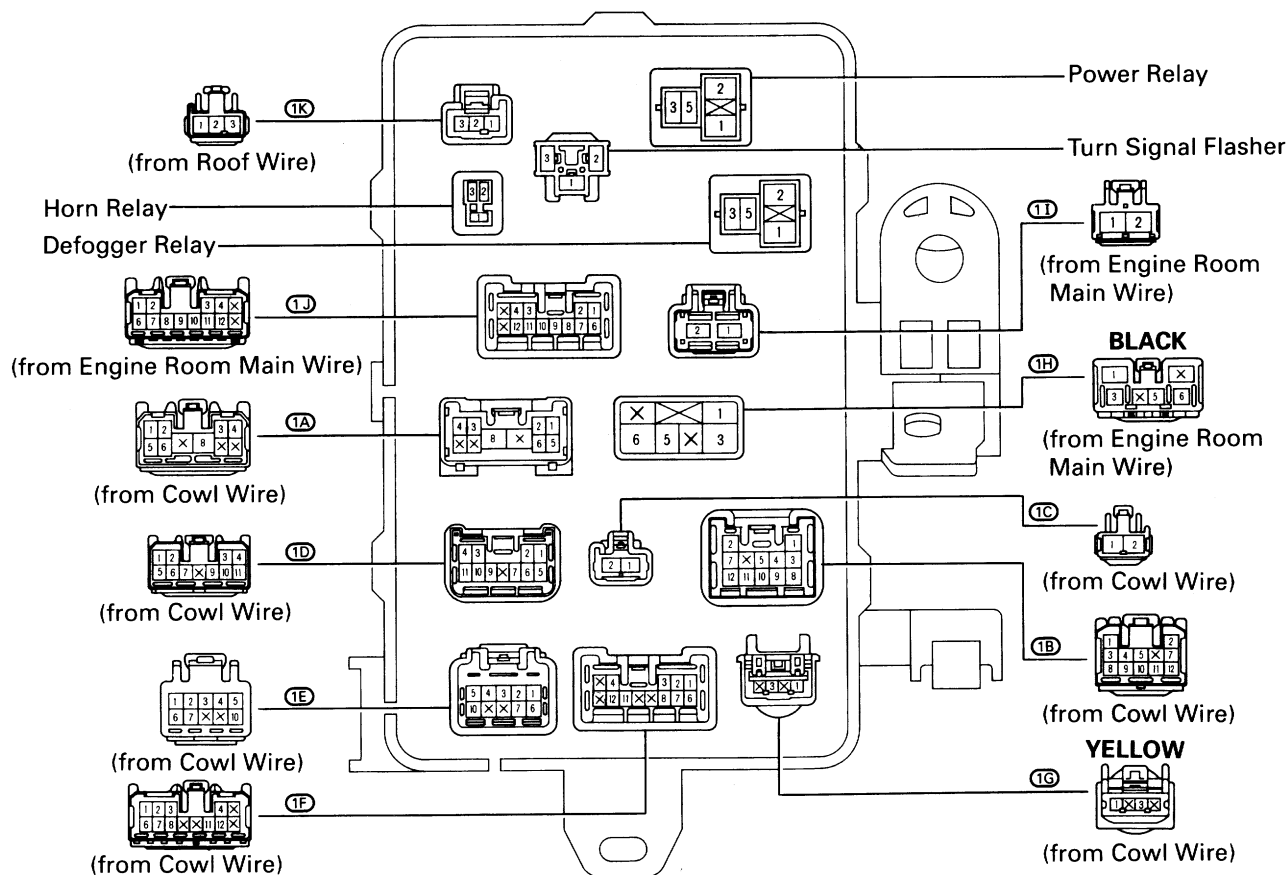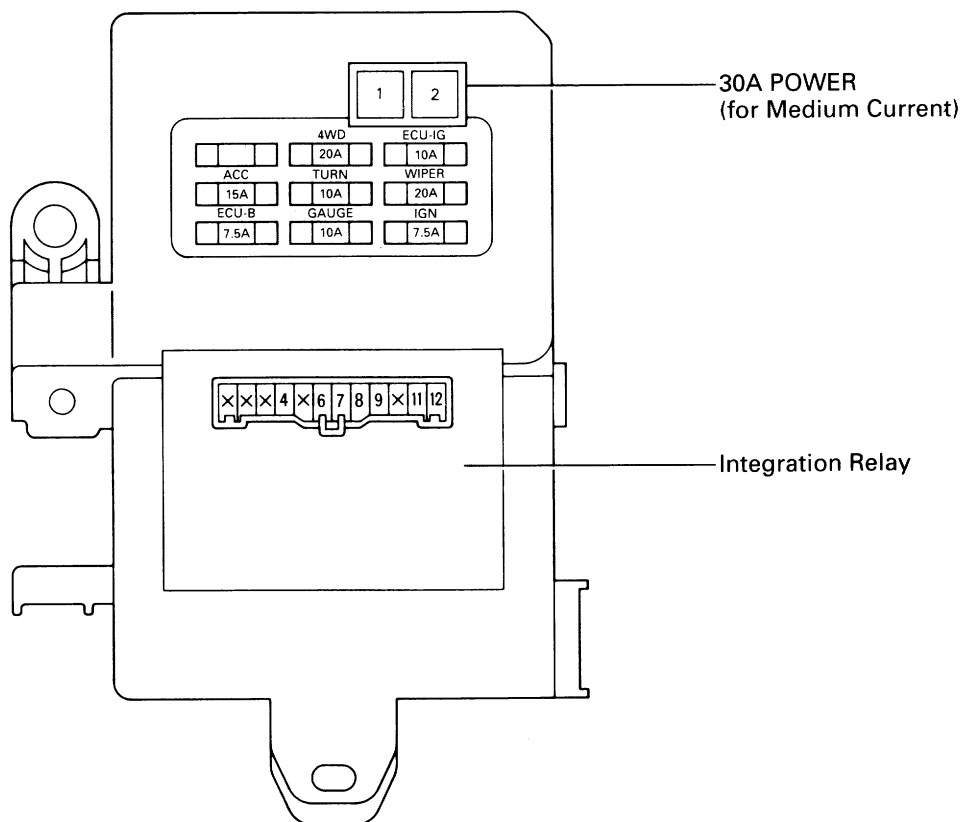


[Driver Side J/B Inner Circuit]

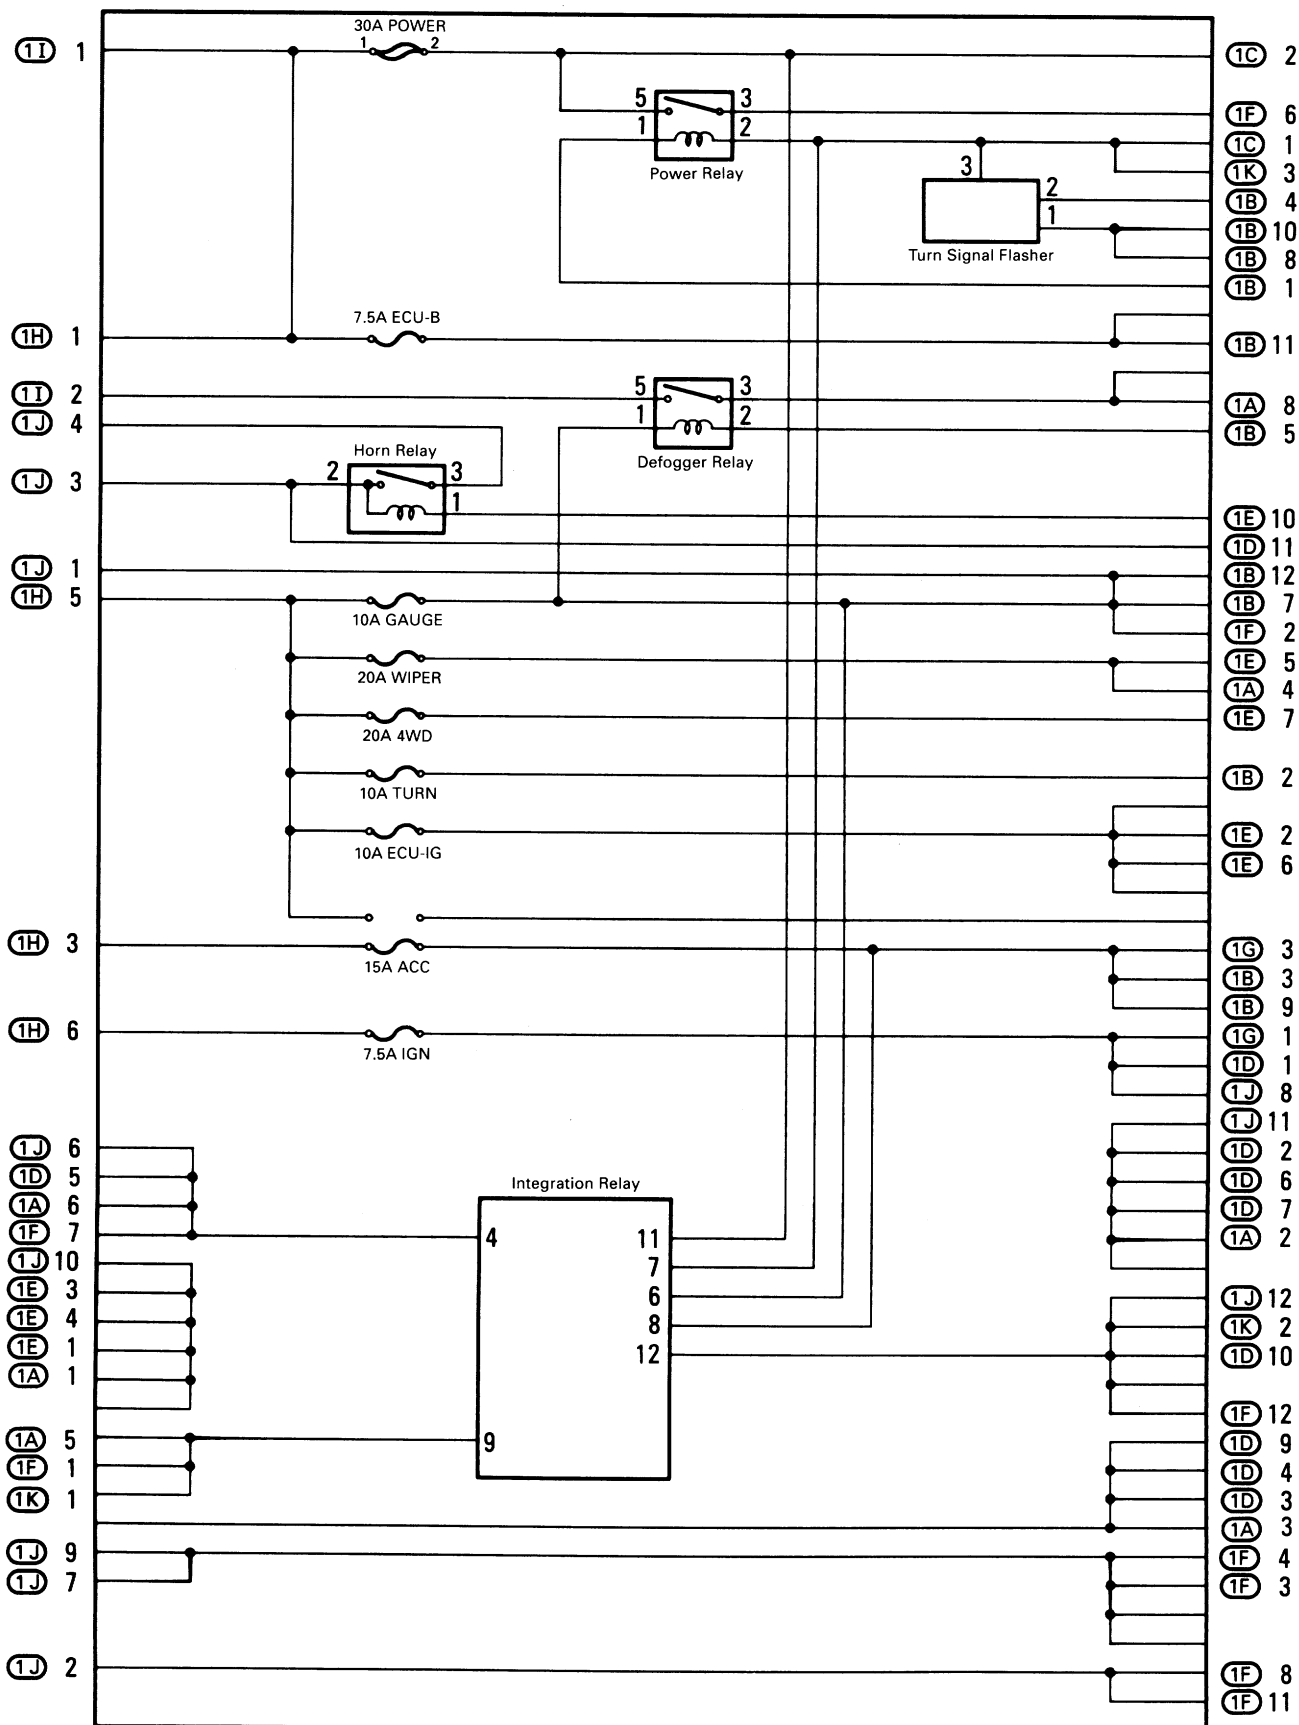

F RELAY LOCATIONS

 : Center J/B

Near the Steering Column Tube (See Page 19)

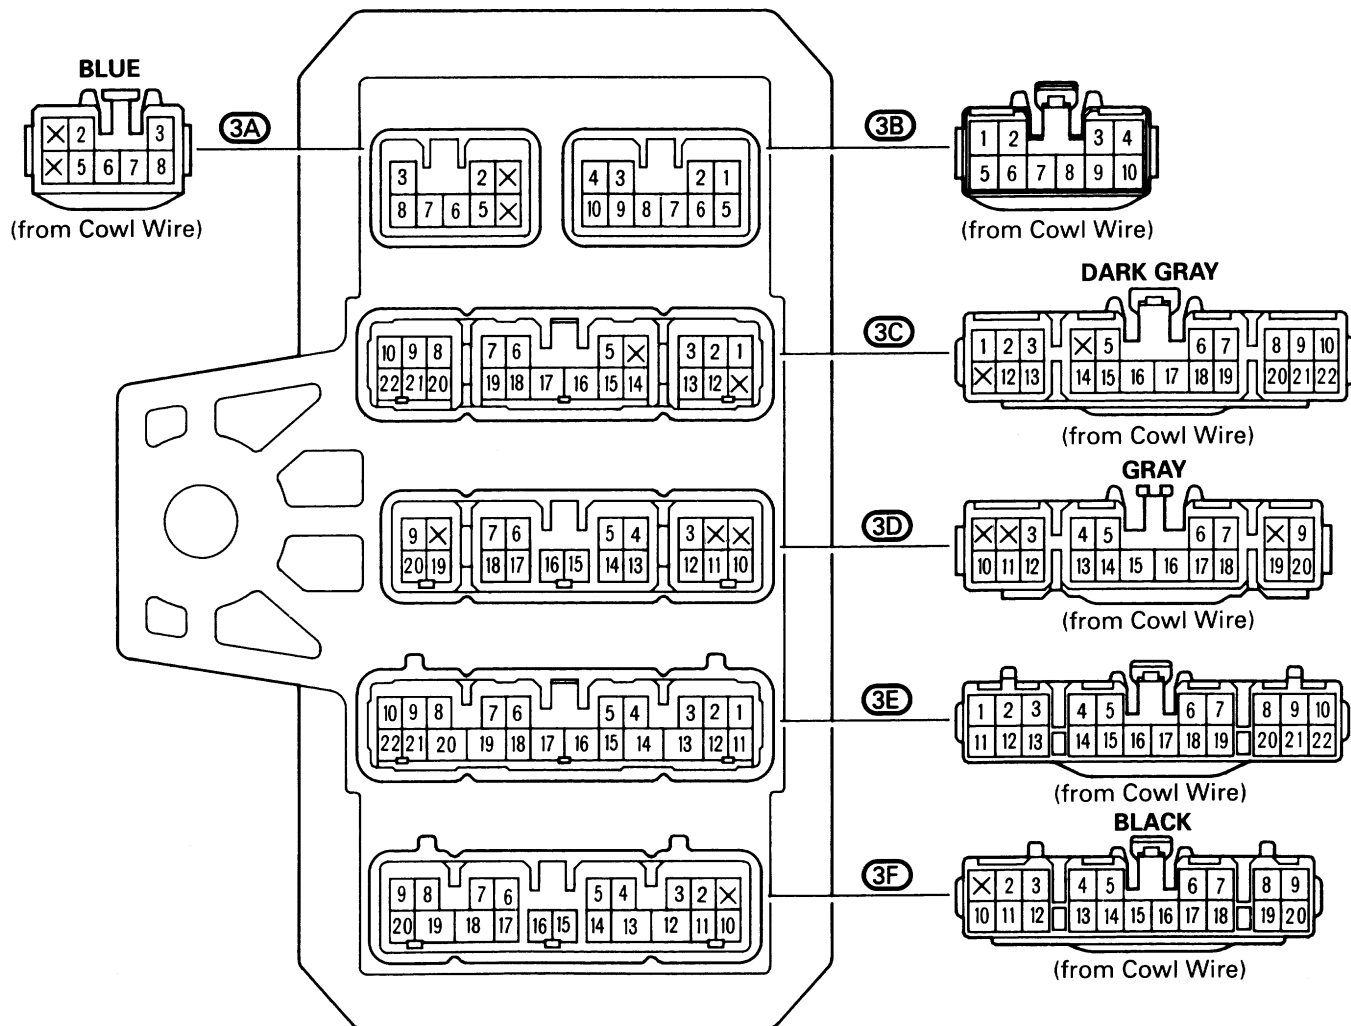

[Center J/B Inner Circuit]

