


Engine Immobiliser System

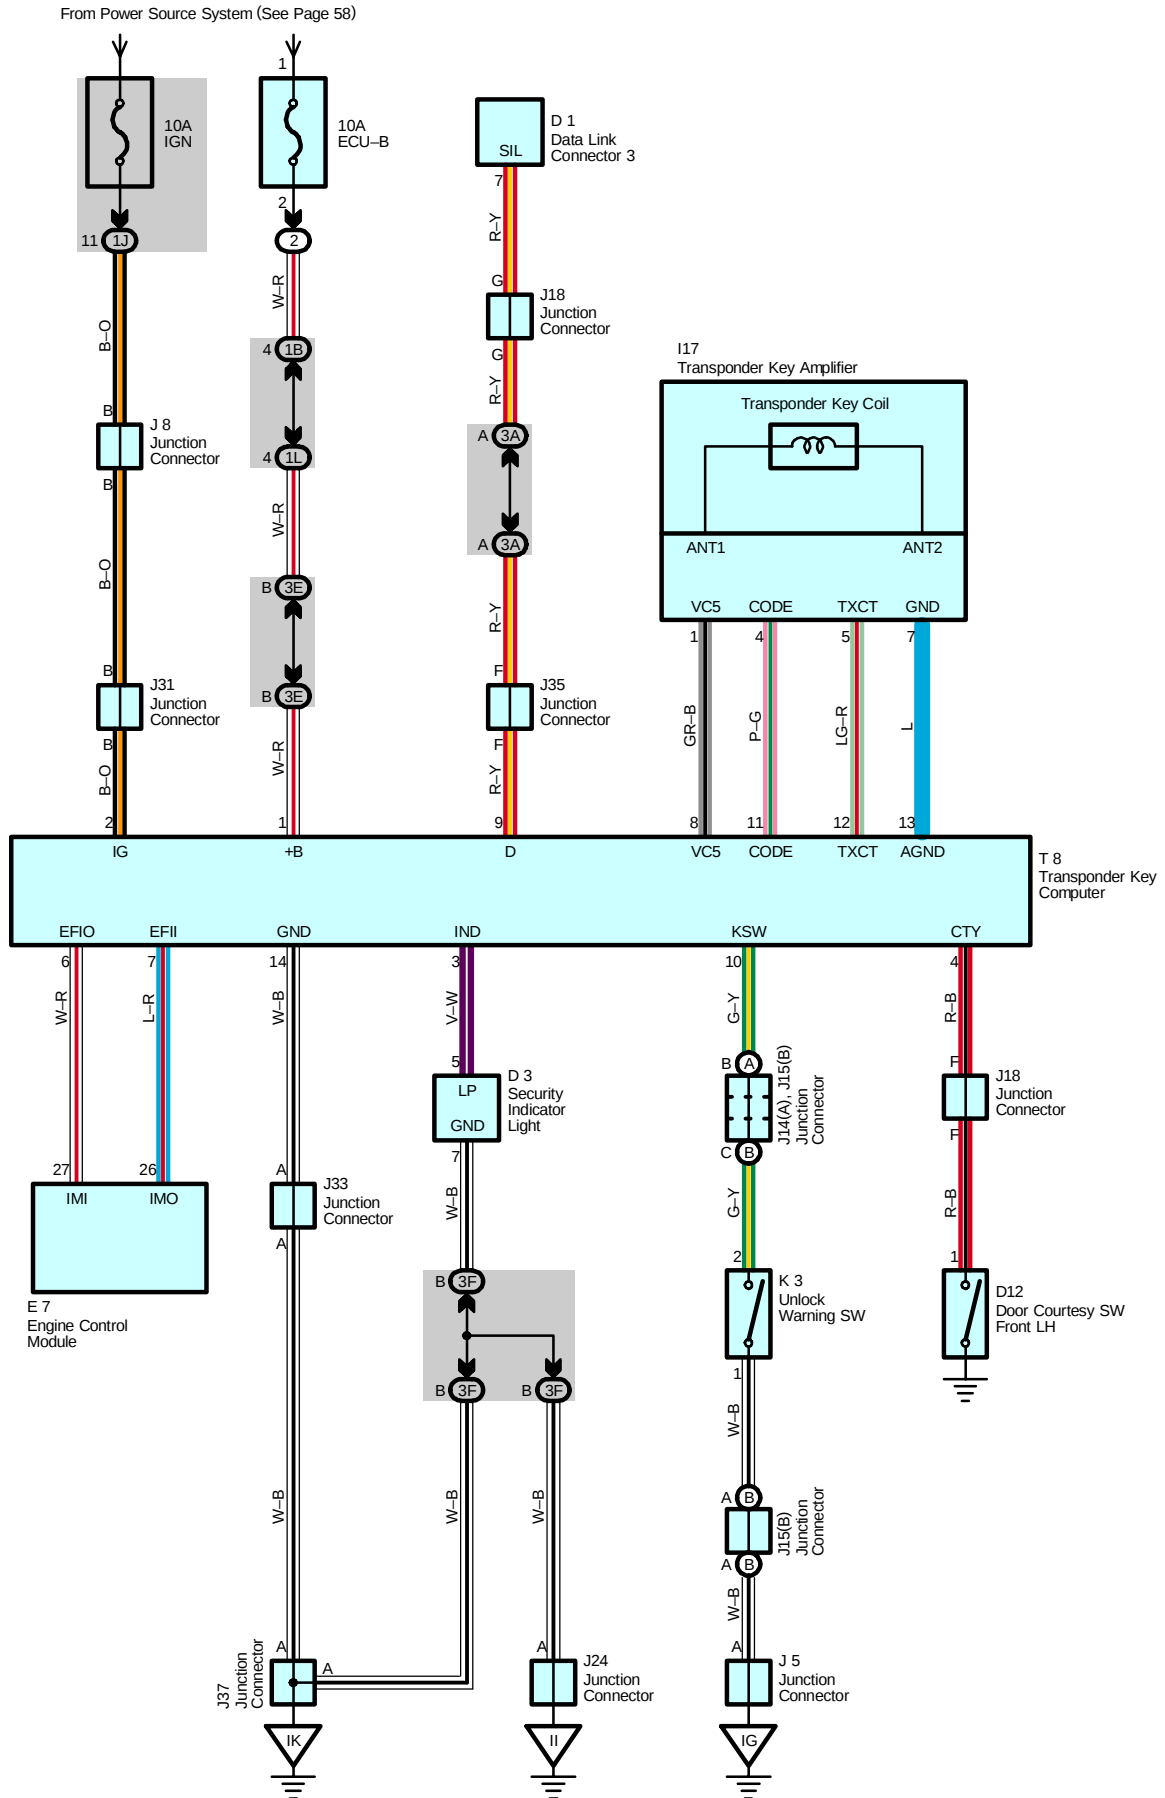

Service Hints

T8 Transponder Key Computer

- 1-Ground : Always approx. 12 volts
- 14-Ground : Always continuity
- 2-Ground : Approx. 12 volts with ignition SW at ON position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D1	37	J8	38	J33	38
D3	37	J14	A 38	J35	38
D12	40	J15	B 38	J37	38
E7	37	J18	38	K3	39
I17	37	J24	38	T8	39
J5	38	J31	38		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
3A	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3E		
3F		

▽ : Ground Points

Code	See Page	Ground Points Location
IG	48	Left Kick Panel
II	48	Instrument Panel Brace RH
IK	48	Right Kick Panel