


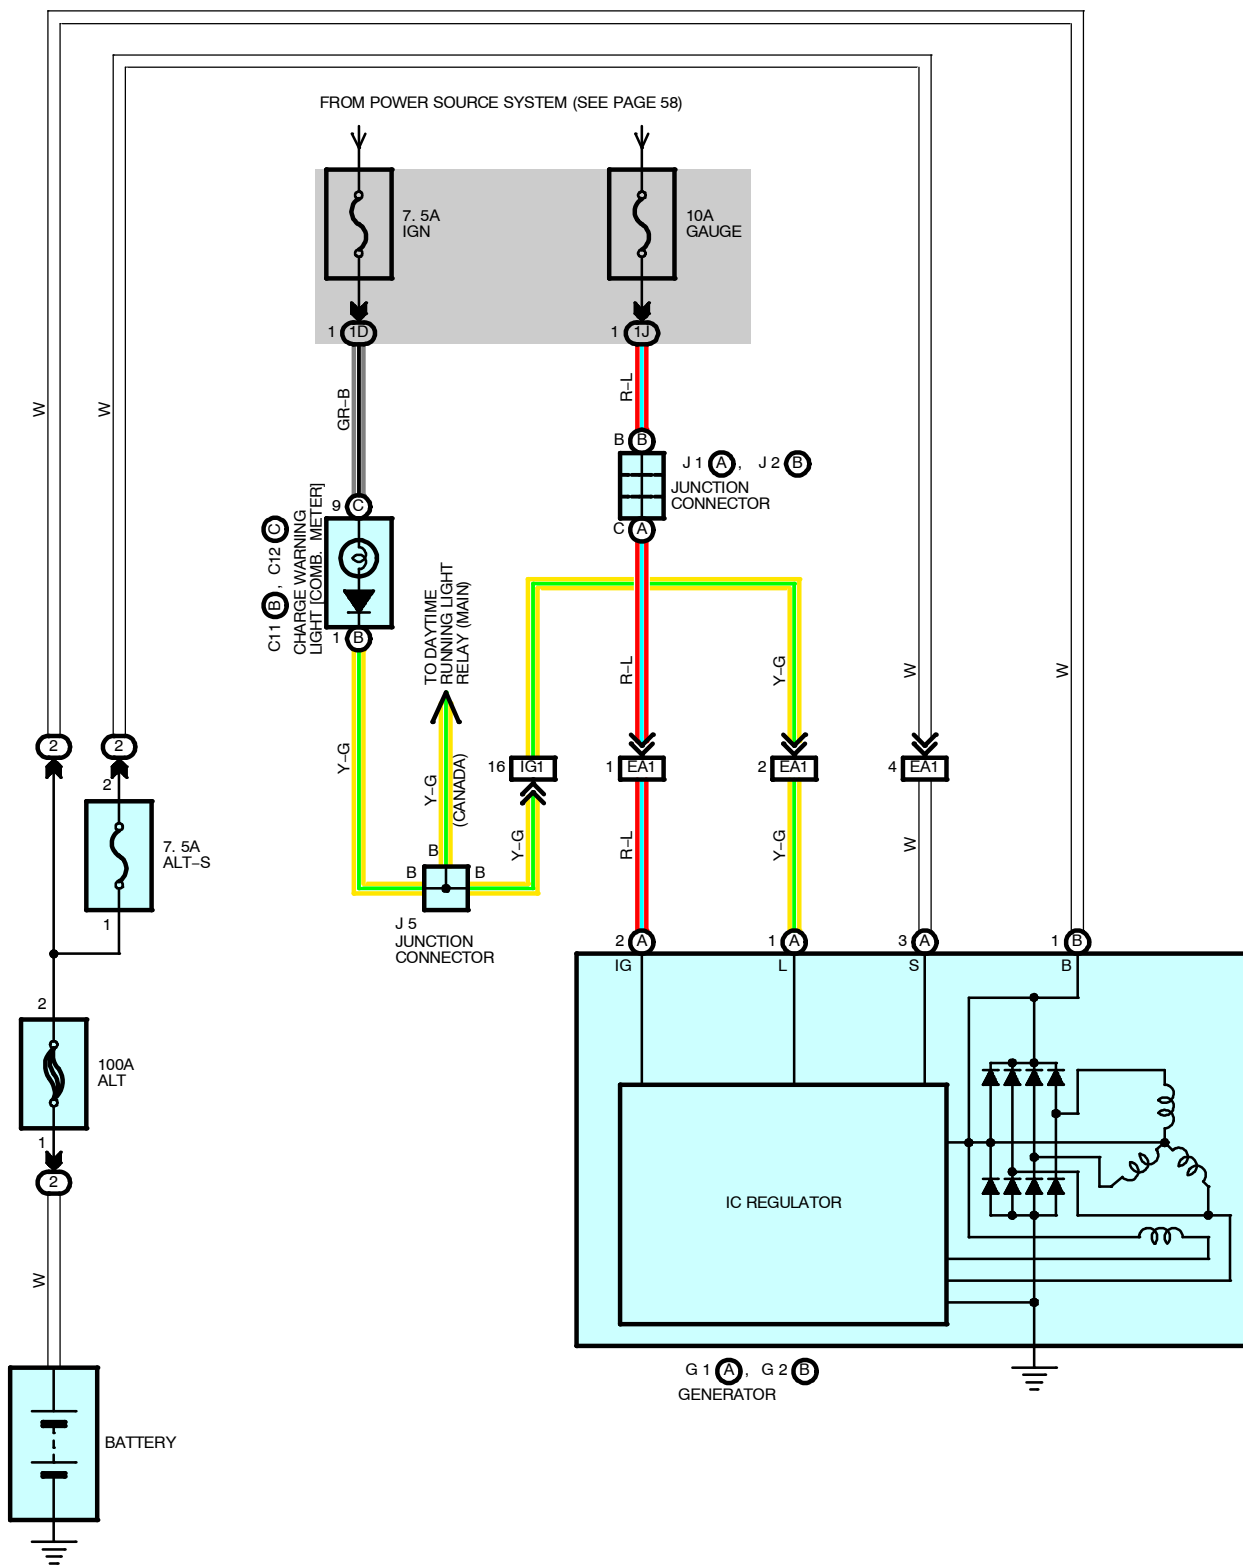

SERVICE HINTS

G1 (A), G2 (B) GENERATOR

- (B) 1-GROUND: **13.9–15.1** volts with engine running at **2000** rpm and **25°C (77°F)**
13.5–14.3 volts with engine running at **2000** rpm and **115°C (239°F)**
 (A) 1-GROUND: **0–4** volts with ignition SW at **ON** position and engine not running

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
C11	B	30	G2	B	26 (5VZ-FE), 28 (3RZ-FE)	J5	31
C12	C	30	J1	A	27 (5VZ-FE), 29 (3RZ-FE)		
G1	A	26 (5VZ-FE), 28 (3RZ-FE)	J2	B	27 (5VZ-FE), 29 (3RZ-FE)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	20 (USA) 21 (Canada)	Engine Room R/B (Engine Compartment Left)


○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	36 (5VZ-FE) 38 (3RZ-FE)	Engine No.2 Wire and Engine Room Main Wire (Near the Engine Room R/B)
IG1	40	Engine Room Main Wire and Cowl Wire (Left Kick Panel)


C11 (B) BLUE

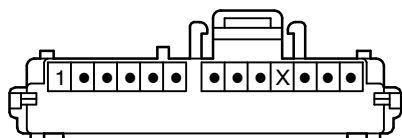


C12 (C)

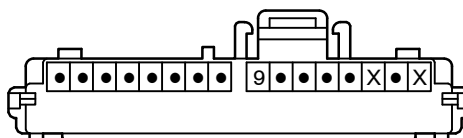


G1 (A) GRAY

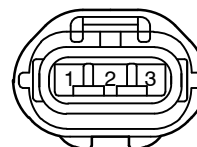

G2 (B)

 


J1 (A), J2 (B) GRAY

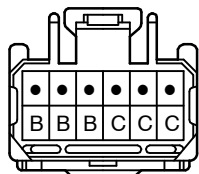

(Hint : See Page 7)

 J5 BLACK



(Hint : See Page 7)