


FRONT DRIVE SHAFT ASSEMBLY

COMPONENTS


DS

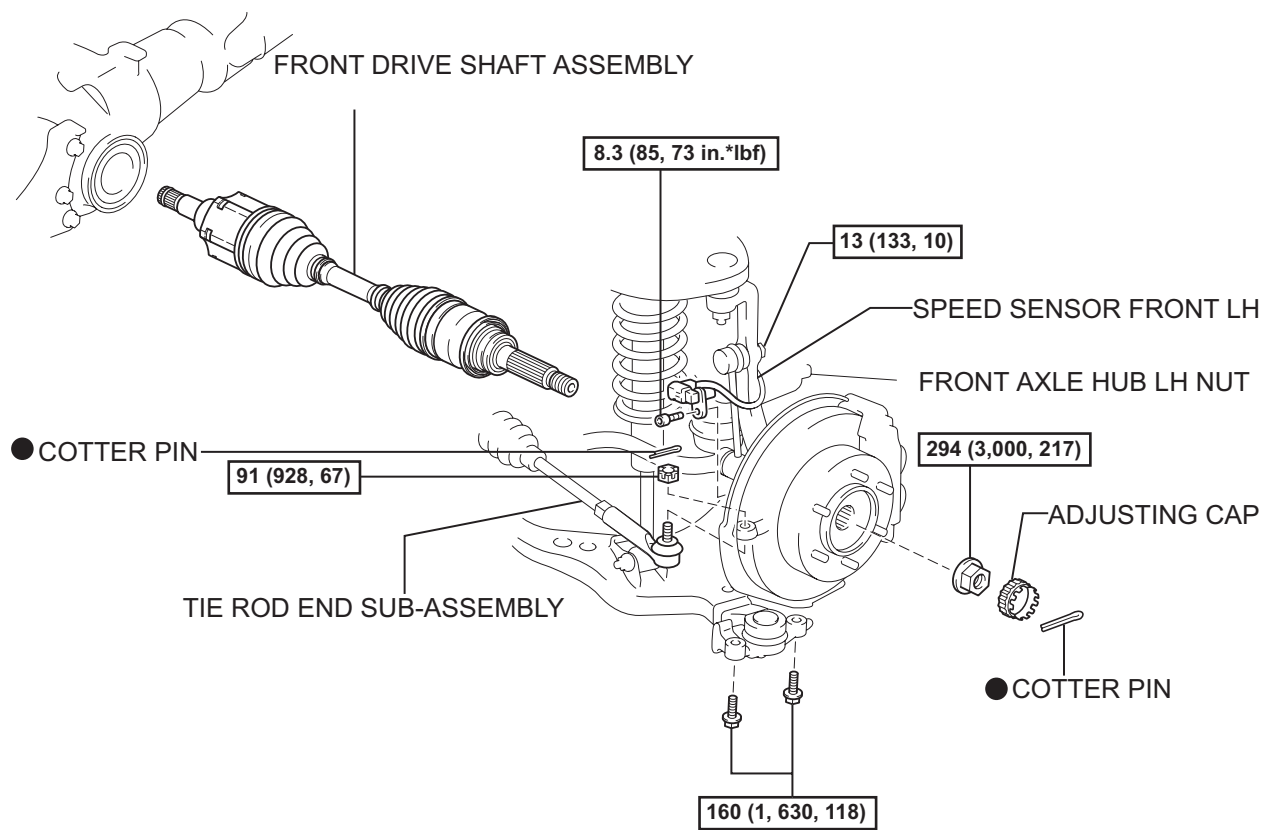

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

● FRONT DRIVE INNER SHAFT
OUTER SHAFT SNAP RING

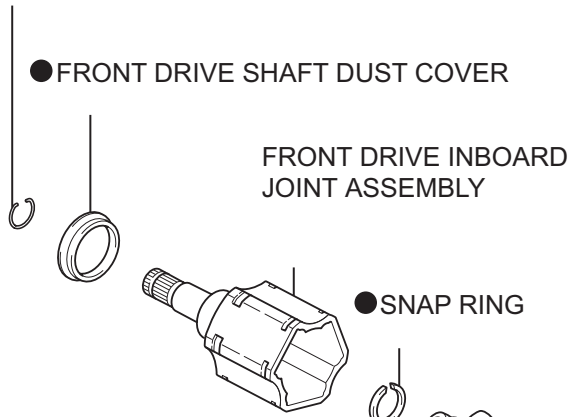

SUPPLY PARTS:



● FRONT AXLE OUTBOARD
JOINT BOOT CLAMP

● FRONT AXLE OUTBOARD
JOINT BOOT CLAMP

● INBOARD JOINT BOOT

● FRONT AXLE INBOARD
JOINT BOOT CLAMP

● OUTBOARD JOINT BOOT

FRONT DRIVE OUTBOARD JOINT ASSEMBLY

● STEERING KNUCKLE LH OIL SEAL

● Non-reusable part