
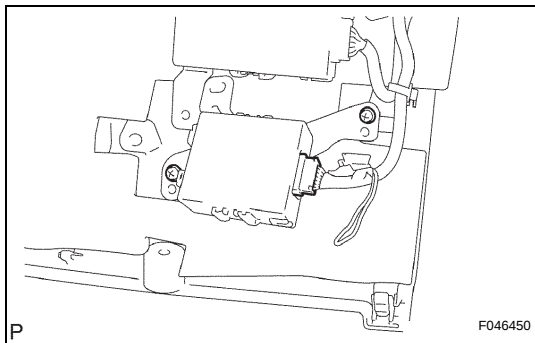


REMOVAL

1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
(a) Disconnect the negative terminal.
2. **REMOVE FRONT DOOR SCUFF PLATE RH** (See page [IR-9](#))
3. **REMOVE COWL SIDE TRIM BOARD RH** (See page [IP-9](#))
4. **REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO. 2** (See page [IP-9](#))
5. **REMOVE TIRE PRESSURE WARNING ECU**
(a) Disconnect the connector.
(b) Remove the 2 screws and tire pressure warning ECU.

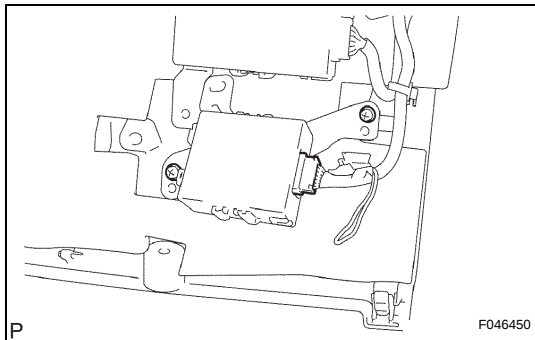

INSTALLATION

1. **INSTALL TIRE PRESSURE WARNING ECU**
(a) Install the tire pressure warning ECU with the 2 screws.
(b) Connect the connector.
2. **INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO. 2**
3. **INSTALL COWL SIDE TRIM BOARD RH**
4. **INSTALL FRONT DOOR SCUFF PLATE RH**
5. **CONNECT BATTERY NEGATIVE TERMINAL**
6. **REGISTRATION OF TRANSMITTER ID**
HINT:
(See page [TW-13](#))
7. **PERFORM INITIALIZATION**