



TIRE PRESSURE WARNING RECEIVER (w/ Antenna)

COMPONENTS


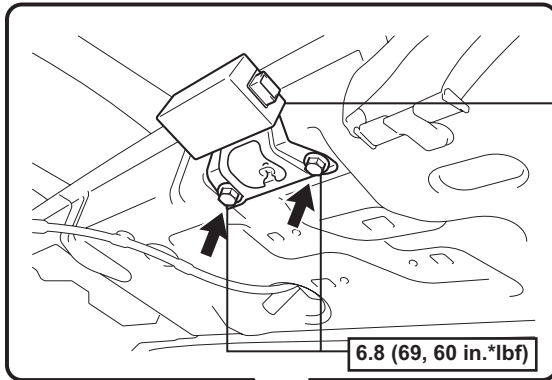


TIRE PRESSURE WARNING
ANTENNA AND RECEIVER

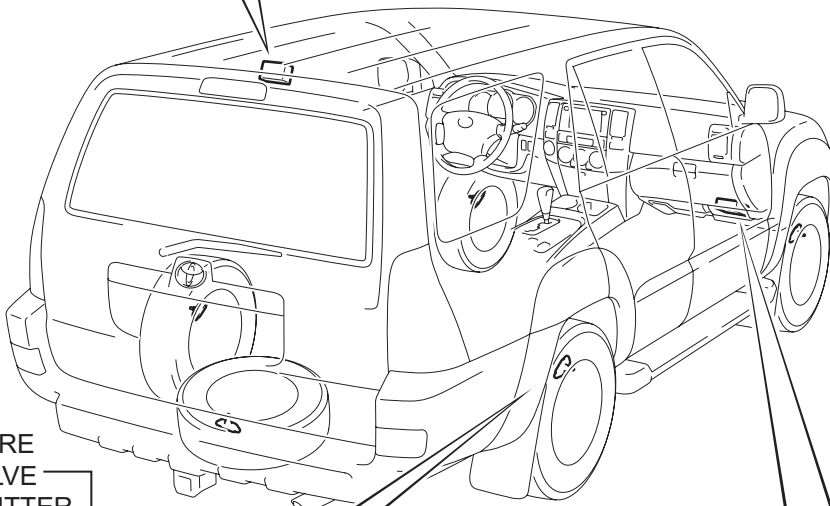


TIRE PRESSURE
WARNING VALVE
AND TRANSMITTER

TIRE PRESSURE
WARNING ECU

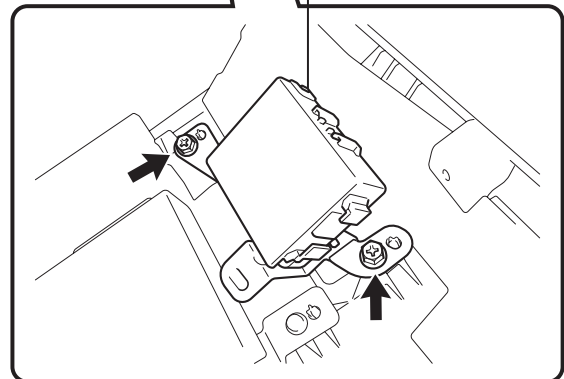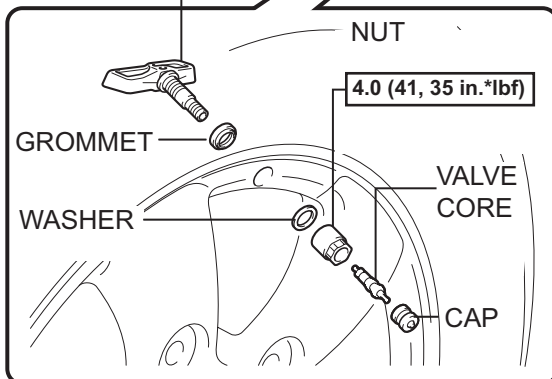

N*m (kgf*cm, ft.*lbf) : Specified torque

LH

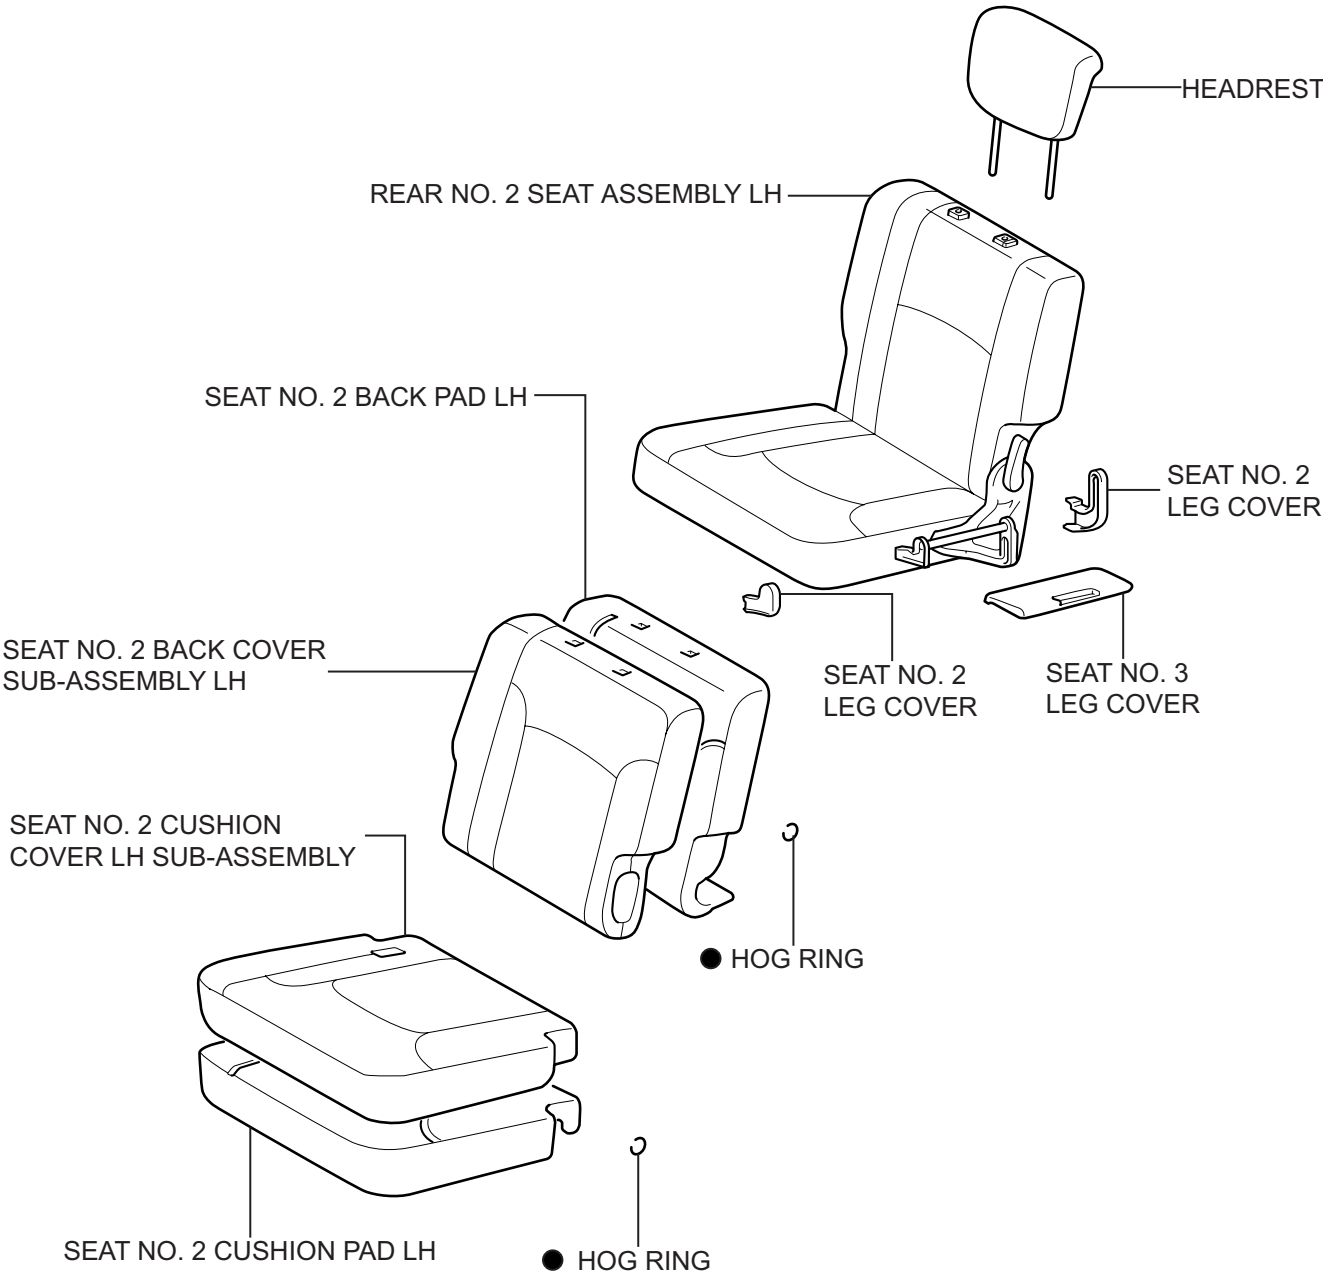


● Non-reusable part


TW

RH


TW

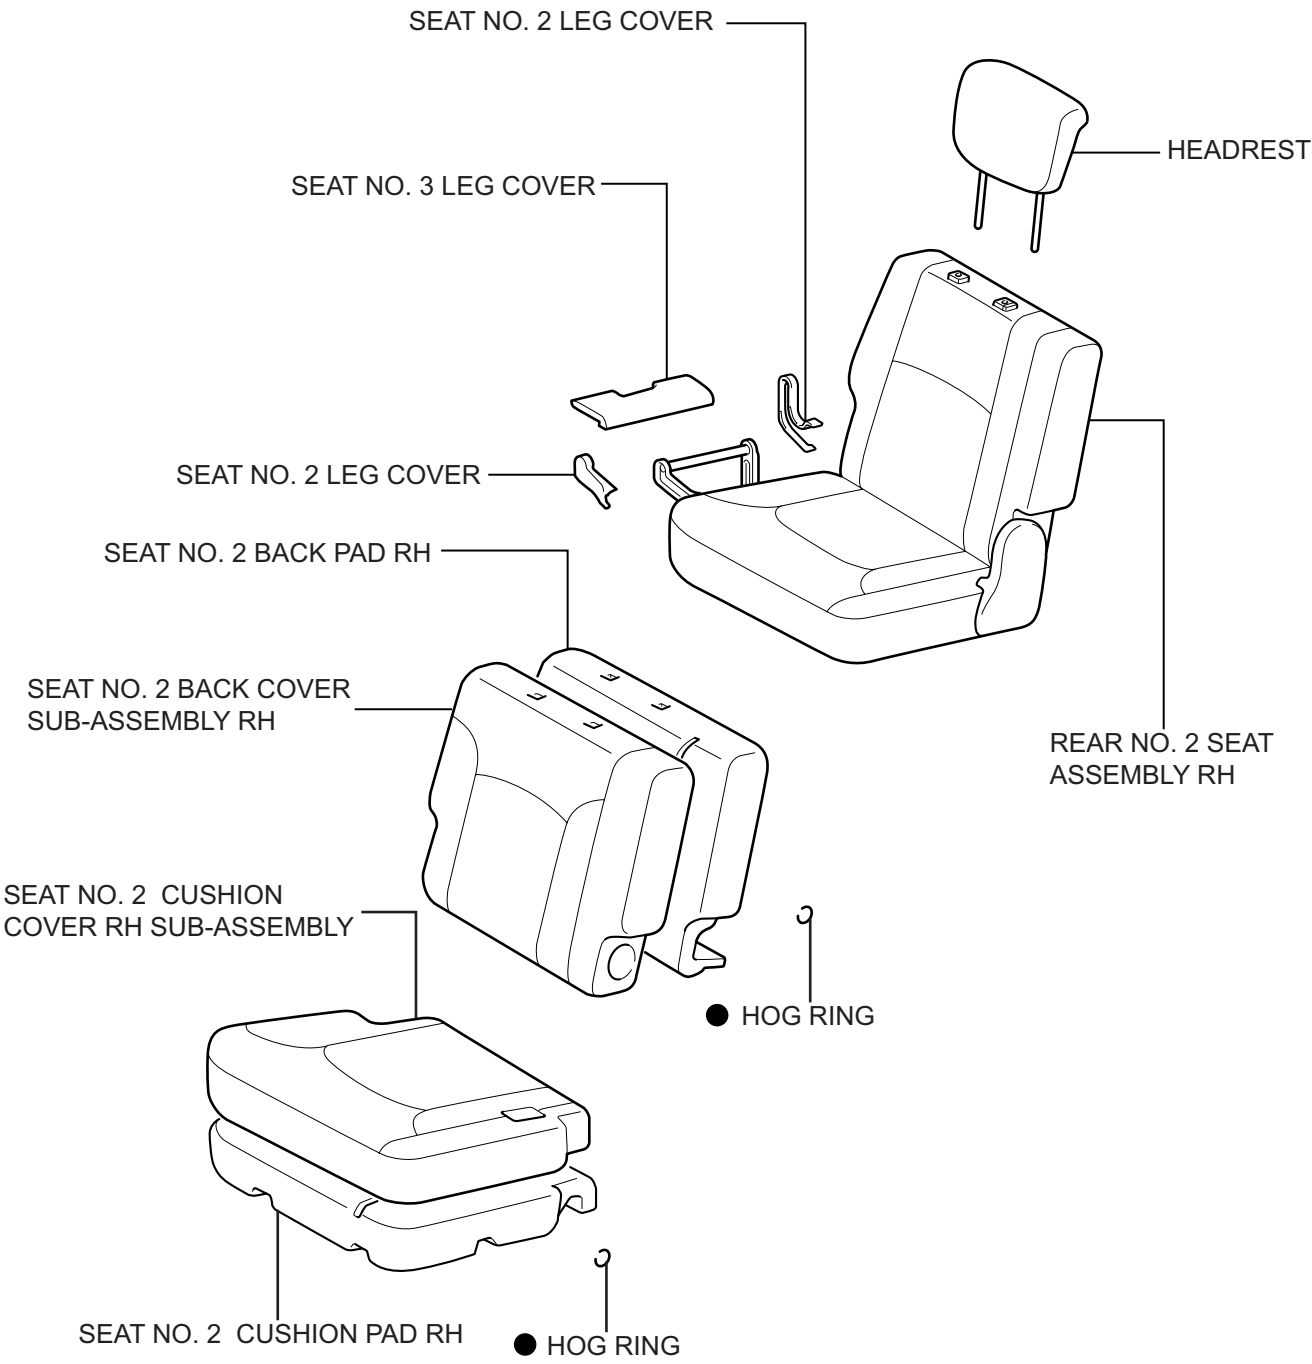

● Non-reusable part

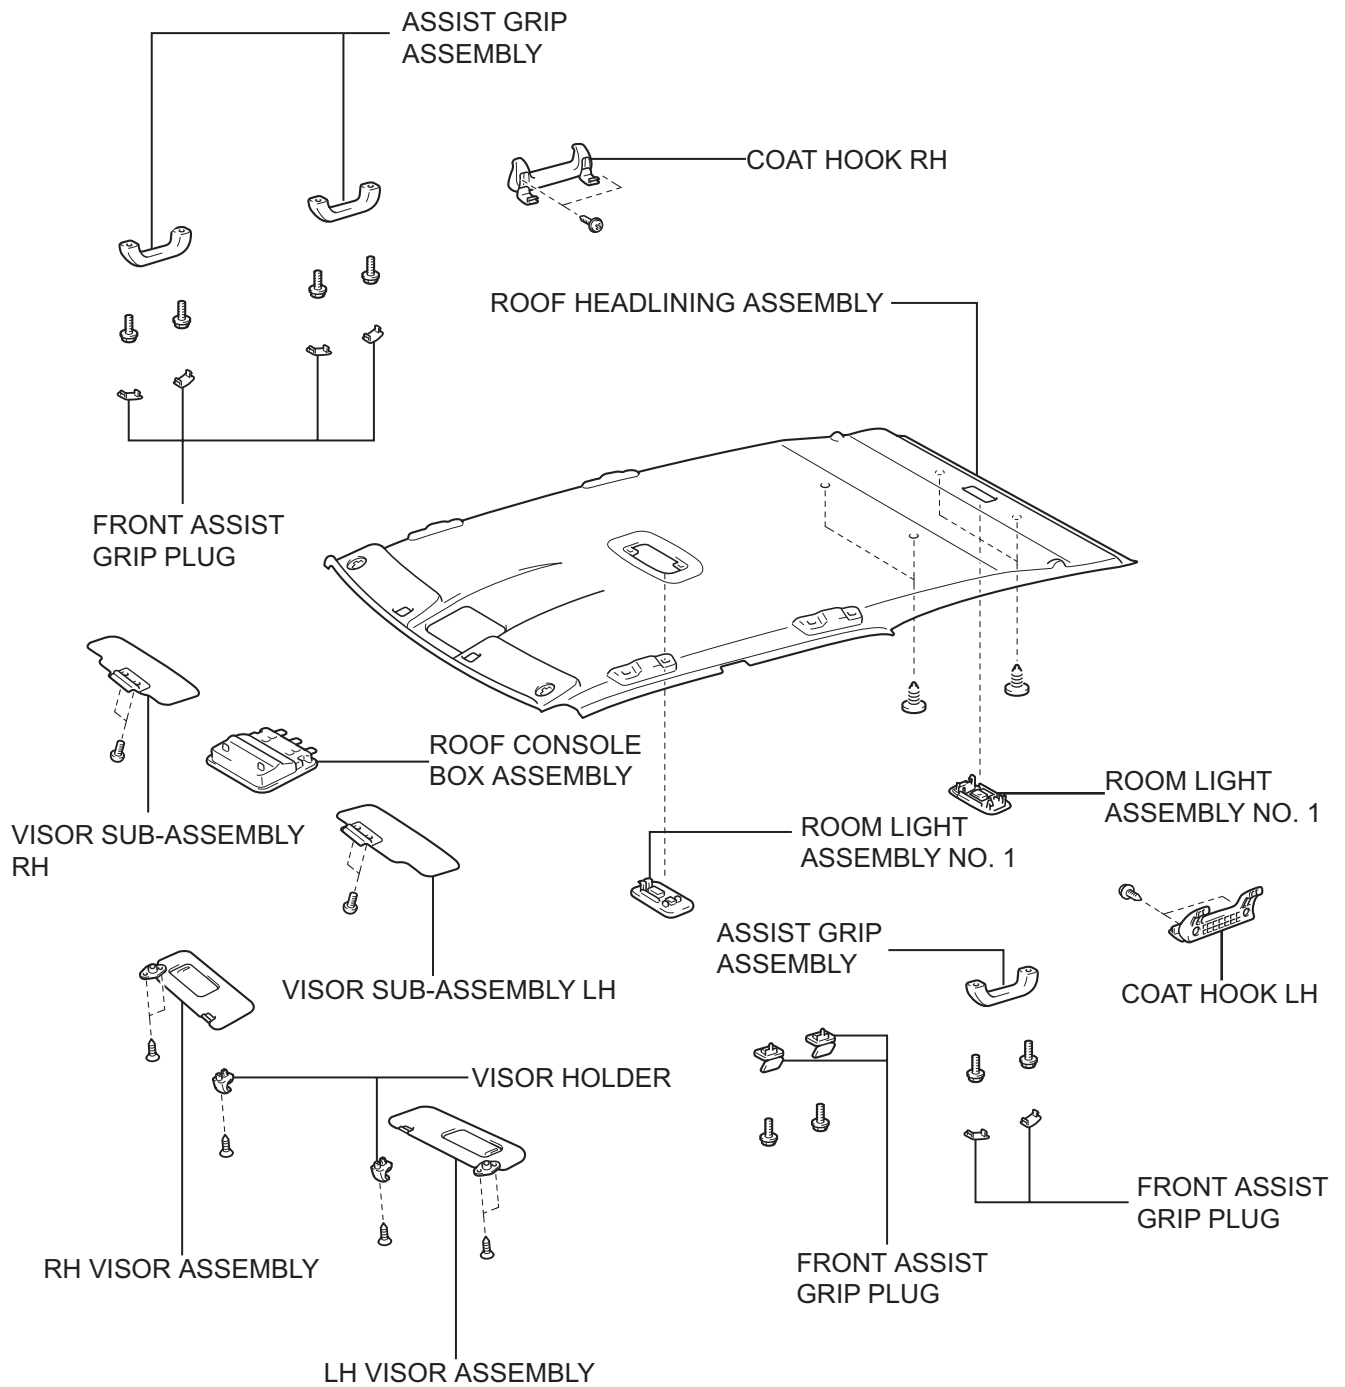

W/ SLIDING ROOF

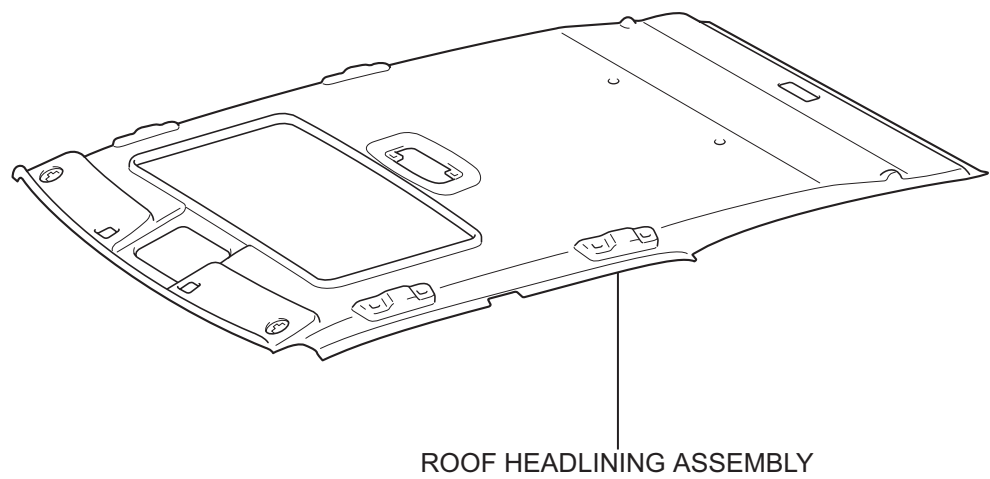

TW

W/ RSE

