


DTC CHECK / CLEAR

1. CHECK DTC (USING INTELLIGENT TESTER)

- (a) Turn the ignition switch OFF.
- (b) Connect the intelligent tester to the DLC3.
- (c) Turn the ignition switch ON and the tester ON.
- (d) Read the DTCs following the prompts on the tester screen.

HINT:



Refer to the intelligent tester operator's manual for further details.

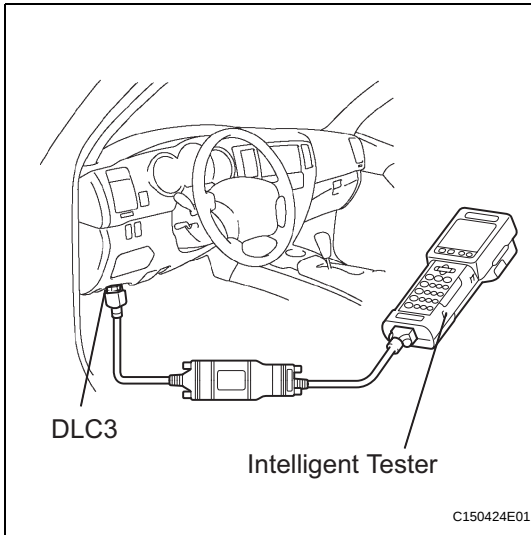

2. CHECK DTC (USING SST CHECK WIRE)


- (a) Turn the ignition switch OFF.
- (1) Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST 09843-18040

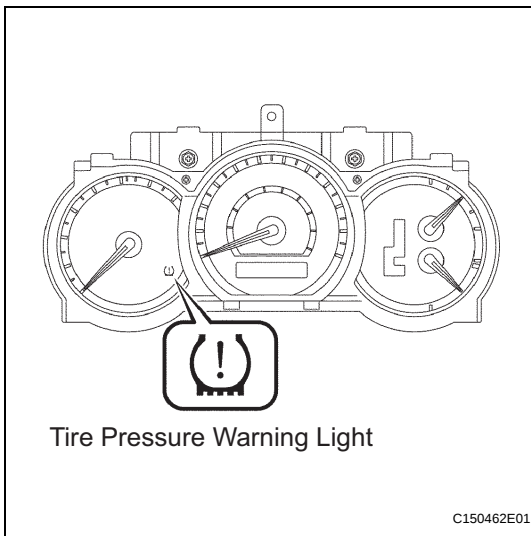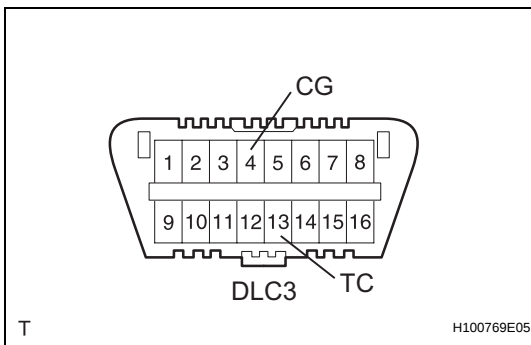

TW

- (2) Turn the ignition switch ON.

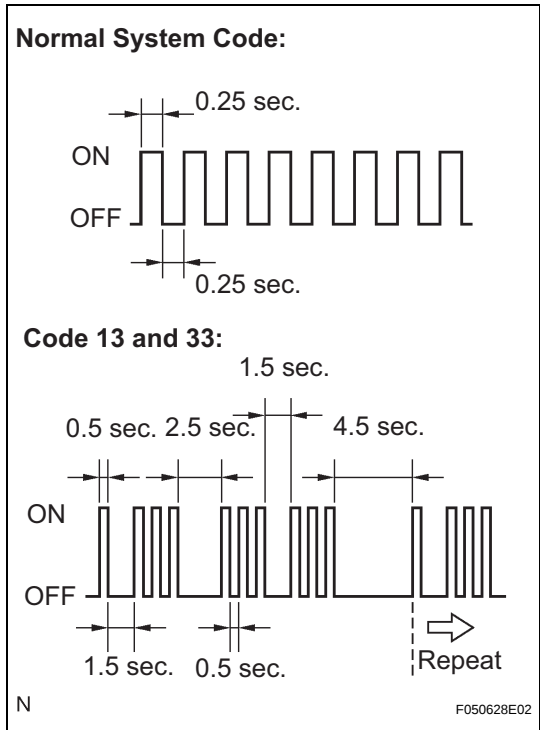

- (3) Read and record any DTCs from the tire pressure warning light on the combination meter. Refer to the illustration for examples of a normal system code and codes 13 and 33.
- HINT:
- If the tire pressure warning light does not indicate any DTCs or the normal system code, inspect the tire pressure warning light circuit or TC and CG terminal circuit.

Trouble Area	See procedure
Tire pressure warning light circuit	TW-58
TC and CG terminal circuit	TW-64

- If 2 or more malfunctions are indicated at the same time, the lowest numbered DTC is displayed first.
- (4) Refer to the Diagnostic Trouble Code Chart (see page [TW-27](#)) for DTC information.
- (5) After completing the check, turn the ignition switch OFF and remove SST from the DLC3.
- SST 09843-18040**

3. CLEAR DTC

HINT:

After repairing the malfunctions, clear the DTCs.

- Turn the ignition switch OFF.
- Connect the intelligent tester to the DLC3.
- Turn the ignition switch ON and the tester ON.
- Clear the DTCs following the prompts on the tester screen.

HINT:

Refer to the intelligent tester operator's manual for further details.

