

REASSEMBLY

1. INSTALL BLOWER WITH FAN MOTOR SUB-ASSEMBLY
2. INSTALL BLOWER MOTOR CONTROL
3. INSTALL BLOWER DAMPER SERVO MOTOR SUB-ASSEMBLY
4. INSTALL AIR FILTER COVER PLATE
5. INSTALL CLEAN AIR FILTER
6. INSTALL CLEAN AIR FILTER SUB-ASSEMBLY

INSTALLATION



1. **INSTALL BLOWER ASSEMBLY**
 - (a) Install the blower assembly with the claw fitting.
 - (b) Install the bolt, 2 screws and nut.

Torque: Bolt

9.8 N*m (100 kgf*cm, 87 in.*lbf)

Nut

5.4 N*m (55 kgf*cm, 48 in.*lbf)

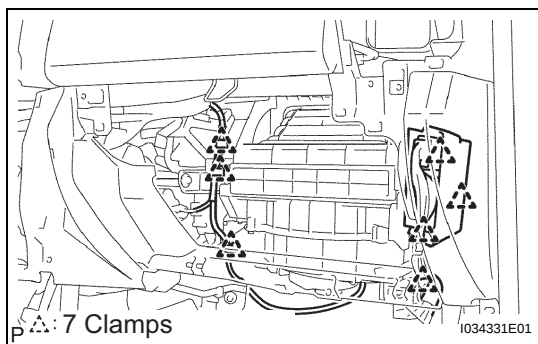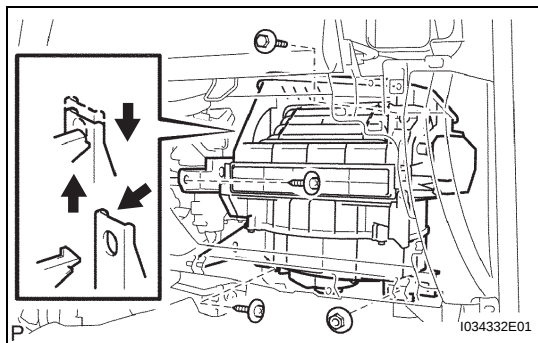

(c) Install the 7 clamps and connect the connectors.

2. **INSTALL AIR DUCT NO. 2**
3. **INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY NO. 2**
4. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER NO. 2**
5. **INSTALL GLOVE COMPARTMENT DOOR SUB-ASSEMBLY**
6. **INSTALL GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY**
7. **INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO. 2**
8. **INSTALL COWL SIDE TRIM BOARD RH**
9. **INSTALL CONSOLE BOX ASSEMBLY REAR**
10. **INSTALL CONSOLE UPPER PANEL GARNISH NO. 2**
11. **INSTALL CONSOLE UPPER PANEL GARNISH NO. 1**
12. **INSTALL CONSOLE PANEL SUB-ASSEMBLY UPPER**
13. **INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY**