

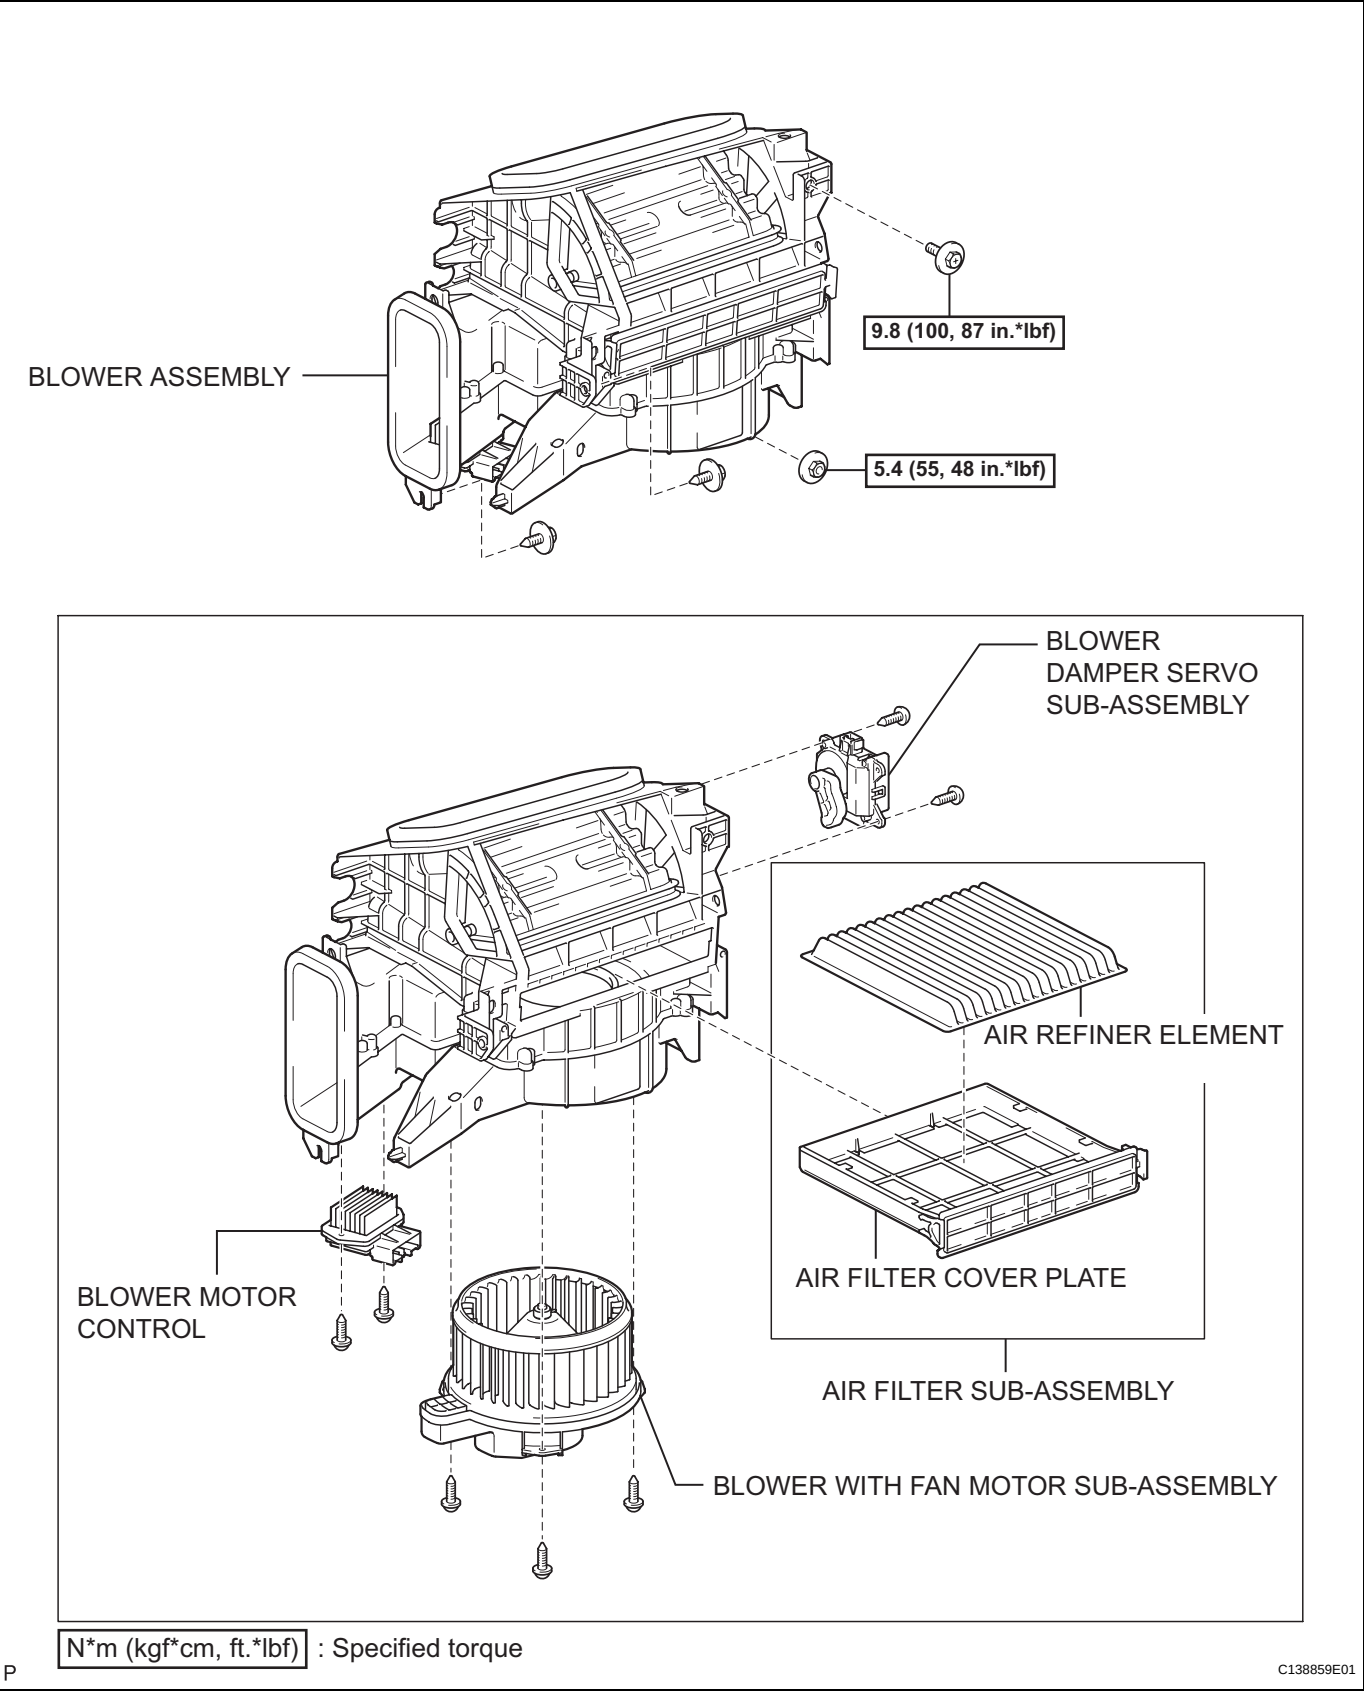


**BLOWER UNIT**  
**COMPONENTS**

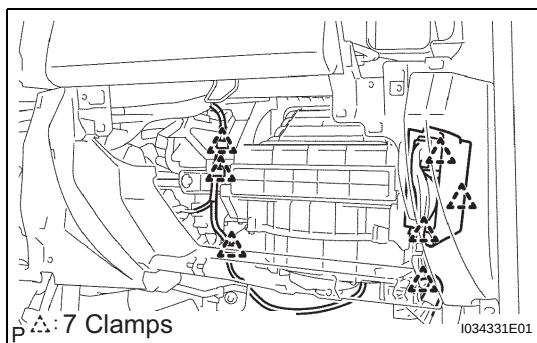


## REMOVAL

1. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-7](#))
2. REMOVE CONSOLE PANEL SUB-ASSEMBLY UPPER (See page [IP-7](#))
3. REMOVE CONSOLE UPPER PANEL GARNISH NO. 1 (See page [IP-7](#))
4. REMOVE CONSOLE UPPER PANEL GARNISH NO. 2
5. REMOVE CONSOLE BOX ASSEMBLY REAR (See page [IP-9](#))
6. REMOVE COWL SIDE TRIM BOARD RH (See page [IP-9](#))
7. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO. 2 (See page [IP-9](#))
8. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY
9. REMOVE GLOVE COMPARTMENT DOOR SUB-ASSEMBLY (See page [IP-9](#))
10. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO. 2 (See page [IP-9](#))
11. REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY NO. 2 (See page [IP-10](#))
12. REMOVE AIR DUCT NO. 2
  - (a) Remove the 4 bolts and disconnect the Instrument panel safety pad sub-assembly.
  - (b) Remove the 3 claw fittings and remove the air duct No. 2.

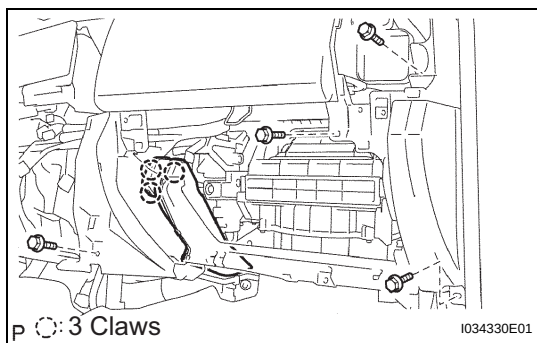

13. REMOVE BLOWER ASSEMBLY
  - (a) Release the 7 clamps and disconnect the connectors.

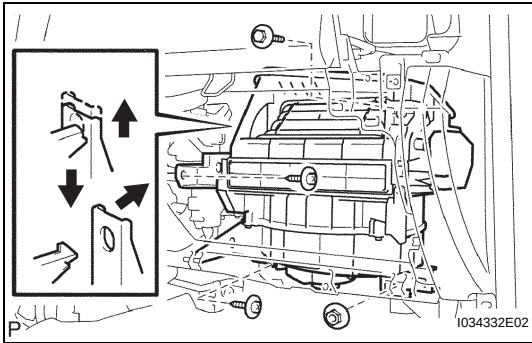


- (b) Remove the bolt and 2 screws and nut.
- (c) Release the claw fitting and remove the blower assembly.

## DISASSEMBLY


### 1. REMOVE CLEAN AIR FILTER SUB-ASSEMBLY

- (a) Release the 2 claw fittings and remove the air filter sub-assembly.

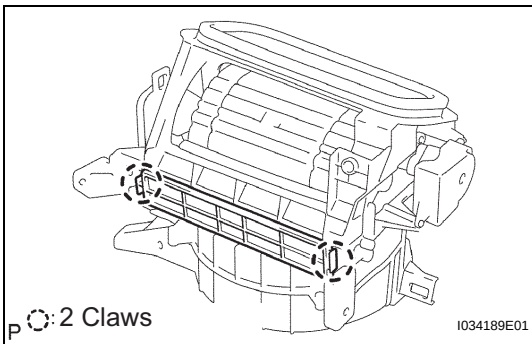

### 2. REMOVE CLEAN AIR FILTER


- (a) Remove the air refiner element from the air filter cover plate.

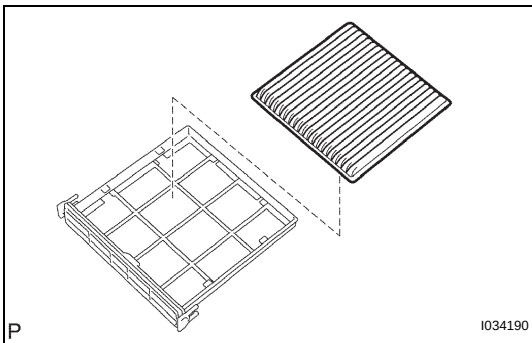

### 3. REMOVE AIR FILTER COVER PLATE


### 4. REMOVE BLOWER DAMPER SERVO SUB-ASSEMBLY


- (a) Remove the 3 screws and blower damper servo sub-assembly.

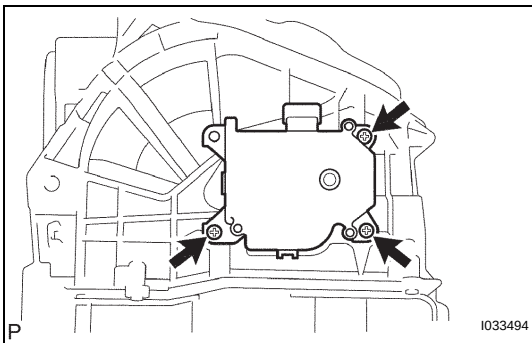

### 5. REMOVE BLOWER MOTOR CONTROL

- (a) Remove the 2 screws and blower motor control.

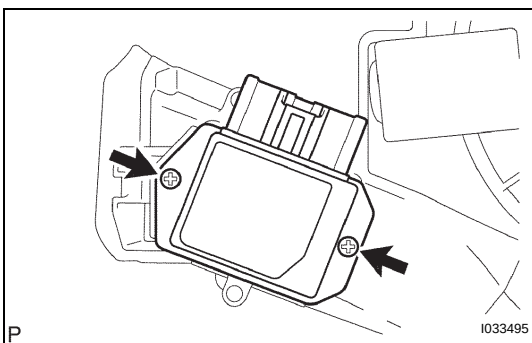

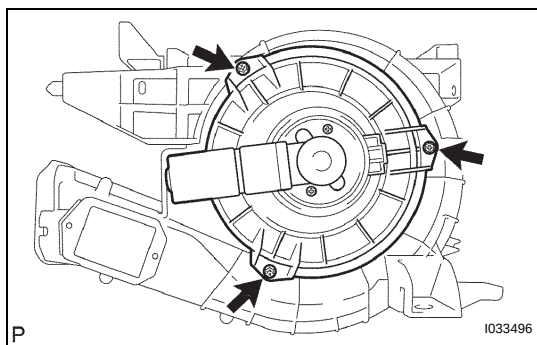**6. REMOVE BLOWER WITH FAN MOTOR SUB-ASSEMBLY**

- (a) Remove the 3 screws and blower with fan motor sub-assembly.