


INSTALLATION

1. INSTALL REAR WIPER MOTOR ASSEMBLY

- (a) Install the rear wiper motor assembly with 3 bolts.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
- (b) Install the clamp and connect the connector.


2. INSTALL REAR WIPER MOTOR GROMMET


- (a) As shown in the illustration, install the rear wiper motor grommet with its position mark upside.

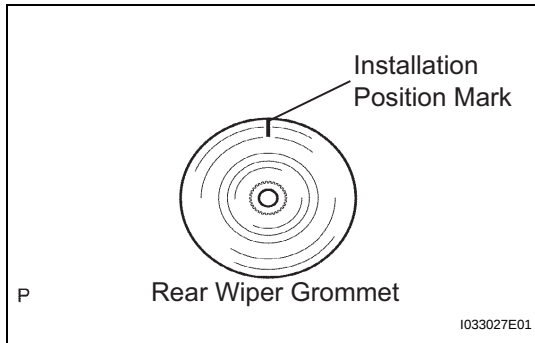

3. INSTALL REAR WIPER ARM

- (a) Scrape off the serration part of the wiper arm with a round file or equivalent.
- (b) Clean the rear wiper pivot serration with the wire brush.
- (c) Stop the rear wiper motor assembly at the automatic stop position.

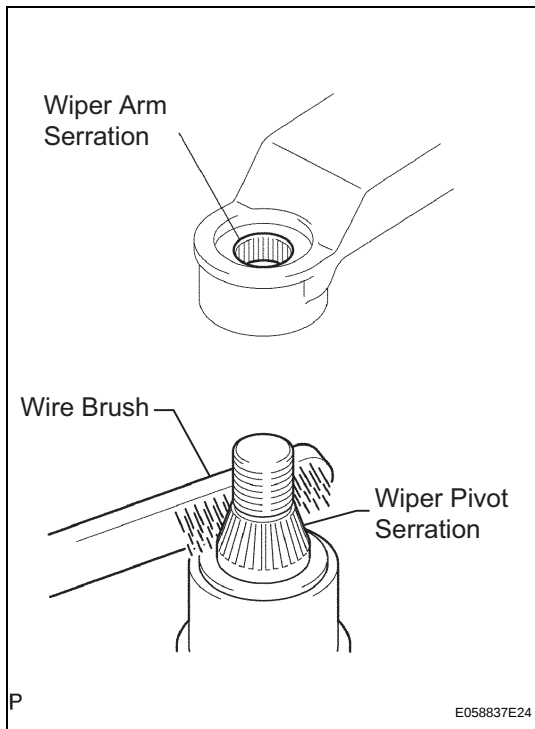

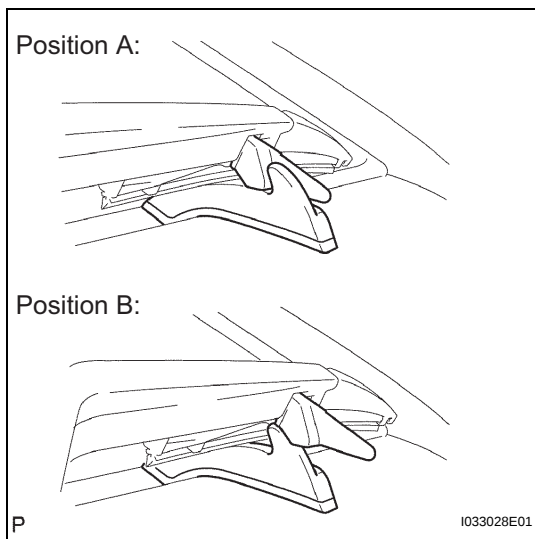

- (d) Hold the slider to the position "A" and install the arm & blade assembly with the nut temporarily.
- (e) Move the slider to the position "B" and tighten the nut to install the arm & blade assembly.

Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

HINT:

Hold down the arm hinge with hand to fasten a nut.

- (f) Set the arm & blade assembly by moving it back to the rise-up position.
- (g) Operate the rear wiper while running the water or the washer fluid over the window, and check the wiping condition and that the rear wiper does not hit against the vehicle body.

4. INSTALL BACK DOOR SERVICE HOLE COVER LH
(See page [ED-60](#))