


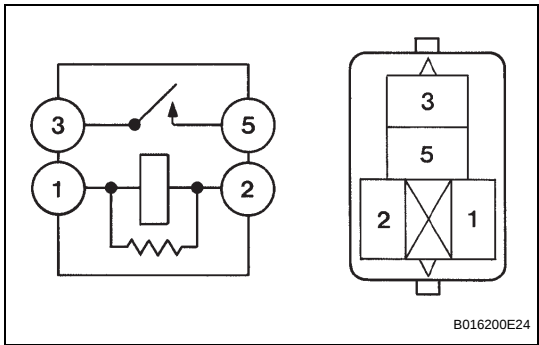

HORN RELAY

INSPECTION

- 1. **INSPECT HORN RELAY ASSEMBLY**
 - (a) Remove the horn relay from the instrument panel junction block assembly.
 - (b) Inspect the horn relay continuity.

Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Always	Below 1 Ω
3 - 5	Apply B+ between terminals 1 and 2	

If the result is not as specified, replace the relay assembly.

HO