


HIGH PITCHED HORN

COMPONENTS

HO

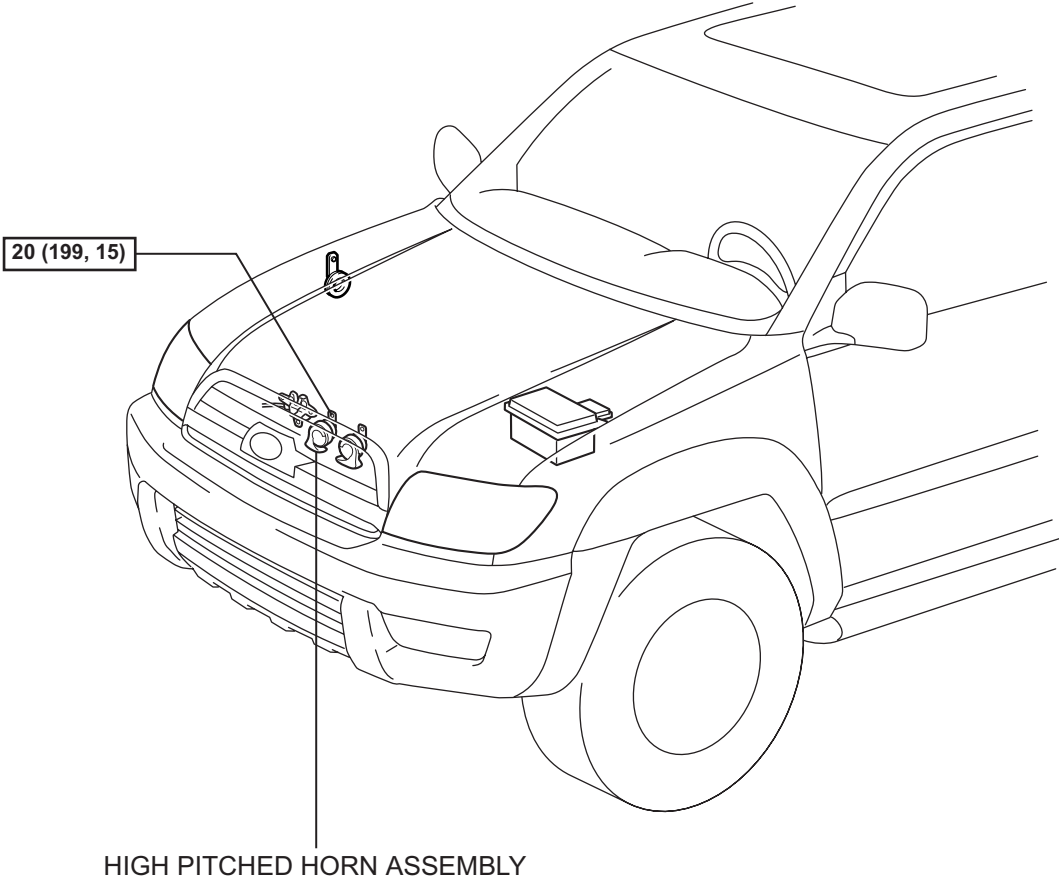


N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. REMOVE HIGH PITCHED HORN ASSEMBLY


- (a) Disconnect the connector.
- (b) Remove the bolt and horn assembly.

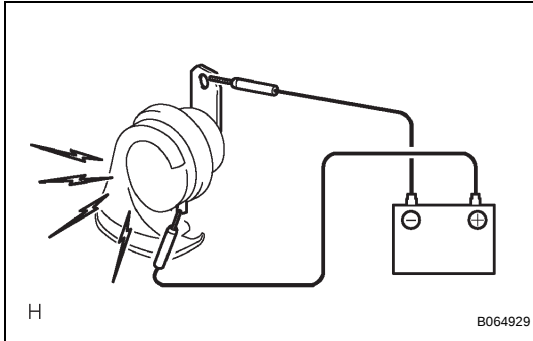

INSPECTION

1. INSPECT HIGH PITCHED HORN ASSEMBLY

- (a) Connect the positive (+) lead from the battery to the terminal and the negative (-) lead to the horn body, and check that the horn blows. If the result is not as specified, replace the horn assembly.

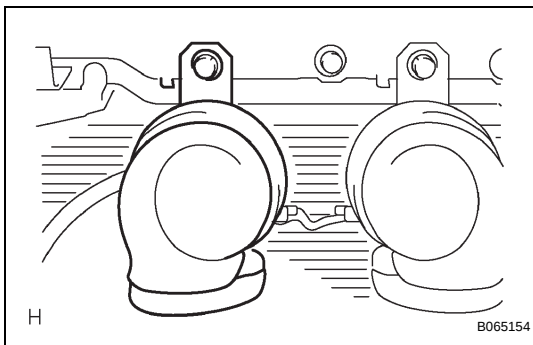

INSTALLATION

1. INSTALL HIGH PITCHED HORN ASSEMBLY

- (a) Place the stay onto the baffle part in the radiator support upper, and then install the horn assembly with the bolt.
Torque: 20 N*m (199 kgf*cm, 15 ft.*lbf)
- (b) Connect the connector.