





Navigation System and Audio System

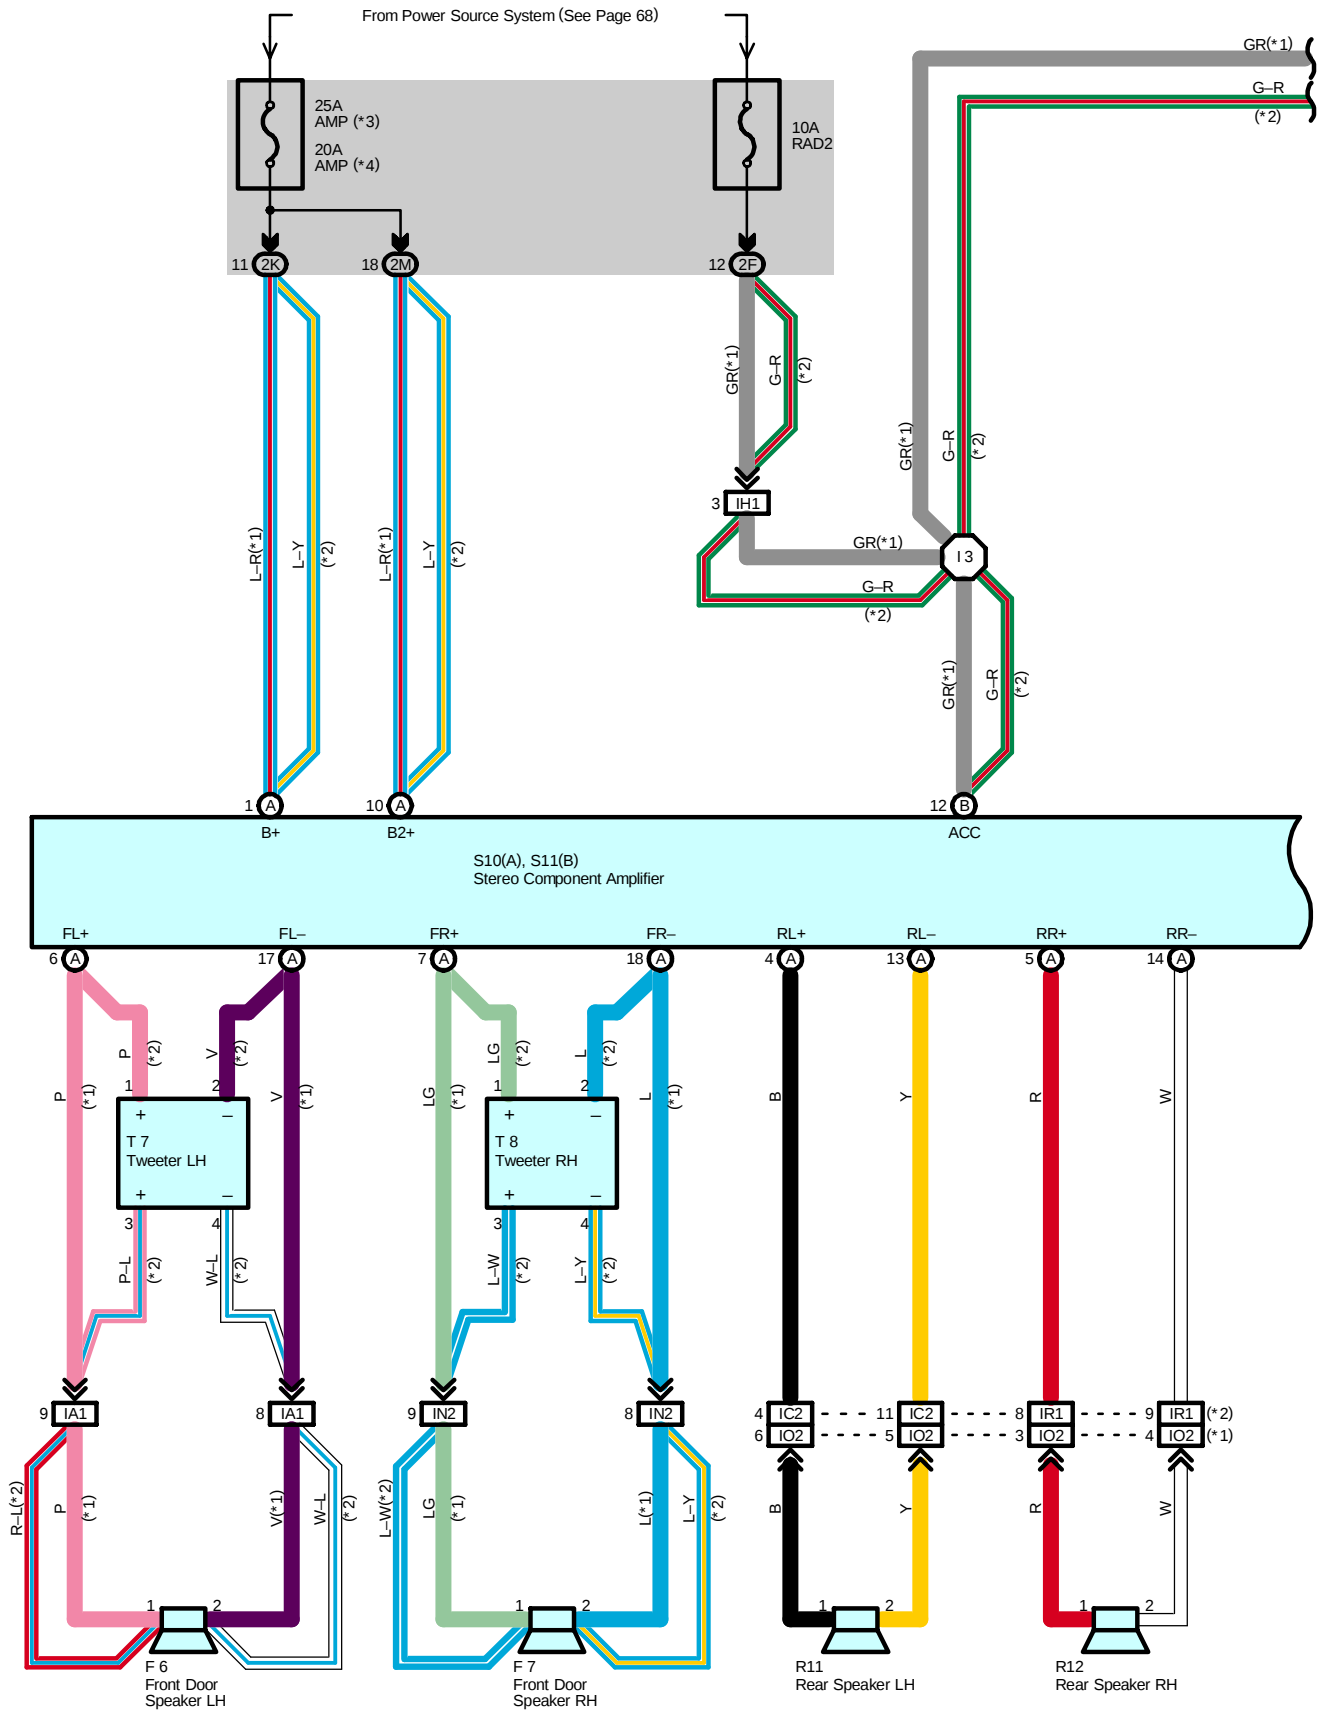

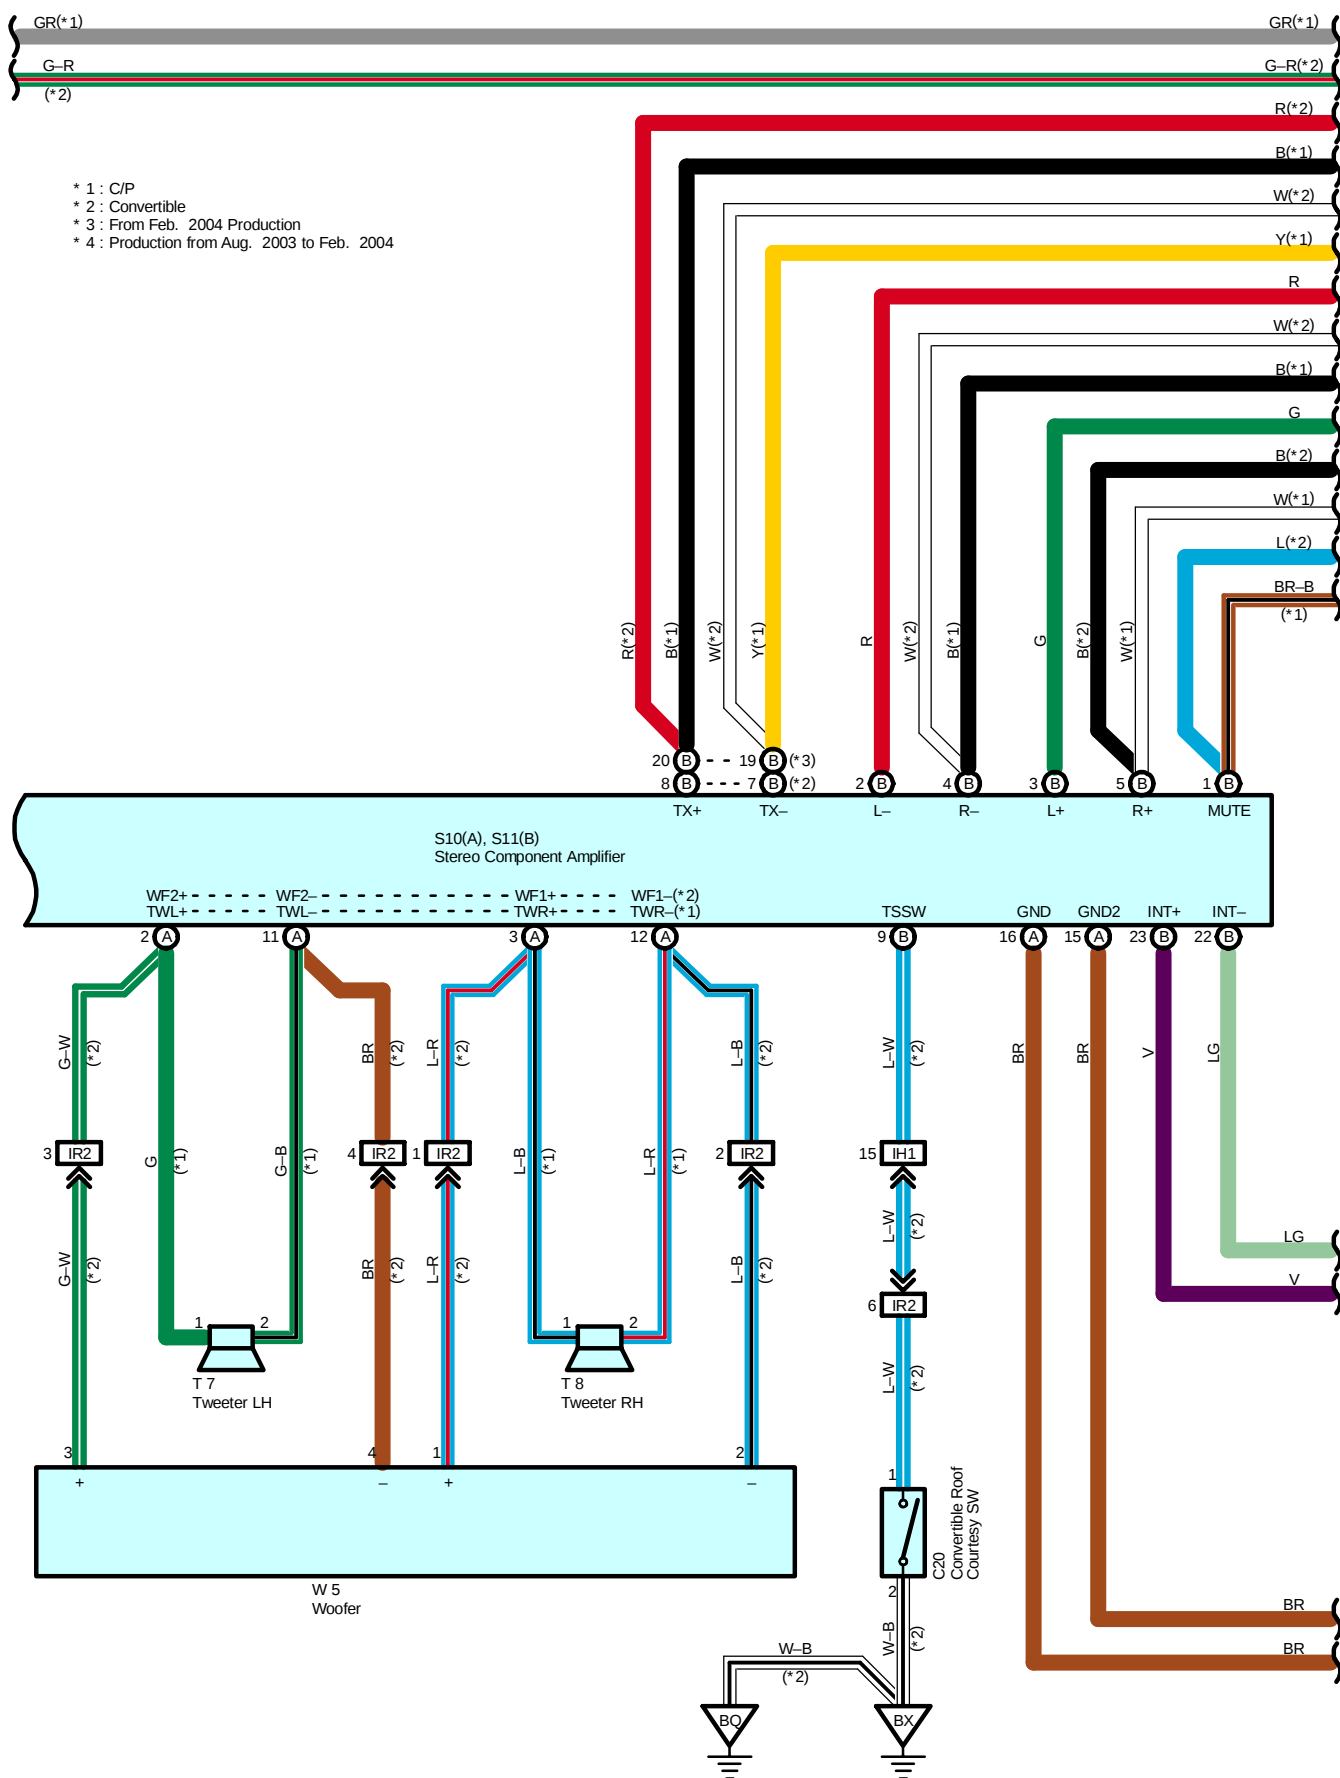

Navigation System and Audio System

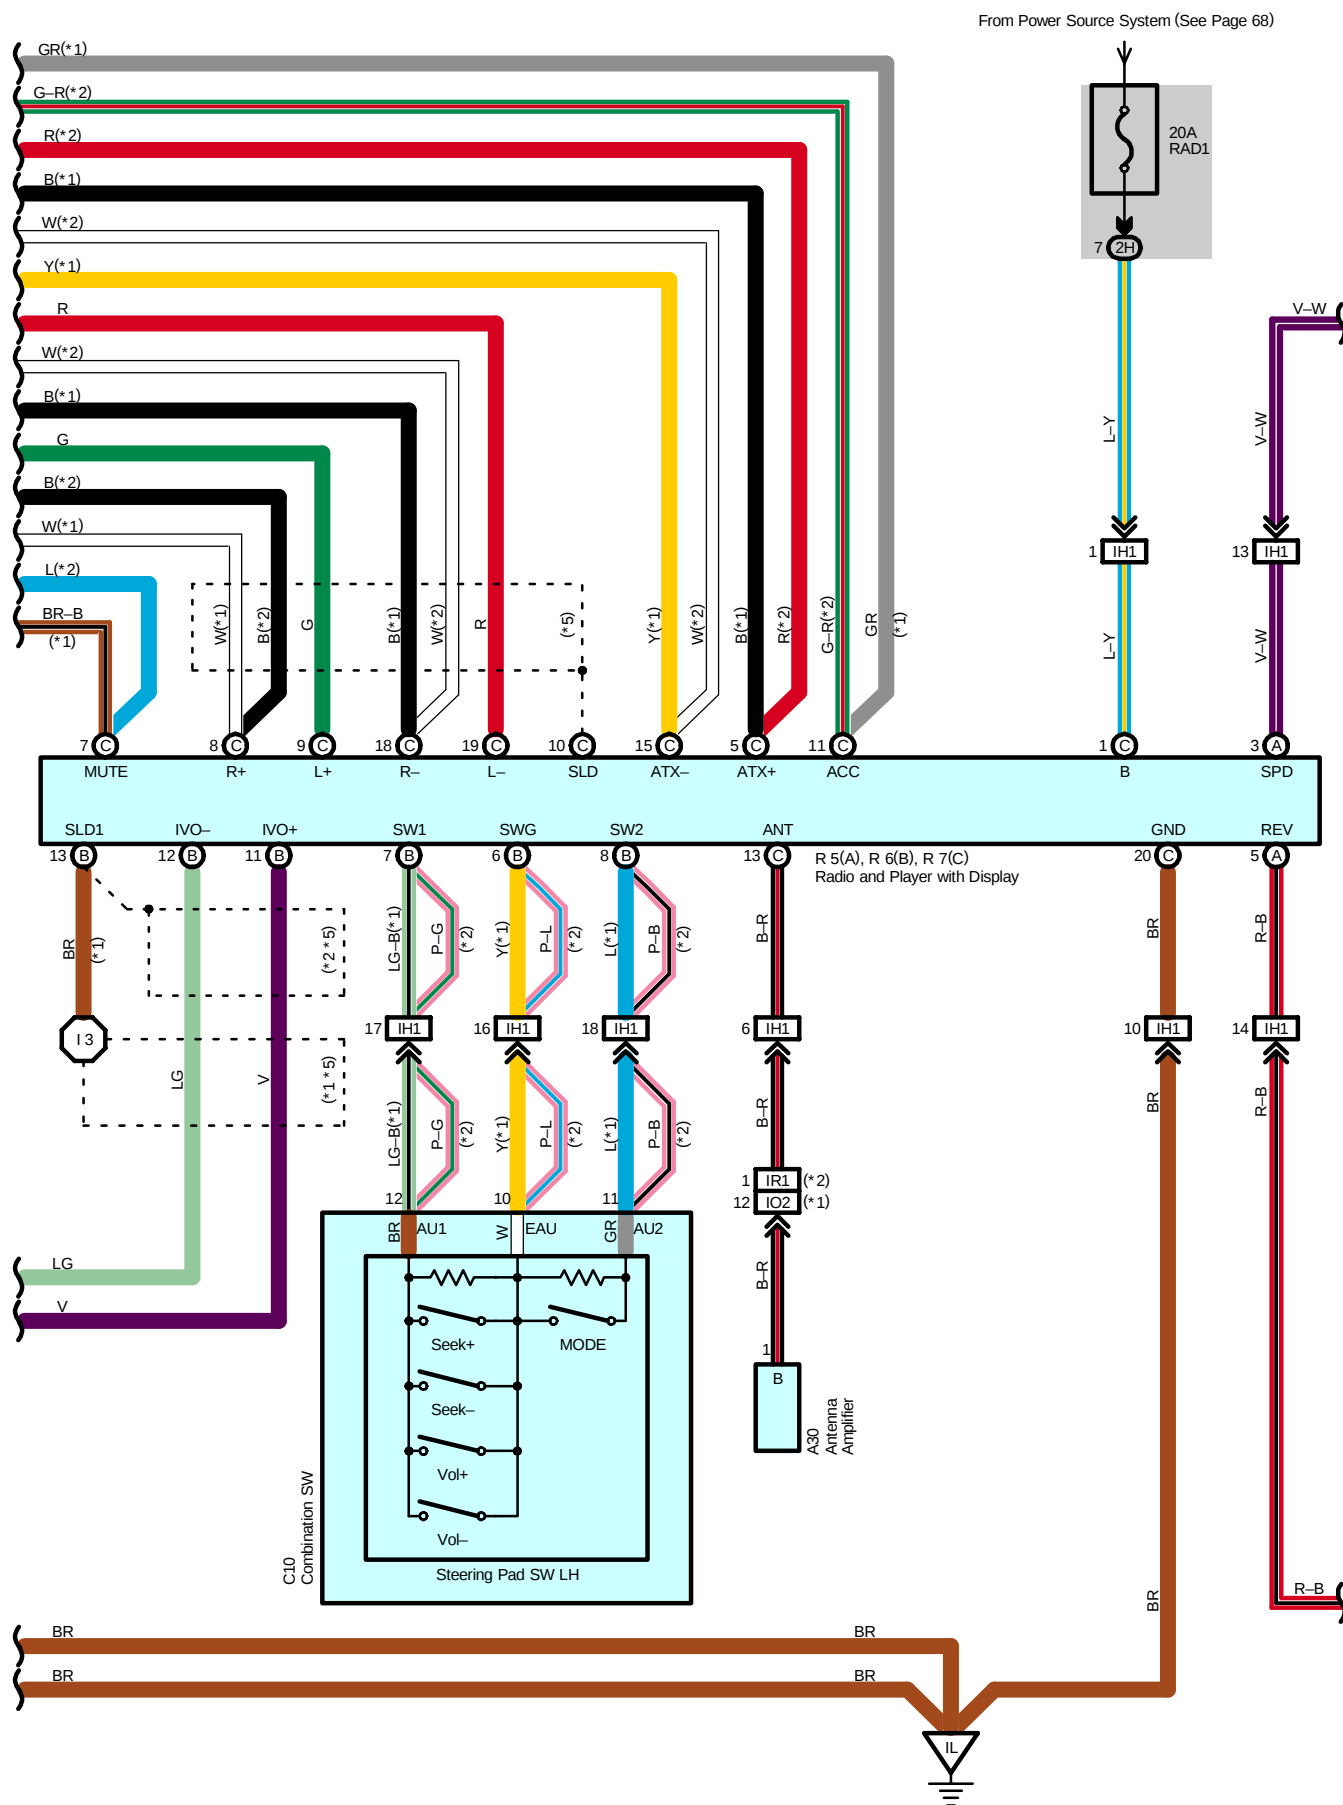

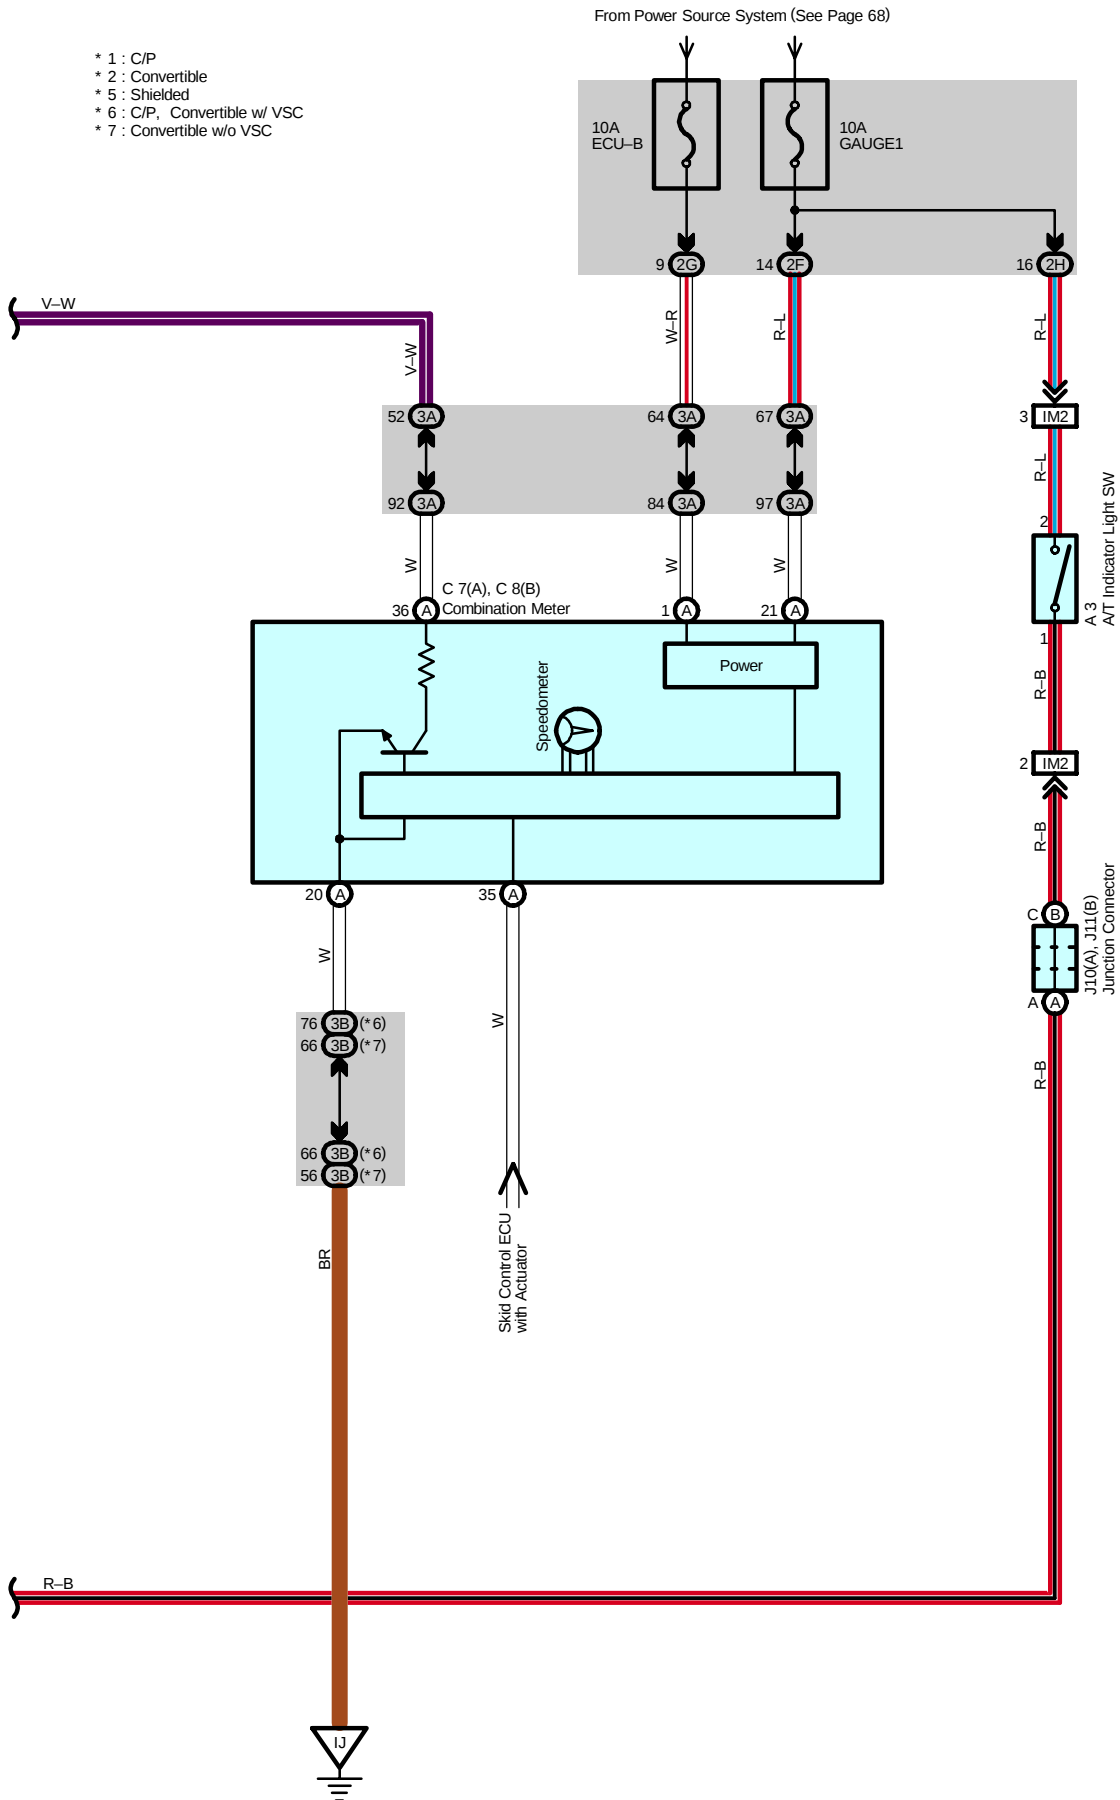

Navigation System and Audio System

System Outline

The navigation system displays the operating status and instructions for the radio and player. Additionally, the navigation system precisely measures the current vehicle position, displays the map obtained from the map database on the screen, and informs the route to the destination shown on the map using voice guidance.

Service Hints

R7 (C) Radio and Player with Display

(C)11–Ground : Approx. 12 volts with ignition SW at ON or ACC position

(C) 1–Ground : Always approx. 12 volts

(C)20–Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page		
A3		38 (3MZ–FE)		F7		46 (C/P)		R11		49 (Convertible)		
		40 (2AZ–FE)				48 (Convertible)		R12		47 (C/P)		
A30		46 (C/P)		J10	A	43 (C/P)				S10		A
		48 (Convertible)				45 (Convertible)		43 (C/P)				
C7	A	42 (C/P)		J11	B	43 (C/P)		S11	B	45 (Convertible)		
		44 (Convertible)				45 (Convertible)				43 (C/P)		
C8	B	42 (C/P)		R5	A	43 (C/P)		T7		45 (Convertible)		
		44 (Convertible)				45 (Convertible)				43 (C/P)		
C10		42 (C/P)		R6	B	43 (C/P)		T8		45 (Convertible)		
		44 (Convertible)				45 (Convertible)				43 (C/P)		
C20		48 (Convertible)		R7	C	43 (C/P)		W5		45 (Convertible)		
F6		46 (C/P)				45 (Convertible)				49 (Convertible)		
		48 (Convertible)		R11		47 (C/P)						

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	31	
2H		
2K	30	
2M	28	
3A	36 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	37 (*2)	
3B	36 (*1)	
	37 (*2)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56 (C/P)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	60 (Convertible)	
IC2	60 (Convertible)	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IH1	58 (C/P)	Instrument Panel No.2 Wire and Instrument Panel Wire (Behind the Radio and Player)
	62 (Convertible)	
IM2	58 (C/P)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
	62 (Convertible)	
IN2	58 (C/P)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	62 (Convertible)	
IO2	58 (C/P)	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IR1	62 (Convertible)	
IR2		

* 1 : C/P, Convertible w/ VSC

* 2 : Convertible w/o VSC

**: Ground Points**

Code	See Page	Ground Points Location
IJ	56 (C/P)	Instrument Panel Brace LH
	60 (Convertible)	
IL	56 (C/P)	Instrument Panel Brace RH
	60 (Convertible)	
BQ	64 (C/P)	Under the Front Passenger's Seat
	65 (Convertible)	
BX	65 (Convertible)	Under the Right Center Pillar

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	58 (C/P)	Instrument Panel No.2 Wire	I3	62 (Convertible)	Instrument Panel No.2 Wire