


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 58)

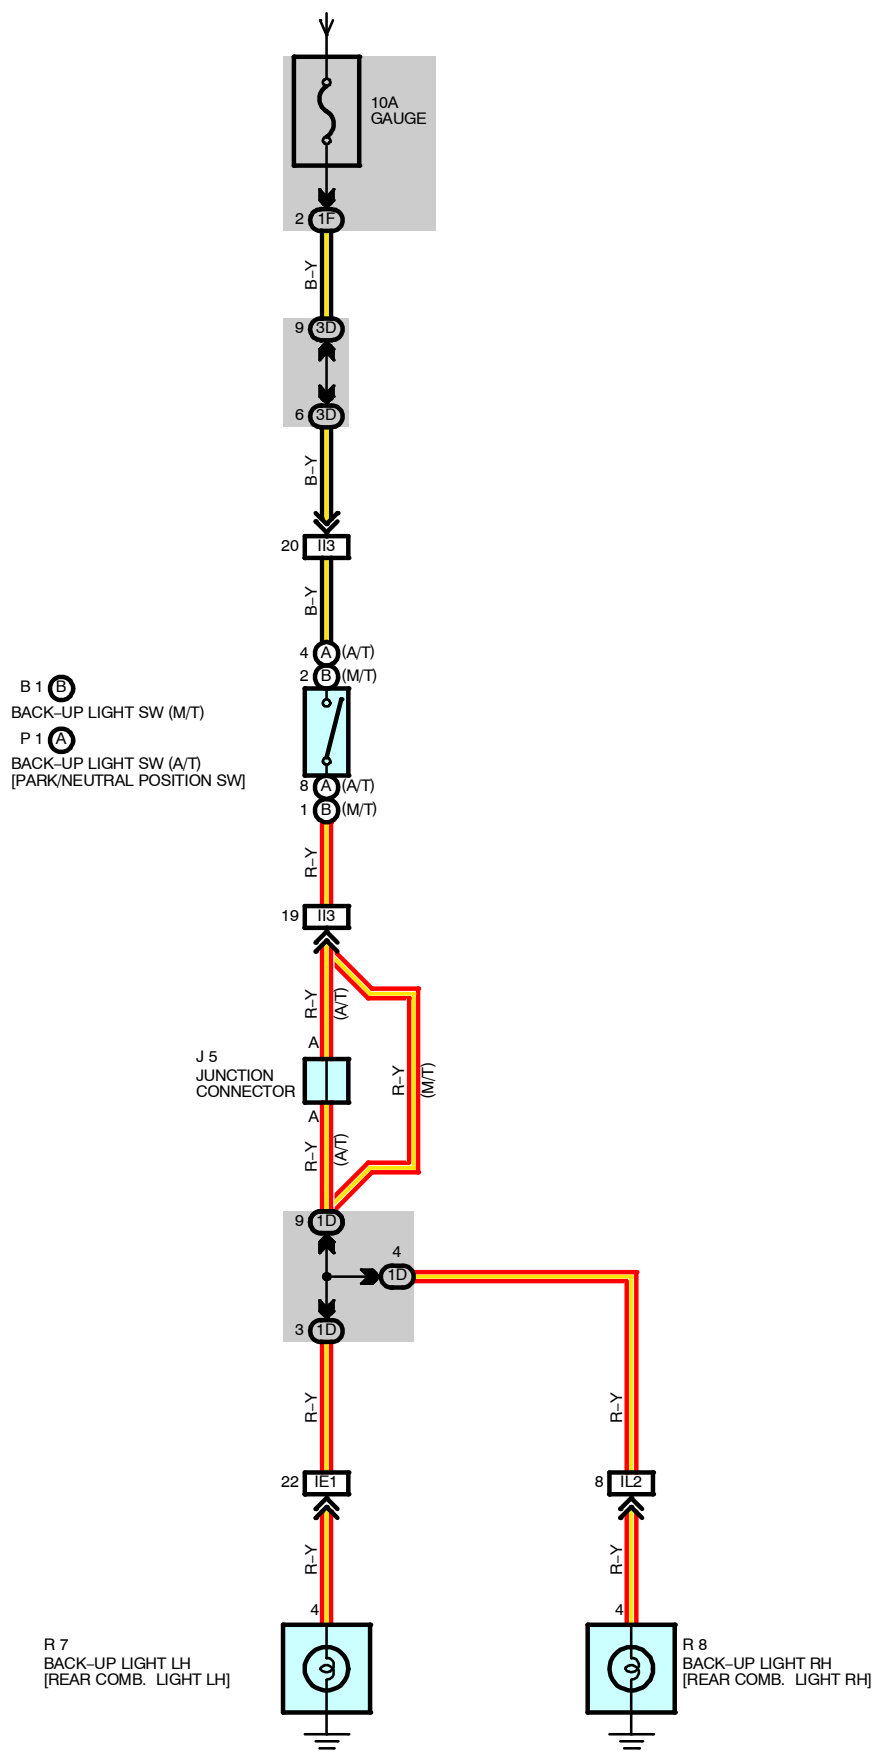

SERVICE HINTS

P1 (A) BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW] (A/T)

B1 (B) BACK-UP LIGHT SW (M/T)

(A) 4-(A) 8, (B) 2-(A) 1 : Closed with shift lever in **R** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B1	B	26 (5VZ-FE),28 (3RZ-FE)	P1	A	27 (5VZ-FE),29 (3RZ-FE)
J5		31	R7		33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1F		
3D	24	Cowl Wire and Center J/B (Near the Steering Column Tube)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	40	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
II3	40	Engine Wire and Cowl Wire (On the Glove Box)
IL2	40	Cowl Wire and Floor Wire (Right Kick Panel)

B1 (B) GRAY




 J5 BLACK



(Hint : See Page 7)

P1 (A) GRAY

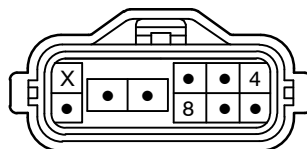

R7, R8

