



Navigation System, Radio and Player (w/ Navigation System),

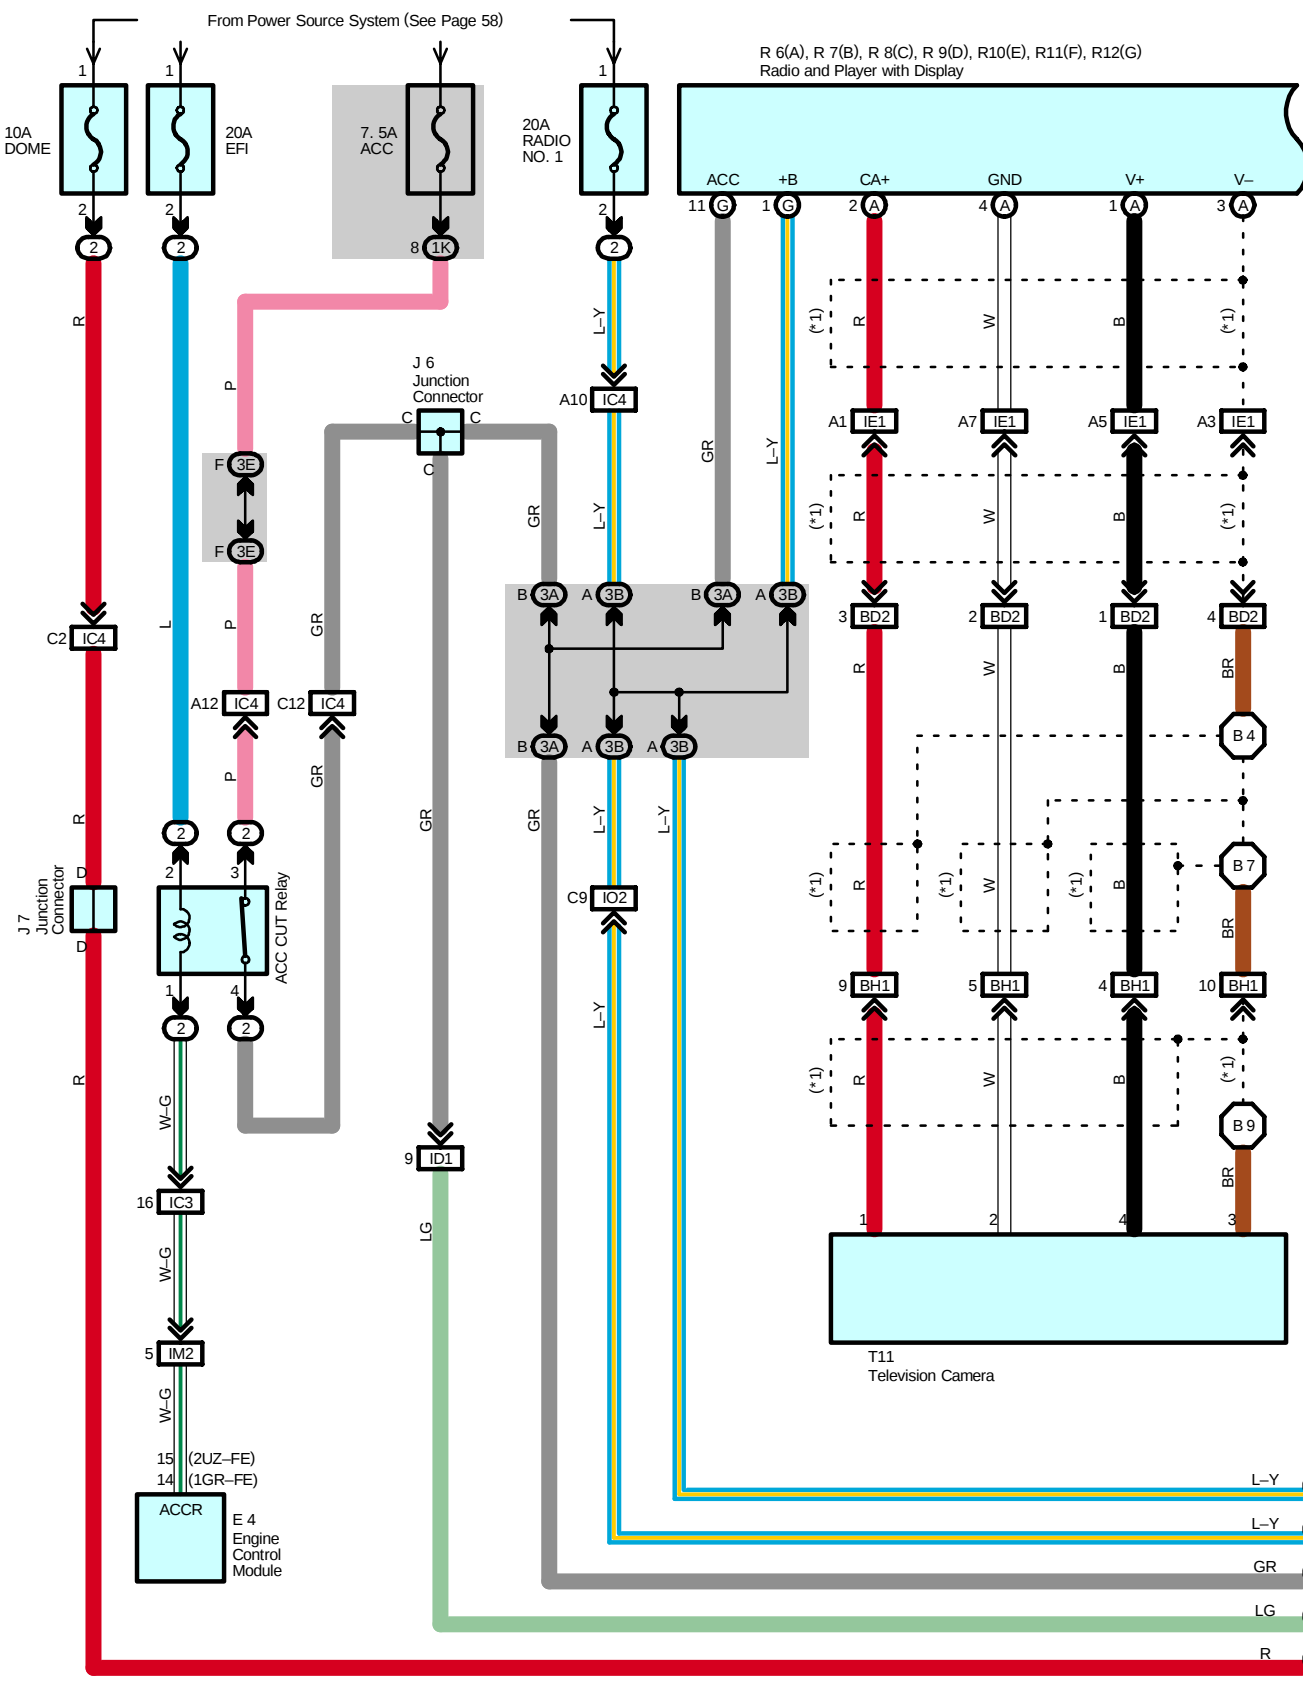



* 1 : Shielded

R 6(A), R 7(B), R 8(C), R 9(D), R10(E), R11(F), R12(G)
Radio and Player with Display

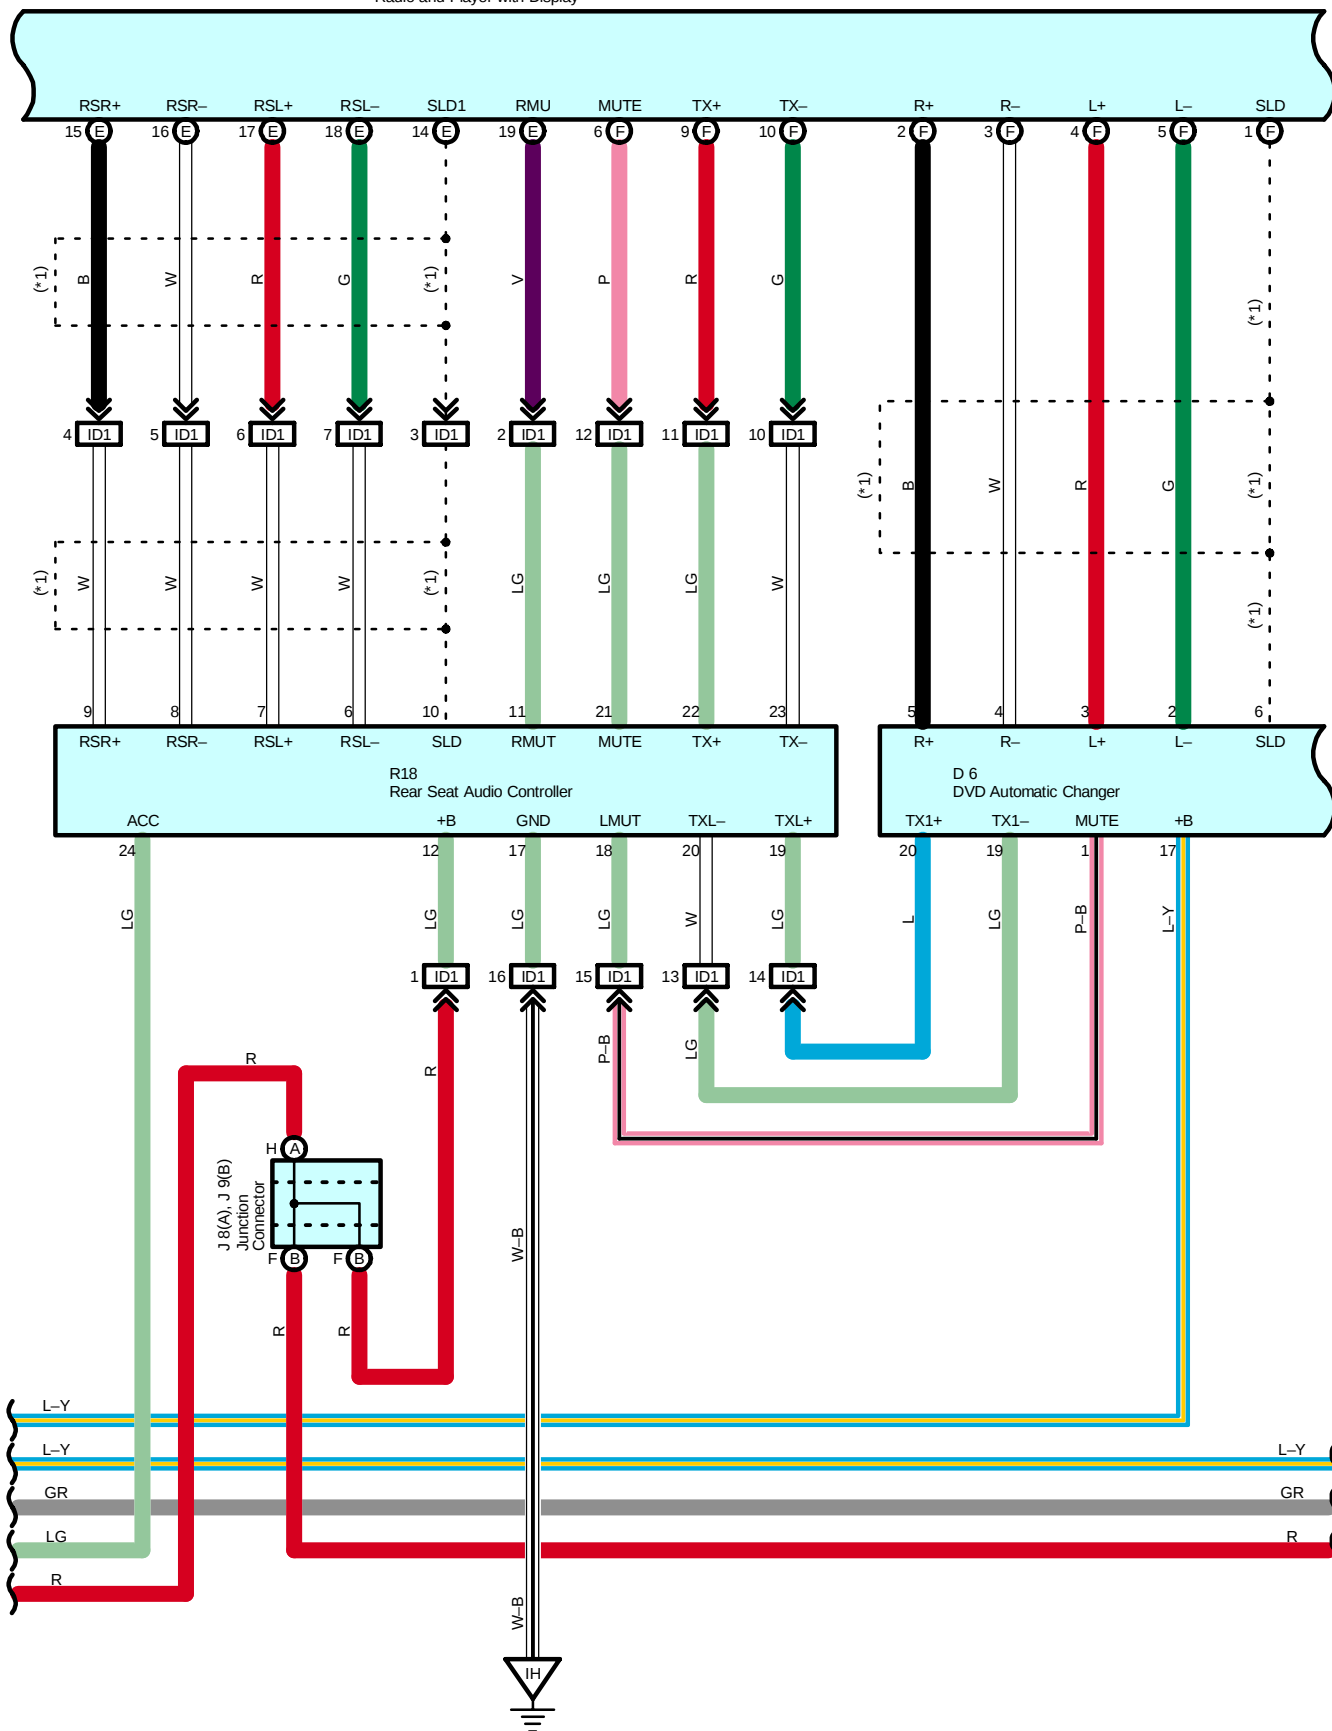


Navigation System, Radio and Player (w/ Navigation System),

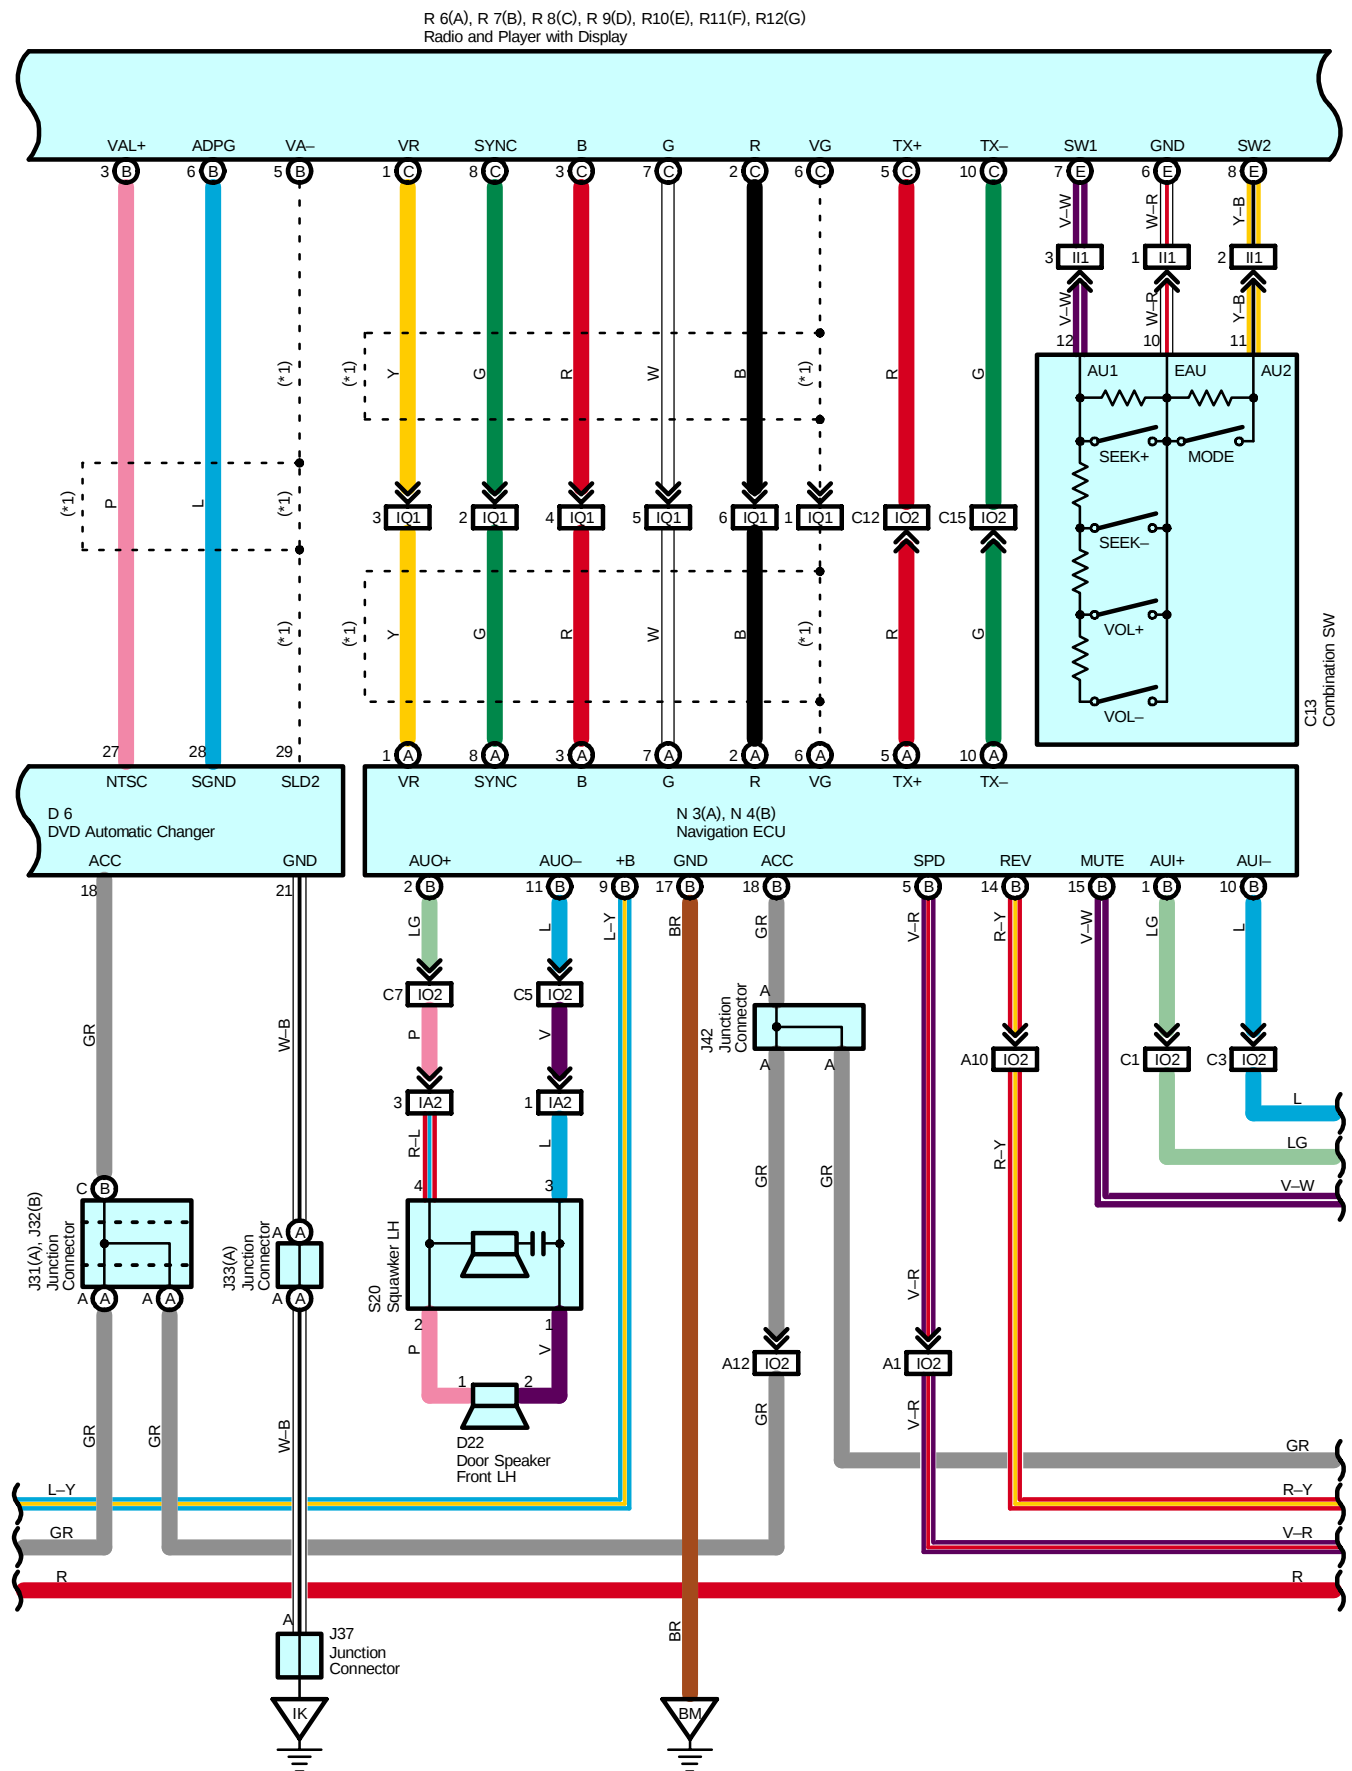


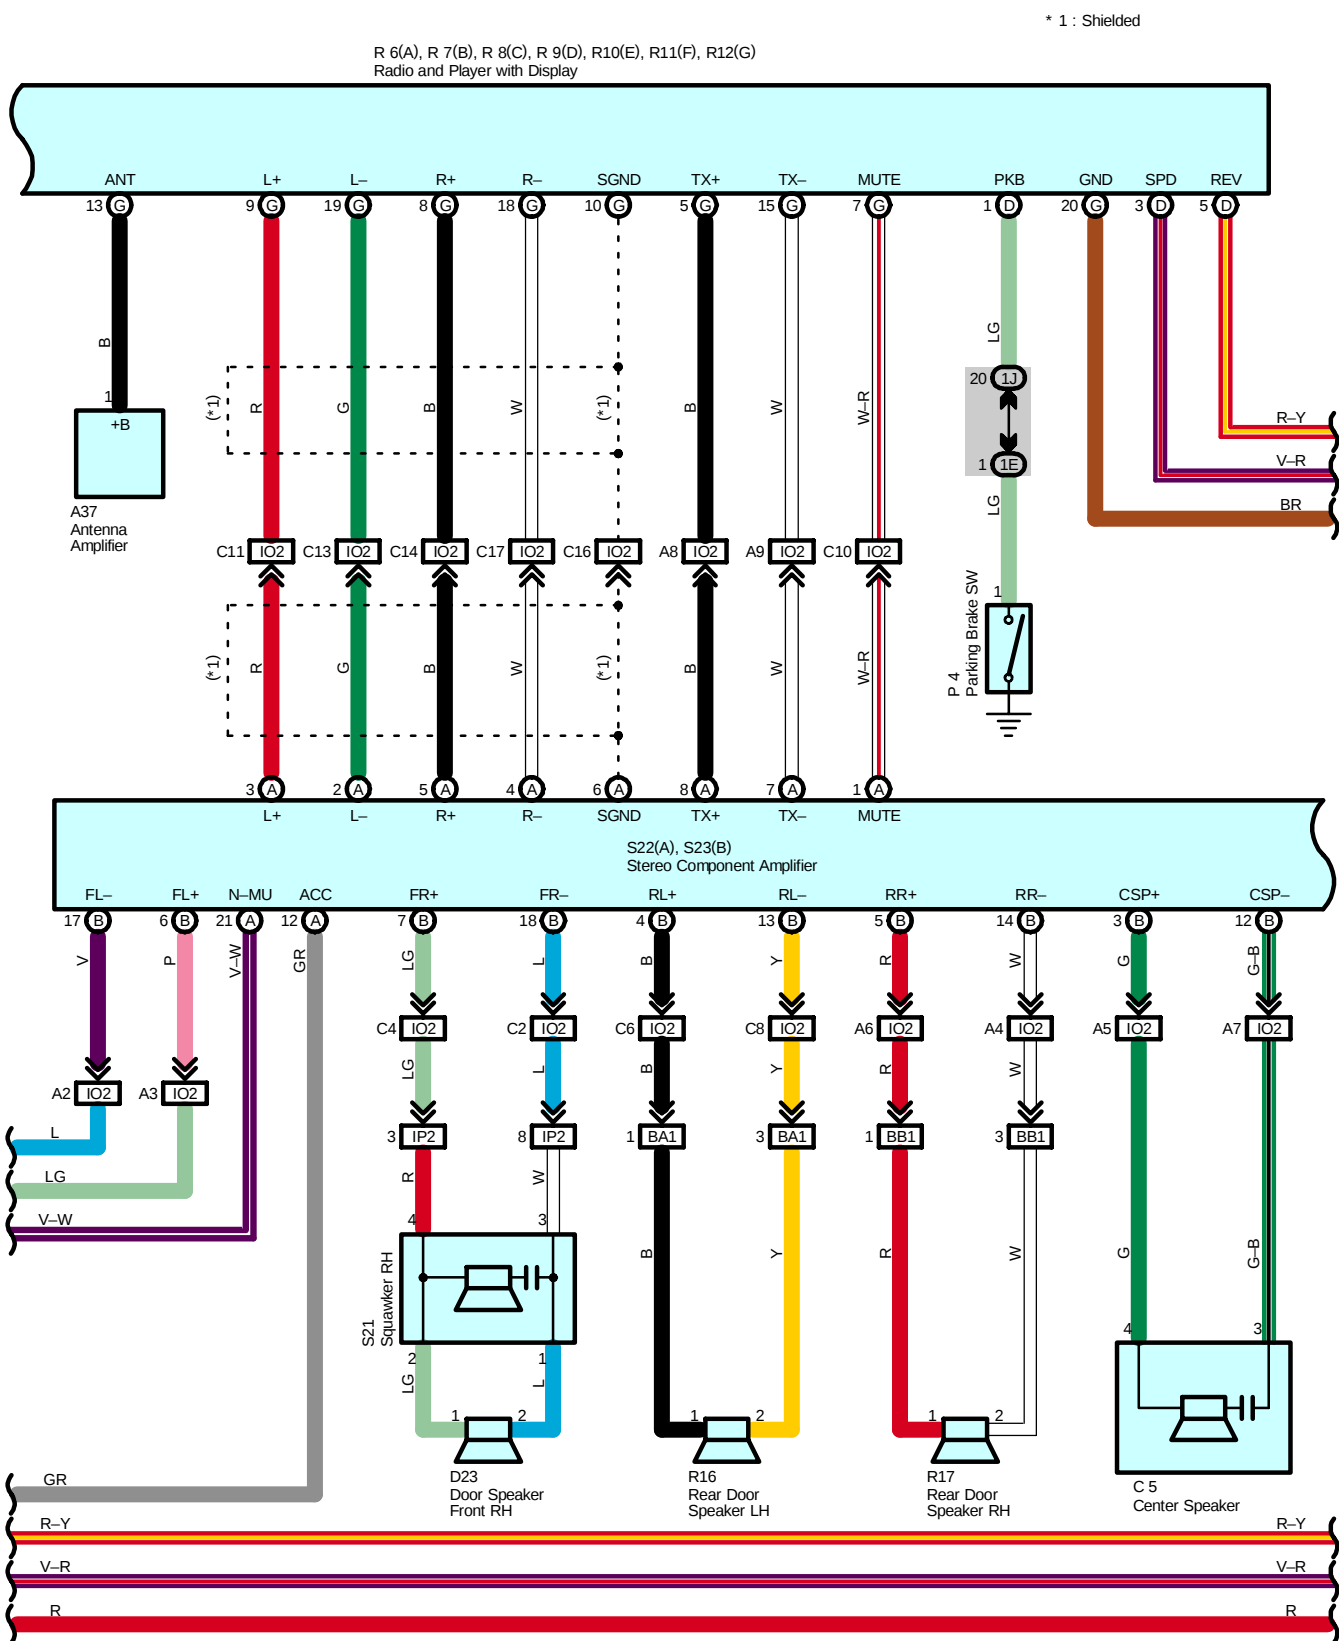

Navigation System, Radio and Player (w/ Navigation System),

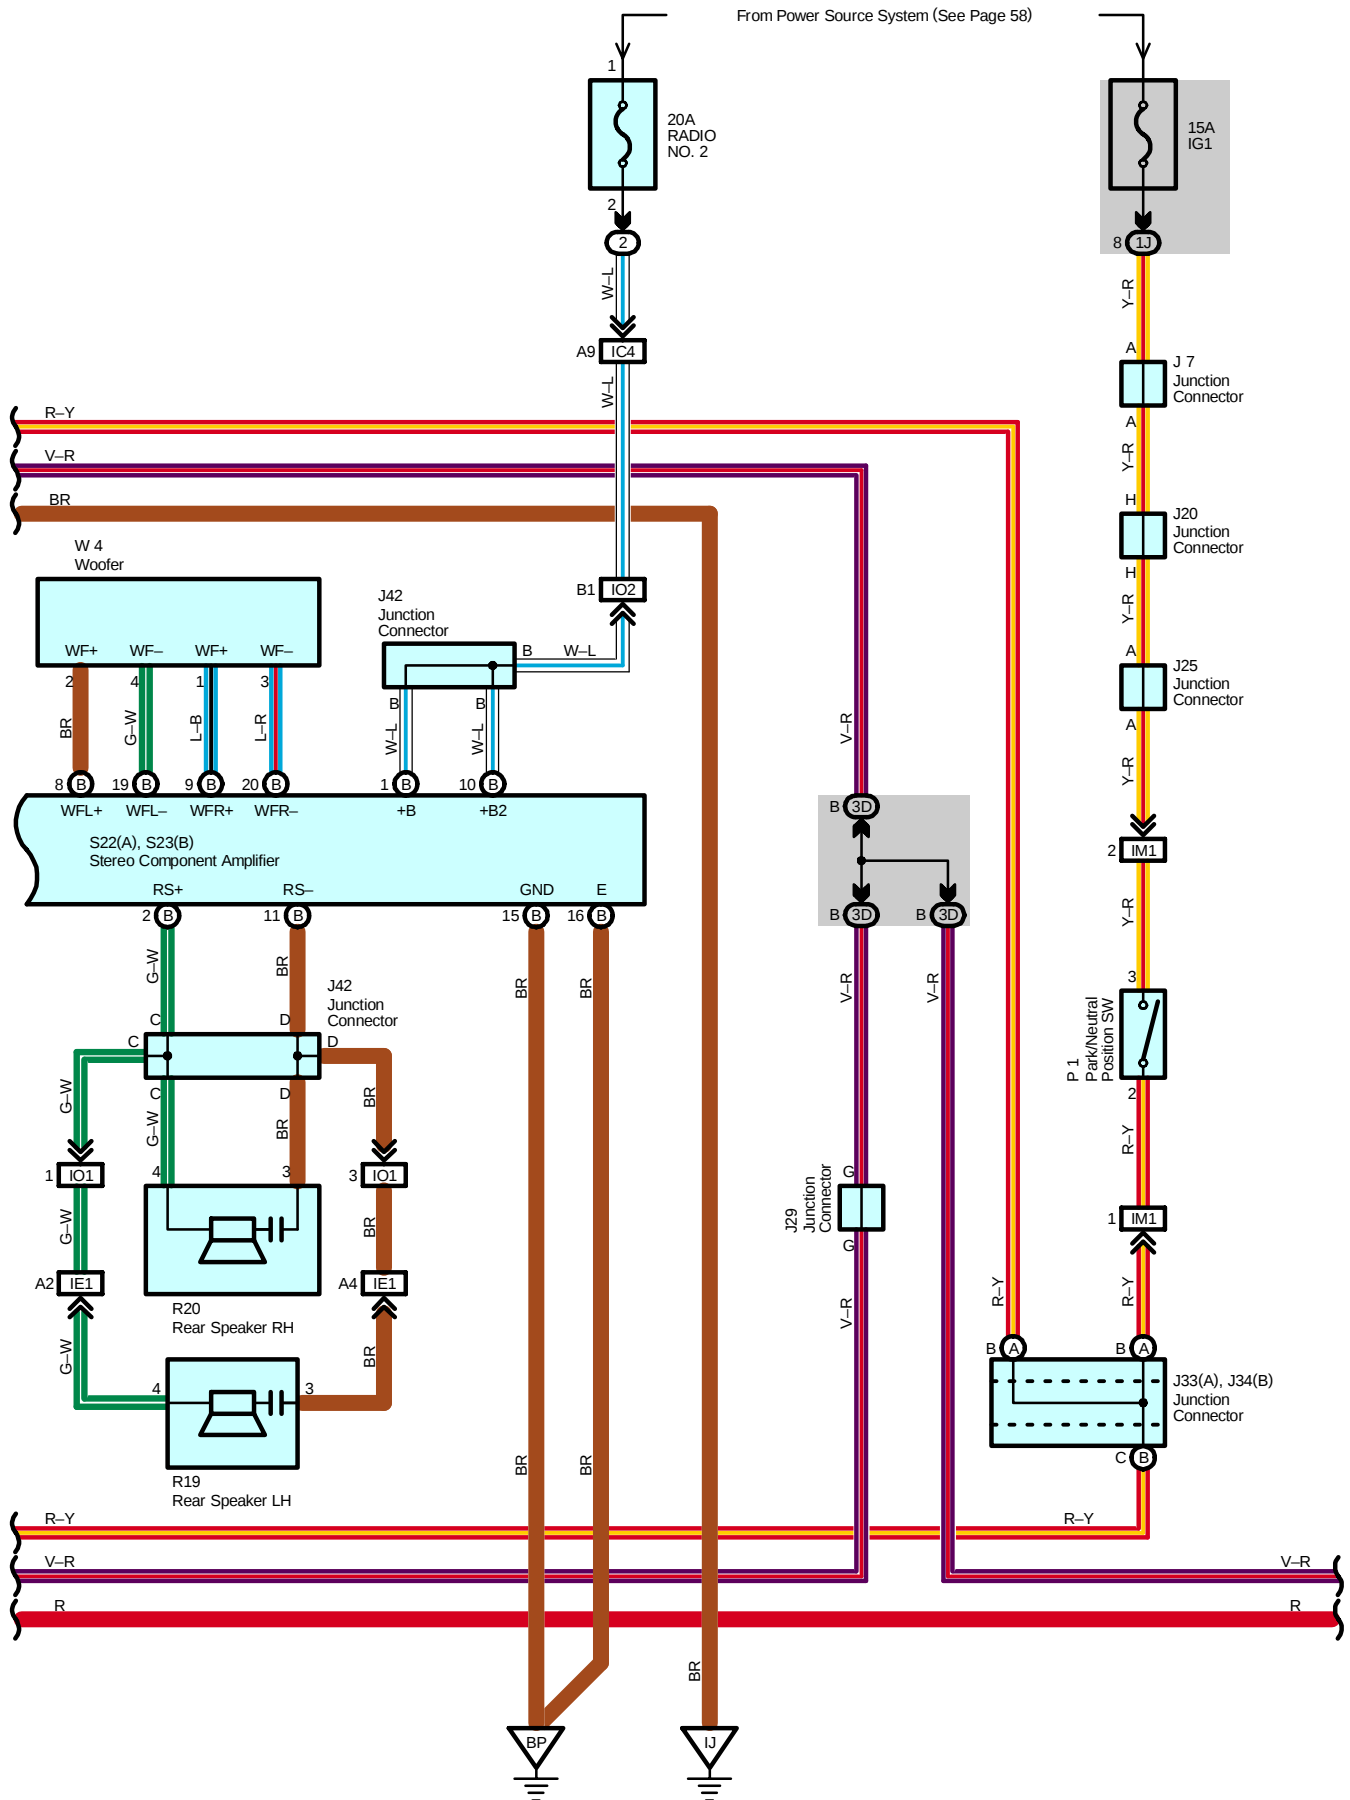

TOYOTA Parking Assist (Rear View Monitor)

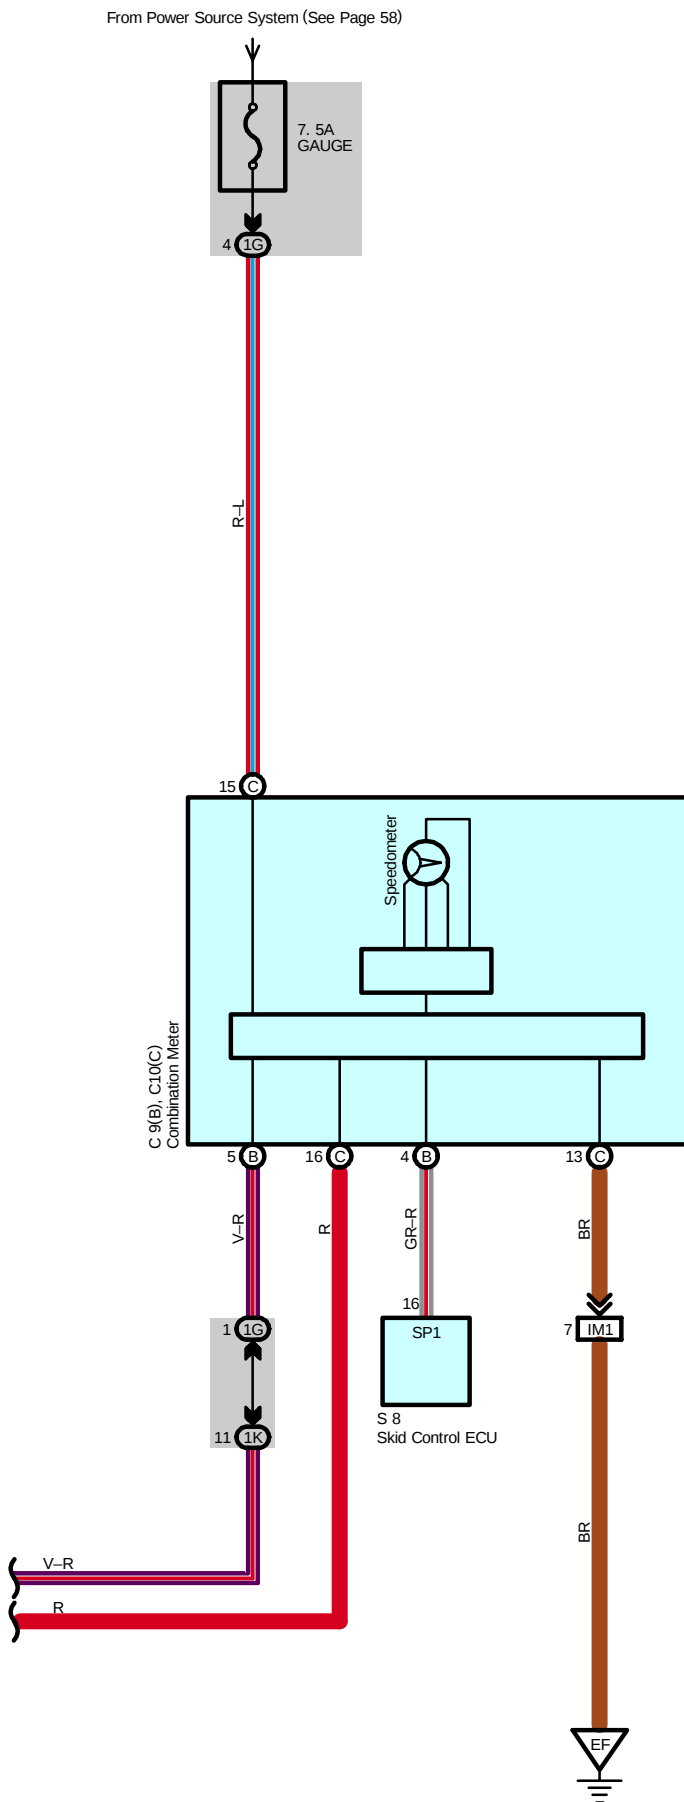

Navigation System, Radio and Player (w/ Navigation System),

Service Hints

R12 (G) Radio and Player with Display

(G)11–Ground : Approx. 12 volts with ignition SW at ACC or ON position

(G) 1–Ground : Always approx. 12 volts

(G)20–Ground : Always continuity

S22 (A), S23 (B) Stereo Component Amplifier

(A)12–Ground : Approx. 12 volts with ignition SW at ACC or ON position

(B) 1, (B) 10–Ground : Always approx. 12 volts

(B)15, (B) 16–Ground: Always continuity

N4 (B) Navigation ECU

(B)18–Ground : Approx. 12 volts with ignition SW at ACC or ON position

(B) 9–Ground : Always approx. 12 volts

(B)17–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A37	36	J31	A 38	R11	F 39
C5	37	J32	B 38	R12	G 39
C9	B 37	J33	A 38	R16	41
C10	C 37	J34	B 38	R17	41
C13	37	J37	38	R18	41
D6	37	J42	40	R19	41
D22	40	N3	A 41	R20	41
D23	40	N4	B 41	S8	39
E4	37	P1	33 (2UZ–FE)	S20	41
J6	38		35 (1GR–FE)	S21	41
J7	38	P4	39	S22	A 41
J8	A 38	R6	A 39	S23	B 41
J9	B 38	R7	B 39	T11	41
J20	38	R8	C 39	W4	41
J25	38	R9	D 39		
J29	38	R10	E 39		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K		
3A	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3B		
3D		
3E		

TOYOTA Parking Assist (Rear View Monitor)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	48	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC3	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC4		
ID1	48	Radio Installation Sub Assy Wire and Instrument Panel Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
II1	50	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IM1	52	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
IM2		
IO1	52	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IO2		
IP2	52	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IQ1	52	Floor Wire and Instrument Panel Wire (Instrument Panel Brace RH)
BA1	54	Rear Door No.2 Wire and Instrument Panel Wire (Left Center Pillar)
BB1	54	Rear Door No.1 Wire and Instrument Panel Wire (Right Center Pillar)
BD2	54	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BH1	54	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of Back Door)

: Ground Points

Code	See Page	Ground Points Location
EF	44 (2UZ-FE)	Rear Side of Left Bank Cylinder Block
	46 (1GR-FE)	
IH	48	Instrument Panel Brace LH
IJ	48	Instrument Panel Brace RH
IK	48	Right Kick Panel
BM	54	Floor Seat Crossmember RH
BP	54	Rear Pillar RH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	54	Back Door No.1 Wire	B9	54	Back Door No.2 Wire
B7					