

INSTALLATION

1. INSTALL ROOF RACK BAR JOINT NO. 2

- (a) Using a torx wrench (T25), install the 8 screws to the roof rack bar joint.

2. INSTALL ROOF RACK LEG COVER FRONT LH

- (a) Install the rack leg with the 2 screws.

3. INSTALL ROOF RACK LEG COVER FRONT RH



- (a) Install the rack leg with the 2 screws.

4. INSTALL ROOF RACK ASSEMBLY


- (a) Using a white gasoline, clean the bolt and thread.
(b) Apply adhesive to 2 or 3 threads of the bolt end.

Adhesive:

Part No. 08833-00070, THREE BOND 1324 or equivalent

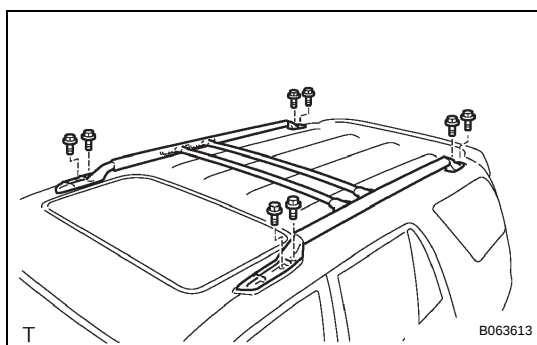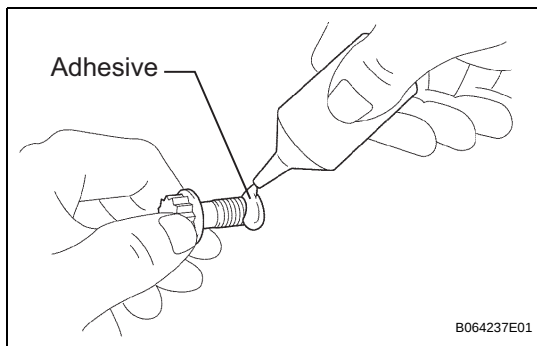

- (c) Install the roof rack assembly with the 8 bolts.

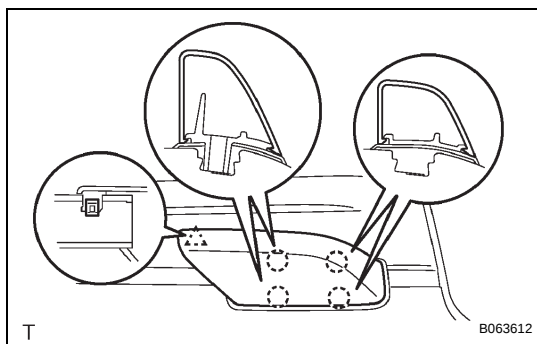


5. INSTALL ROOF RACK LEG COVER REAR LH

- (a) Install the leg cover with the 4 claws and clip.

6. INSTALL ROOF RACK LEG COVER REAR RH

- (a) Install the leg cover with the 4 claws and clip.

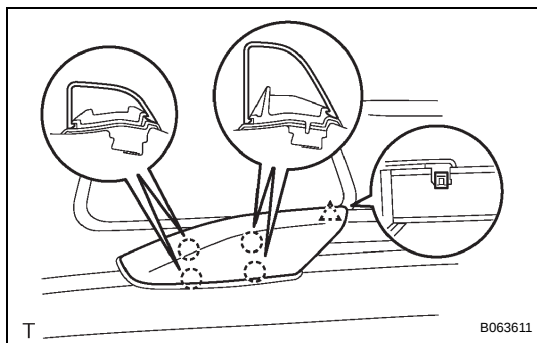

7. INSTALL ROOF RACK LEG COVER FRONT LH

- (a) Install the leg cover with the 4 claws and clip.

8. INSTALL ROOF RACK LEG COVER FRONT RH

- (a) Install the leg cover with the 4 claws and clip.