

REMOVAL

HINT:


On the RH side, use the same procedures as on the LH side.

1. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY
2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-28](#))
3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH (See page [ED-28](#))
4. REMOVE FRONT ARMREST ASSEMBLY LH (See page [ED-28](#))
5. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-28](#))
6. REMOVE FRONT DOOR SERVICE HOLE COVER LH (See page [ED-29](#))
7. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [ED-29](#))
8. REMOVE FRONT DOOR WINDOW FRAME MOULDING REAR LH (See page [ET-63](#))
9. REMOVE FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH

- (a) Put protective tape under the glass weatherstrip assembly.
- (b) Remove the screw.
- (c) Using a screwdriver or moulding remover, disengage the claw and remove the glass weatherstrip.

HINT:

Tape the screwdriver tip before use.

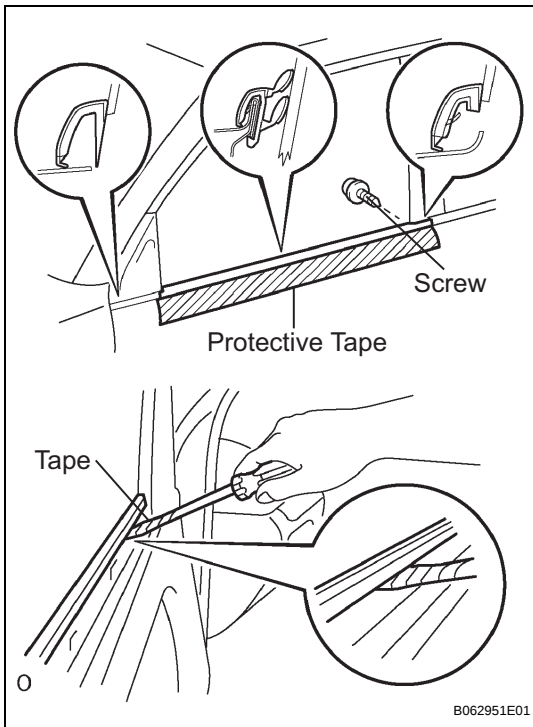

B062951E01

INSTALLATION

1. **INSTALL FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH**
 - (a) Install the glass weatherstrip with the claw and screw.
2. **INSTALL FRONT DOOR WINDOW FRAME MOULDING REAR LH**
3. **INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [ED-37](#))**
4. **INSTALL FRONT DOOR SERVICE HOLE COVER LH (See page [ED-37](#))**
5. **INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH**
6. **INSTALL FRONT ARMREST ASSEMBLY LH**
7. **INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH**
8. **INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH**
9. **INSTALL POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY**