

REMOVAL

HINT:


On the RH side, use the same procedures as on the LH side.

1. REMOVE POWER WINDOW REGULATOR SWITCH ASSEMBLY REAR
2. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH (See page [ED-41](#))
3. REMOVE REAR ARMREST ASSEMBLY LH (See page [ED-41](#))
4. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-41](#))
5. REMOVE REAR DOOR WINDOW FRAME MOULDING FRONT LH (See page [ET-66](#))
6. REMOVE REAR DOOR GLASS WEATHERSTRIP OUTER

- (a) Remove the screw.
- (b) Put protective tape under the glass weatherstrip.
- (c) Using a screwdriver or moulding remover, disengage the claw and remove glass weatherstrip.

HINT:

Tape the screwdriver tip before use.

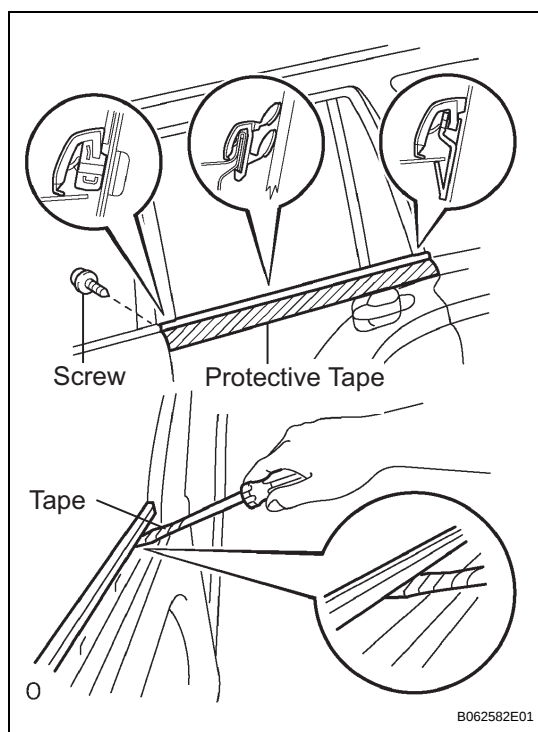

INSTALLATION

1. INSTALL REAR DOOR GLASS WEATHERSTRIP OUTER
2. INSTALL REAR DOOR WINDOW FRAME MOULDING FRONT LH
3. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH
4. INSTALL REAR ARMREST ASSEMBLY LH
5. INSTALL REAR DOOR INSIDE HANDLE BEZEL LH
6. INSTALL POWER WINDOW REGULATOR SWITCH ASSEMBLY REAR
 - (a) Install the glass weatherstrip with the claw and screw.