


ROOF RACK


COMPONENTS

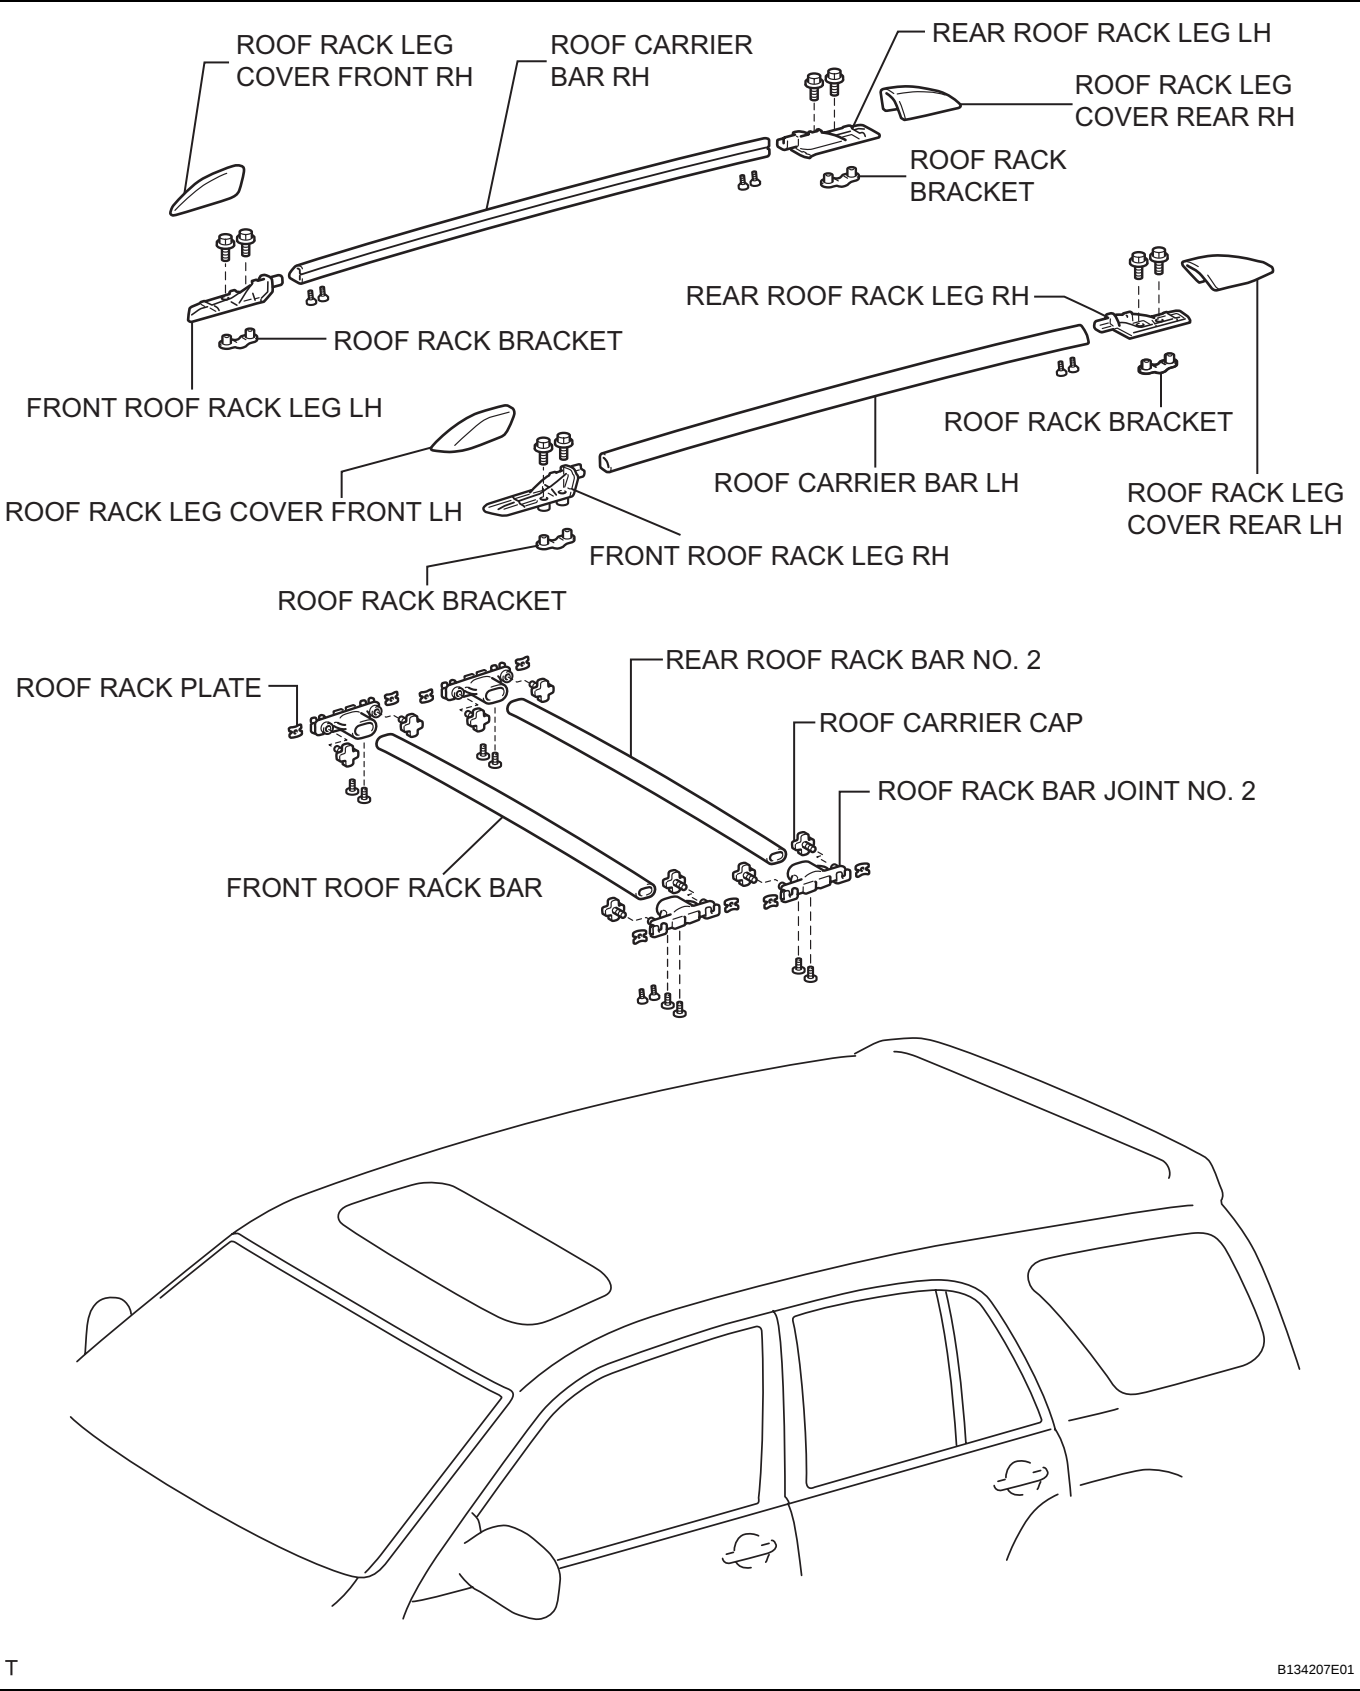

REMOVAL

HINT:

A bolt without torque specification is a standard bolt (See page [SS-1](#)).

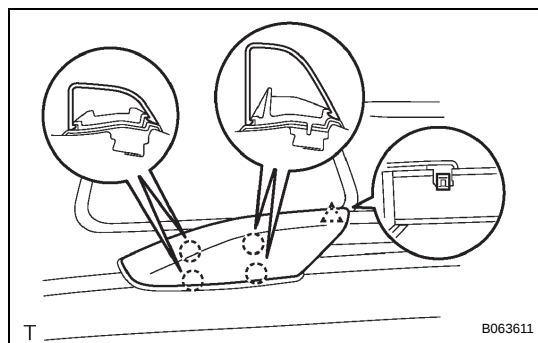

1. REMOVE ROOF RACK LEG COVER FRONT LH

- (a) Using a screwdriver, disengage the 4 claws and clip, and remove the leg cover.

HINT:


Tape the screwdriver tip before use.

2. REMOVE ROOF RACK LEG COVER FRONT RH

- (a) Using a screwdriver, disengage the 4 claws and clip, and remove the leg cover.

HINT:

Tape the screwdriver tip before use.

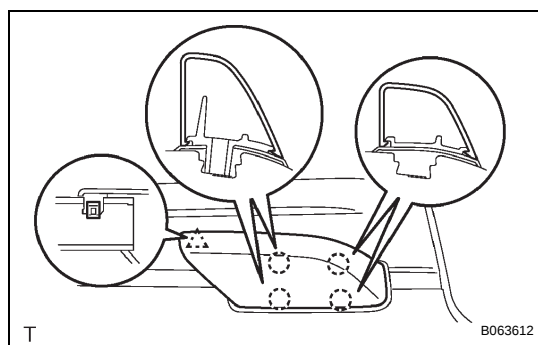

3. REMOVE ROOF RACK LEG COVER REAR LH

- (a) Using a screwdriver, disengage the 4 claws and clip, and remove the leg cover.

HINT:


Tape the screwdriver tip before use.

4. REMOVE ROOF RACK LEG COVER REAR RH

- (a) Using a screwdriver, disengage the 4 claws and clip, and remove the leg cover.

HINT:

Tape the screwdriver tip before use.

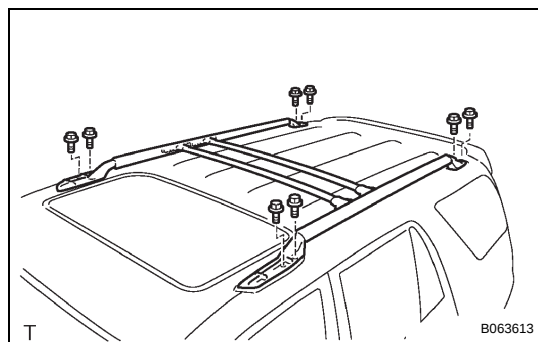

5. REMOVE ROOF RACK ASSEMBLY

- (a) Remove the 4 bolts and the roof rack assembly.

6. REMOVE ROOF RACK LEG COVER FRONT LH

- (a) Remove the 2 screws and rack leg.

7. REMOVE ROOF RACK LEG COVER FRONT RH

- (a) Remove the 2 screws and rack leg.

8. REMOVE ROOF RACK BAR JOINT NO. 2

- (a) Using a torx wrench (T25), remove the 8 screws the roof rack bar joint.