

REMOVAL

1. REMOVE BACK DOOR TRIM PANEL ASSEMBLY


- (a) Remove the assist strap hole cover.
- (b) Remove the assist strap assembly RH.
- (c) Remove the back door trim panel.

2. REMOVE BACK DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER

- (a) Put protective tape under the glass weatherstrip.
- (b) Using a screwdriver or moulding remover, disengage the claw and remove the glass weatherstrip outer.

HINT:

- Tape the screwdriver tip before use.
- Put the screwdriver on either edge of the door glass weatherstrip.

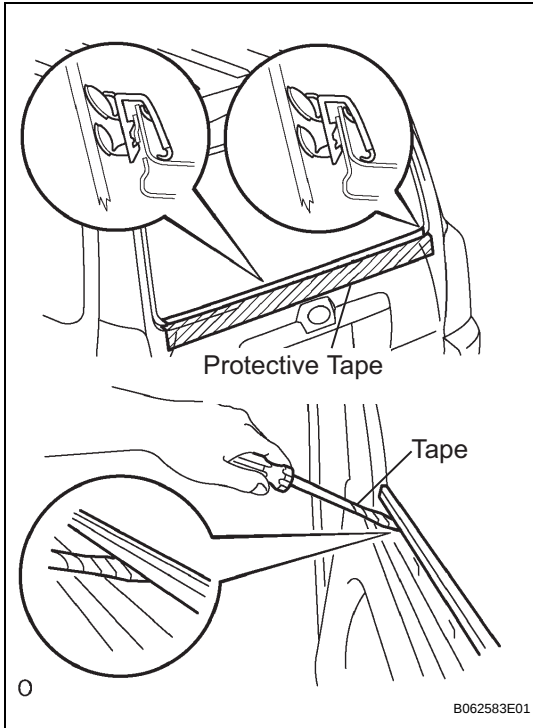

INSTALLATION

1. **INSTALL BACK DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER**
 - (a) Install the glass weatherstrip outer with the claw.
2. **INSTALL BACK DOOR TRIM PANEL ASSEMBLY**