

REMOVAL

HINT:

On the RH side, use the same procedures as on the LH side.

1. REMOVE ROOF RACK ASSEMBLY LH (w/ Roof Rack)

HINT:


(See page [ET-22](#))

2. REMOVE ROOF DRIP SIDE MOULDING COVER FRONT LH (w/o Roof Rack)

- (a) Using a screwdriver, disengage the 2 claws and remove the moulding cover.

HINT:

Tape the screwdriver tip before use.

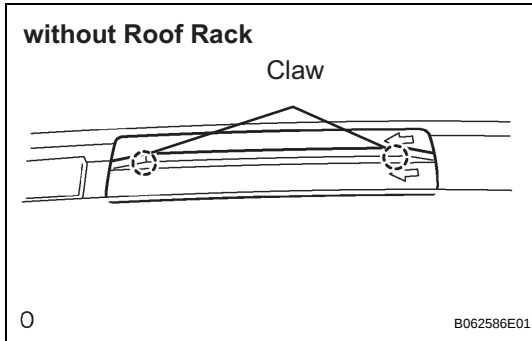


3. REMOVE WINDSHIELD MOULDING OUTSIDE LH

- (a) Put protective tape around the windshield moulding.
(b) Pull out the windshield moulding by hand.

NOTICE:

- Be careful not to damage the windshield moulding.
- If the windshield moulding is damaged, exchange it for a new one.

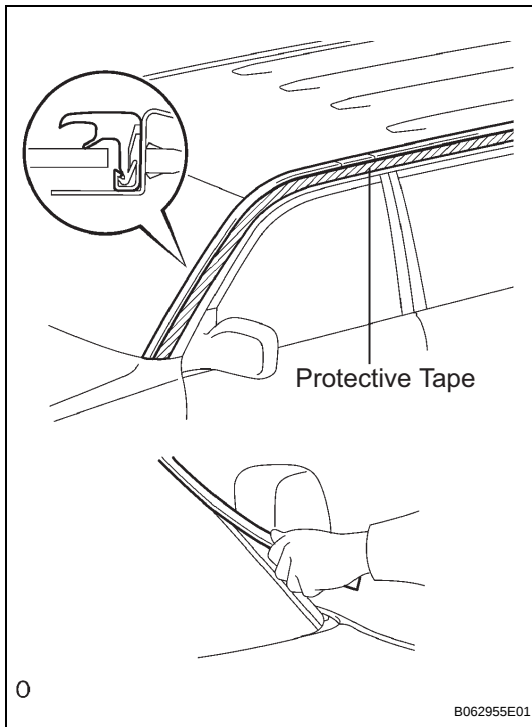

4. REMOVE WINDSHIELD OUTSIDE MOULDING FASTENER NO. 1


- (a) Put protective tape around the fastener.
(b) Using a screwdriver, disengage the 3 clips and pull out the fastener by hand.


HINT:

Tape the screwdriver tip before use.

NOTICE:

- Be careful not to damage the windshield and fastener.
- If the windshield and fastener are damaged, exchange them for a new one.

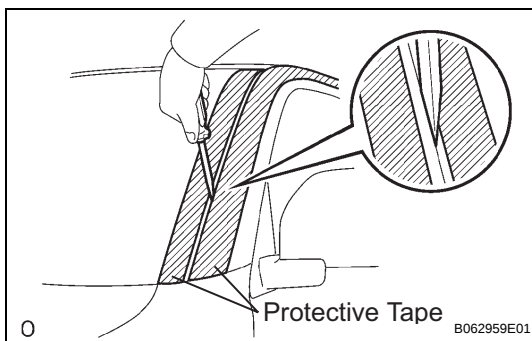

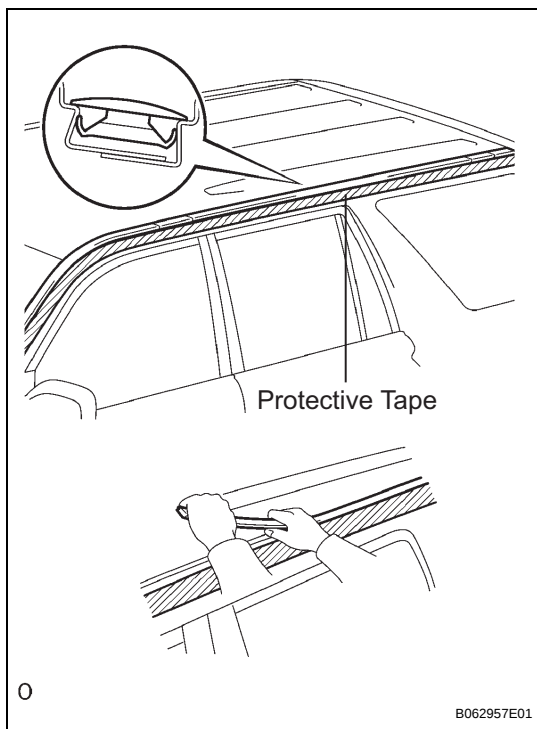


5. REMOVE ROOF DRIP SIDE FINISH MOULDING CENTER NO. 2 LH

- Put protective tape around the moulding.
- Pull out the moulding by hand.

NOTICE:

Be careful not to damage the moulding.

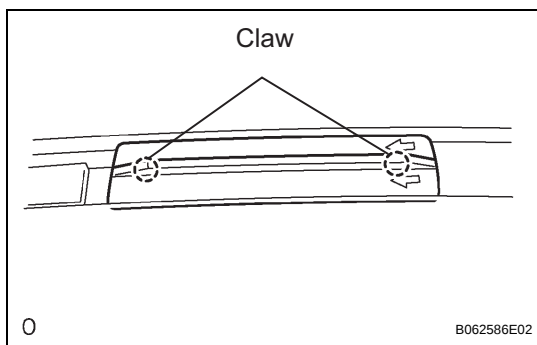


6. REMOVE ROOF DRIP SIDE MOULDING END COVER REAR LH (w/o Roof Rack)

- Using a screwdriver, disengage the 2 claws and remove the moulding end cover.

HINT:

Tape the screwdriver tip before use.

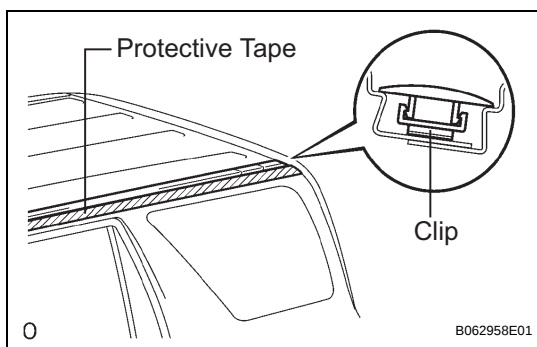


7. REMOVE ROOF DRIP SIDE FINISH MOULDING REAR LH

- Put protective tape around the moulding.
- Pull out the moulding by hand.

NOTICE:

- Be careful not to damage the moulding.
- Do not remove the clips.
- In case that the clips are damaged or removed accidentally, exchange them into supplied ones.

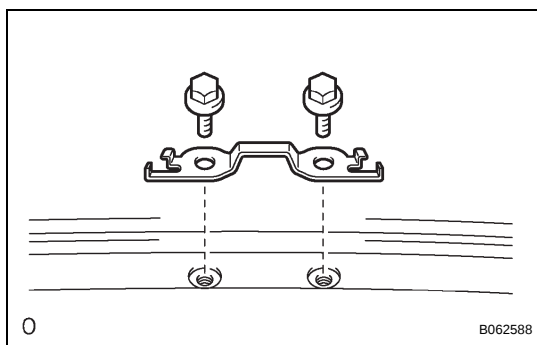

8. REMOVE ROOF RACK BRACKET FRONT LH (w/o Roof Rack)

- Remove the 2 bolts and bracket.

9. REMOVE ROOF RACK BRACKET NO. 1 REAR LH (w/o Roof Rack)

- Remove the 2 bolts and bracket.