

REMOVAL

HINT:

A bolt without torque specification is a standard bolt (See page [SS-2](#)).

1. REMOVE TONNEAU COVER RETRACTOR SUB-ASSEMBLY

2. REMOVE REAR NO. 2 SEAT ASSEMBLY (for 50/50 Split Seat Type)

HINT:

See page [SE-36](#)

3. REMOVE NO. 3 SEAT LEG COVER NO. 2 (for 50/50 Split Seat Type)

4. REMOVE REAR NO. 2 SEAT LOCK ASSEMBLY LH (for 50/50 Split Seat Type)

(a) Remove the 2 bolts and seat lock.

5. REMOVE REAR NO. 2 SEAT LOCK ASSEMBLY RH (for 50/50 Split Seat Type)

(a) Remove the 2 bolts and seat lock.

6. REMOVE SEAT ANCHOR RAIL NO. 4 (for 50/50 Split Seat Type)

(a) Using a screwdriver, remove the 2 covers, 2 bolts and anchor rail.

HINT:

Tape the screwdriver tip before use.




7. REMOVE BACK DOOR WEATHERSTRIP

8. REMOVE DECK BOARD SUB-ASSEMBLY

(a) Remove the 2 bolts and the deck board sub-assembly.


9. REMOVE DECK BOARD ASSEMBLY

(a) Remove the 2 bolts and the deck board assembly.

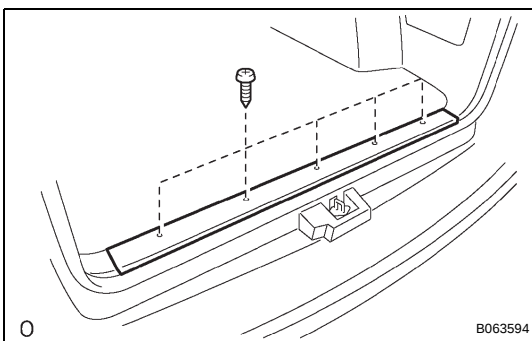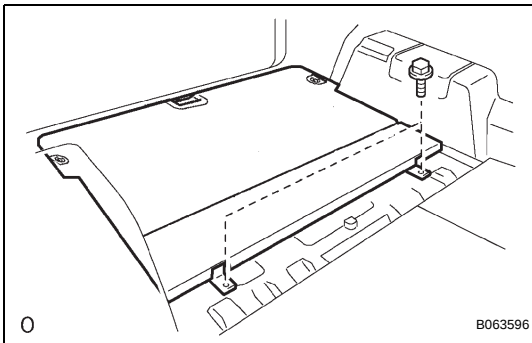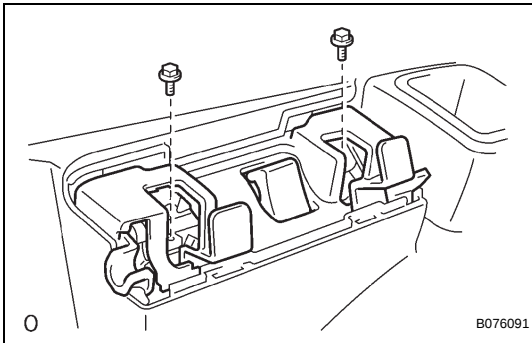

10. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR

(a) Remove the 5 bolts and mat support plate.

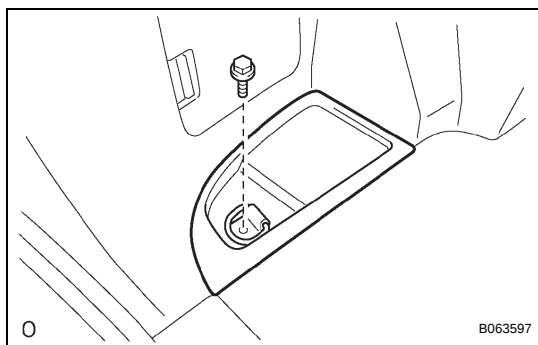**11. REMOVE DECK FLOOR BOX LH**

- (a) Using a screwdriver, disengage the claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt, deck floor box and luggage hold belt striker.

12. REMOVE DECK FLOOR BOX RH

HINT:

Use the same procedures described for the LH side.

13. REMOVE DECK TRIM COVER REAR

- (a) Using a screwdriver, pry out the trim cover.

HINT:

Tape the screwdriver tip before use.

14. REMOVE DECK TRIM SIDE BOARD UPR LH

- (a) Remove the screw and side board.

15. REMOVE DECK TRIM SIDE BOARD UPR RH

- (a) Remove the screw and side board.

16. REMOVE SIDE TRIM BOX ASSEMBLY LH

- (a) Remove the screw and side trim box.

17. REMOVE SIDE TRIM BOX ASSEMBLY RH

- (a) Remove the screw and side trim box.

18. REMOVE QUARTER SCUFF PLATE INSIDE LH (for 50/50 Split Seat Type)

- (a) Using a screwdriver, disengage the 4 claws and covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 bolts and scuff plate.

19. REMOVE QUARTER SCUFF PLATE INSIDE RH (for 50/50 Split Seat Type)

HINT:

Use the same procedure described for the LH side.

20. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the claw labeled A, claw labeled B, 2 claws labeled C and claw labeled D. Remove the scuff plate.

HINT:



Tape the screwdriver tip before use.


21. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

IR

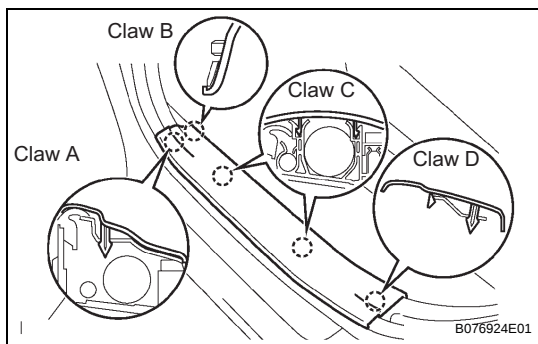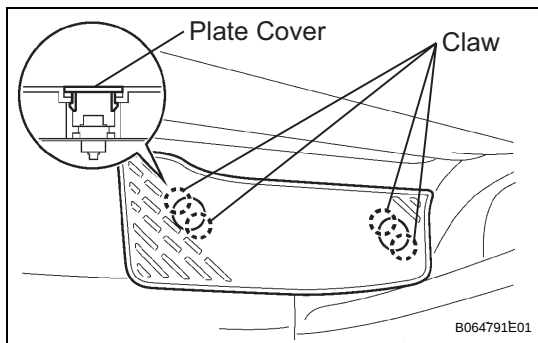

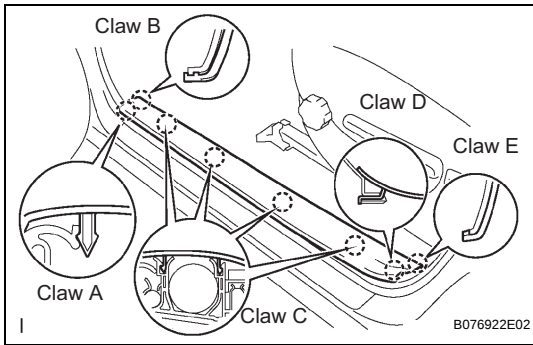

22. REMOVE FRONT DOOR SCUFF PLATE LH

- Using a screwdriver, disengage the claw labeled A, claw labeled B, 4 claws labeled C, claw labeled D and claw labeled E. Remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

23. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

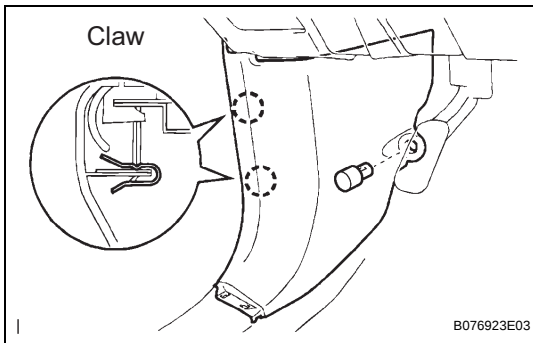

24. REMOVE COWL SIDE TRIM BOARD LH

- Remove the cap nut.

- Using a screwdriver, disengage the 2 claws and remove the trim board.

HINT:

Tape the screwdriver tip before use.

25. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure described for the LH side.

26. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

27. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

28. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

29. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

30. REMOVE DECK TRIM COVER REAR

31. REMOVE REAR FLOOR CARPET ASSEMBLY

32. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

- Remove the screw and deck trim cover.

- Remove the 3 screws and clips.

- Using a screwdriver, disengage the 6 clips and remove the side panel.


HINT:


Tape the screwdriver tip before use.

33. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

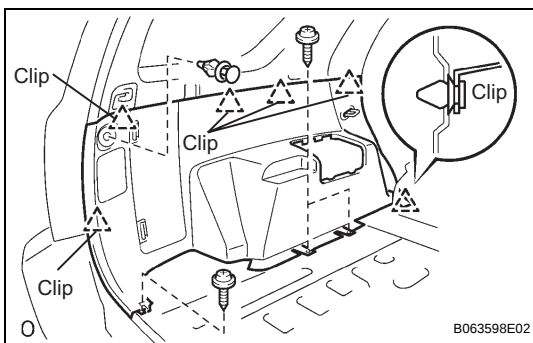

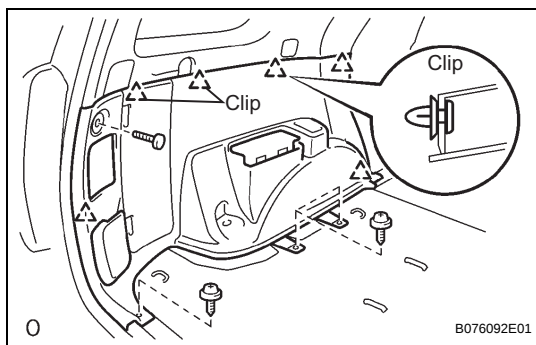

34. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (for 50/50 Split Seat Type)

- Remove the bolt and 3 screws.
- Using a screwdriver, remove the 5 clips and side panel.


HINT:

Tape the screwdriver tip before use.

35. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (for 50/50 Split Seat Type)

HINT:

Use the same procedure described for the LH side.

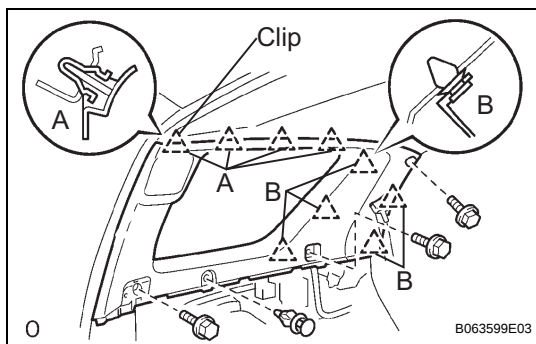

36. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER LH

- Remove the screw and tonneau cover hook.
- Remove the 3 bolts and clip.
- Using a screwdriver, disengage the 9 clips and remove the side garnish.

HINT:


Tape the screwdriver tip before use.

37. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER RH

HINT:

Use the same procedure described for the LH side.

IR

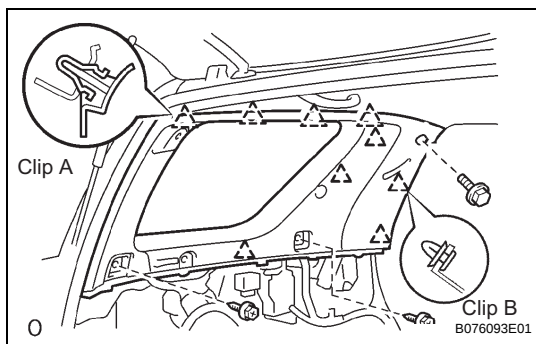

38. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER LH (for 50/50 Split Seat Type)

- Remove the rear No. 2 shoulder anchor bolt.
- Remove the 3 screws, disengage the 4 clips labeled A and 5 clips labeled B.
- Using a screwdriver, disengage the 4 claws and remove the side garnish.


HINT:

Tape the screwdriver tip before use.

39. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER RH (for 50/50 Split Seat Type)

HINT:

Use the same procedure described for the LH side.

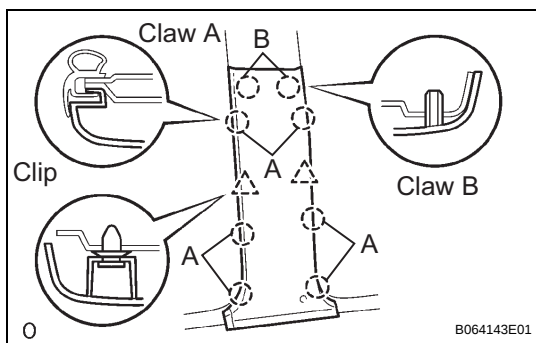

40. REMOVE CENTER PILLAR GARNISH LOWER LH

- Using a screwdriver, disengage the 6 claws labeled A and 2 claws labeled B. Remove the 2 clips and pillar garnish.


HINT:

Tape the screwdriver tip before use.

41. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedure described for the LH side.

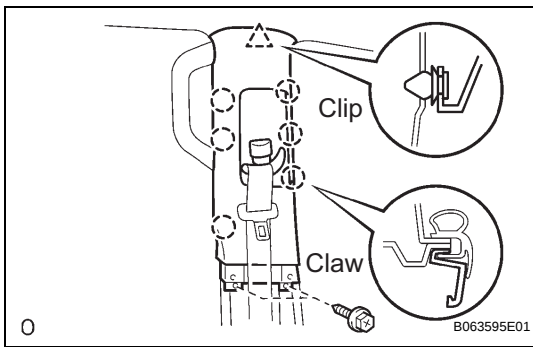

42. REMOVE CENTER PILLAR GARNISH UPPER LH

- Remove the bolt and disconnect the front seat outer belt (floor anchor side).
- Remove the 2 bolts.
- Using a screwdriver, disengage the 6 claws and clip, and remove the pillar garnish.


HINT:

Tape the screwdriver tip before use.

43. REMOVE CENTER PILLAR GARNISH UPPER RH

HINT:

Use the same procedure described for the LH side.

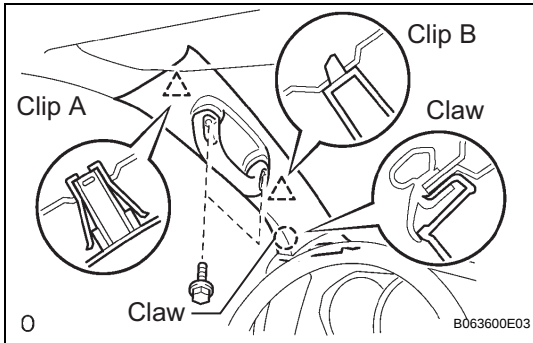

44. REMOVE FRONT PILLAR GARNISH LH

- Using a screwdriver, remove the 2 assist grip plugs.


HINT:

Tape the screwdriver tip before use.

- Remove the 2 bolts.
- Using a screwdriver, disengage the claw. Remove the clip labeled A, clip labeled B and pillar garnish.

HINT:

Tape the screwdriver tip before use.

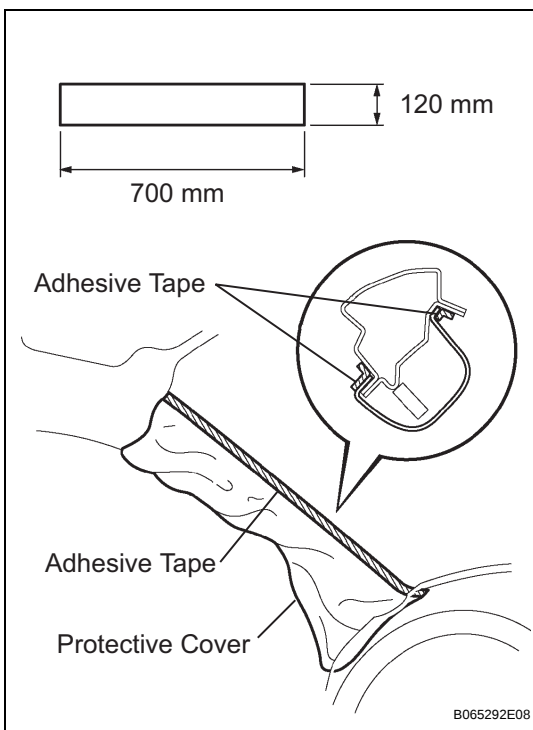

- Pull the garnish upward, and remove the pillar garnish from the instrument panel.

- w/ Curtain shield airbag:

Protect the curtain shield airbag LH.

- Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:


Cover the curtain shield airbag with the protection cover as soon as the front pillar garnish is removed.

45. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

46. REMOVE INNER REAR VIEW MIRROR ASSEMBLY

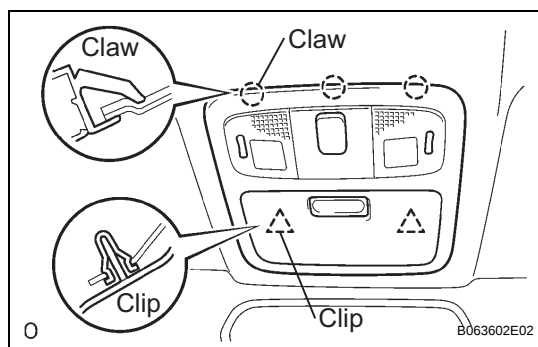
**47. REMOVE ROOF CONSOLE BOX ASSEMBLY**

- (a) Using a moulding remover, disengage the 3 claws and 2 clips.

HINT:

Tape the screwdriver tip before use.


- (b) Disconnect the map light switch connector and sliding roof switch connector, and remove the console box.

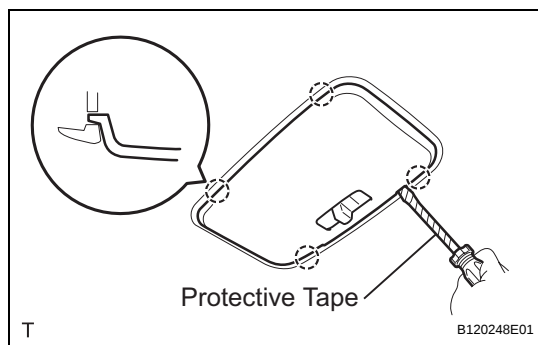**48. REMOVE INTERIOR LIGHT ASSEMBLY NO. 1**

- (a) Using a screwdriver, disengage the 4 claws and remove the interior light lens.

HINT:


Tape the screwdriver tip before use.

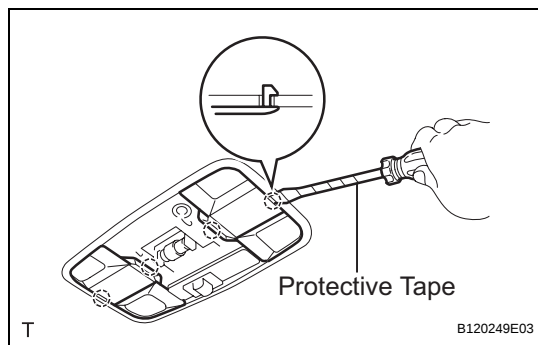

- (b) Using a screwdriver, disengage the 4 claws and remove the 2 covers.

HINT:


Tape the screwdriver tip before use.

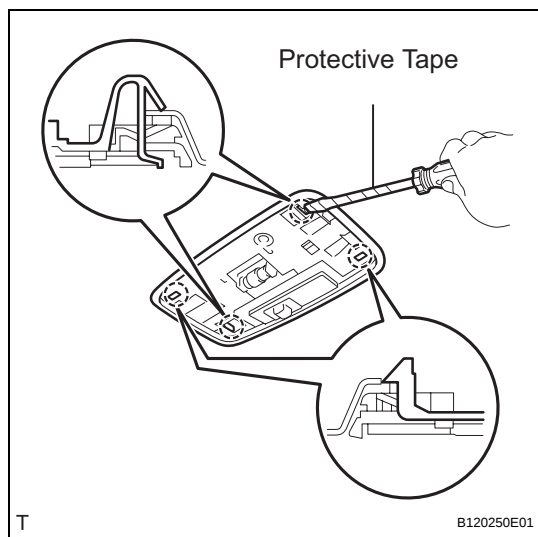

- (c) Using a screwdriver, disengage the 4 claws.

HINT:

Tape the screwdriver tip before use.

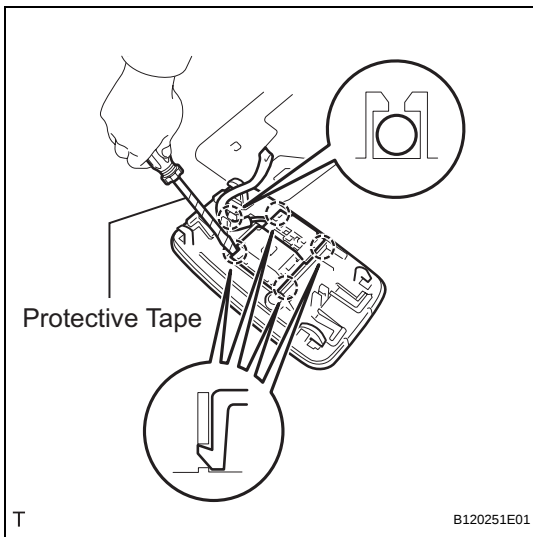

- (d) Remove the No. 1 roof wire from the claw of the interior light.
- (e) Using a screwdriver, disengage the 4 claws and remove the interior light switch base and the interior light.

49. REMOVE DOME LIGHT ASSEMBLY (w/ RSE)


HINT:

See page [AV-177](#)

50. REMOVE TELEVISION DISPLAY ASSEMBLY (w/ RSE)

HINT:

See page [AV-176](#)

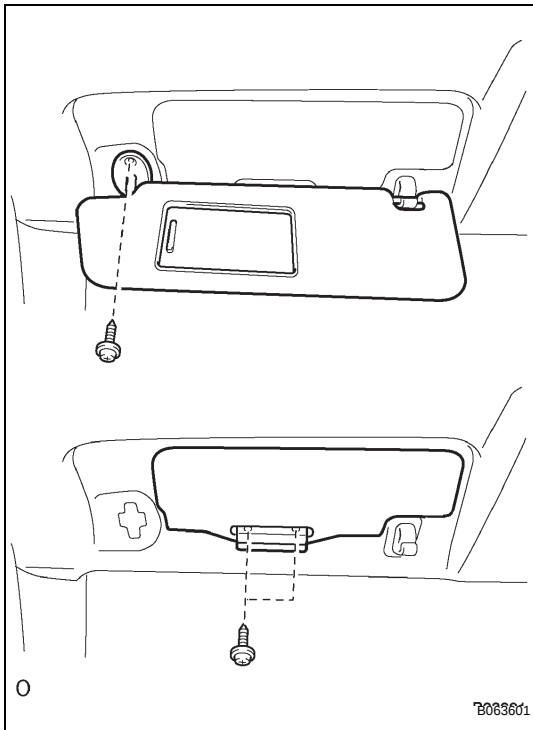

51. REMOVE VISOR ASSEMBLY LH

- (a) Remove the 2 screws and visor assembly.
- (b) Remove the 2 screws and visor sub-assembly.

52. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

53. REMOVE VISOR HOLDER

- (a) Remove the screw and visor holder.