


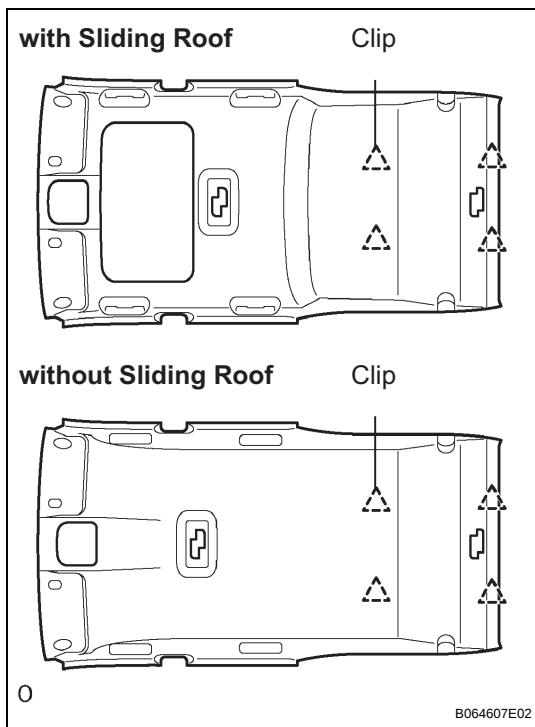

54. REMOVE ROOF HEADLINING ASSEMBLY

- (a) Disengage the 4 clips and remove the headlining.

INSTALLATION

1. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Align the marking, and then install the wire harness with tape.

HINT:

Be careful for dirt or foreign objects not to stick to the adhered part when peeling off the double-stick tape.

- (b) Attach the roof wire harness along the adhered part.


NOTICE:


Roof wire harness should be attached securely.

- (c) Install the roof headlining with the 4 clips.

2. INSTALL VISOR HOLDER

- (a) Install the screw and visor holder.

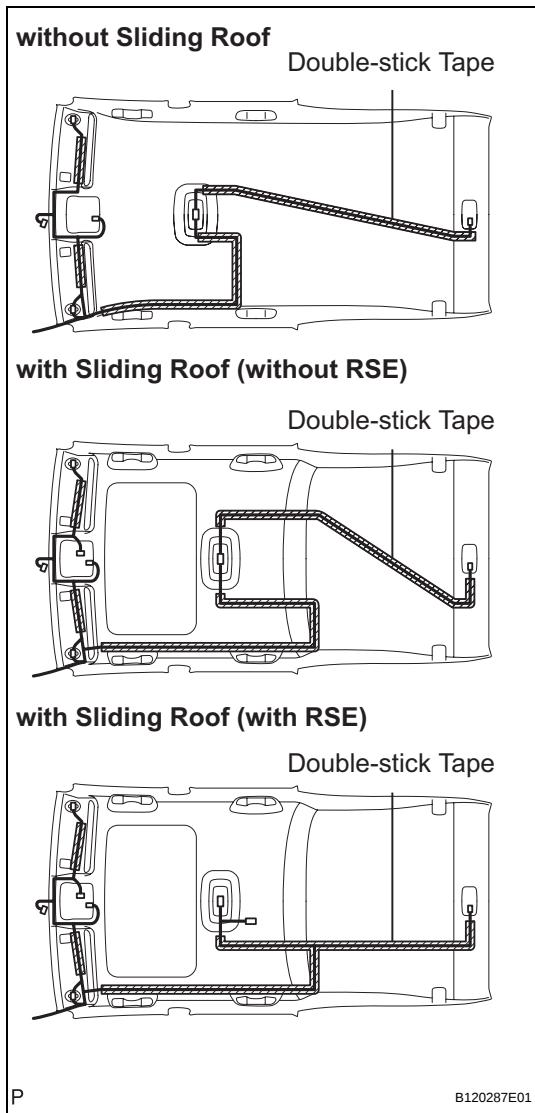

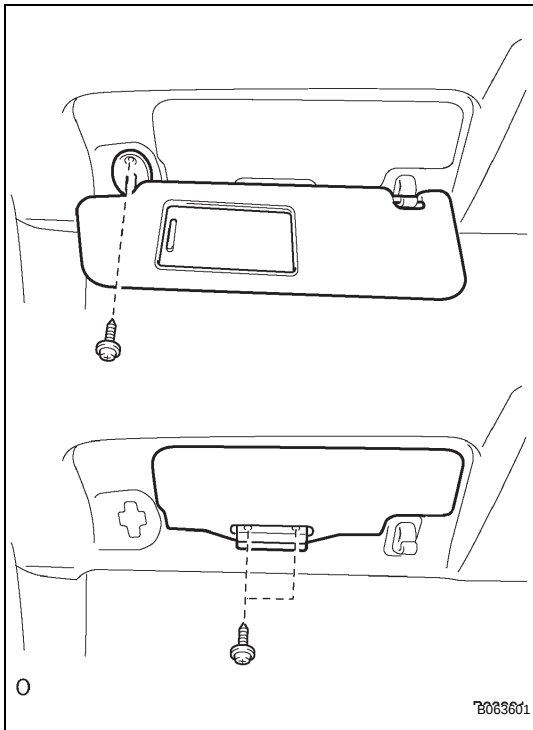

3. INSTALL VISOR ASSEMBLY LH

- Install the 2 screws and visor sub-assembly.
- Install the 2 screws and visor assembly.

4. INSTALL VISOR ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

5. INSTALL INTERIOR LIGHT ASSEMBLY NO. 1

- Install interior light switch base and the interior light, and engage the 4 claws.
- Install the No. 1 roof wire to the claw of the interior light.
- Engage the 4 claws.
- Install the 2 covers and engage the 4 claws.
- Install the interior light lens and engage the 4 claws.

6. INSTALL DOME LIGHT ASSEMBLY (w/ RSE)


HINT:

See page [AV-177](#)

7. INSTALL TELEVISION DISPLAY ASSEMBLY (w/ RSE)

HINT:


See page [AV-177](#)

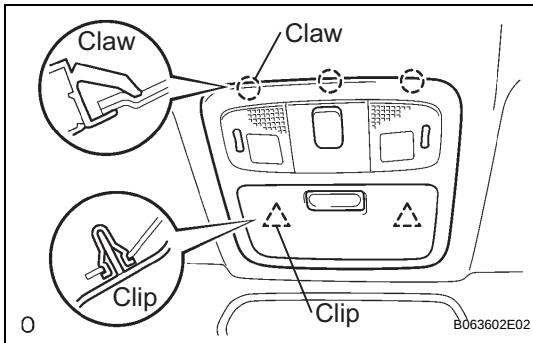

8. INSTALL ROOF CONSOLE BOX ASSEMBLY

- Install the console box and reconnect the map light switch connector and sliding roof switch connector.
- Engage the 3 claws and 2 clips.

9. INSTALL INNER REAR VIEW MIRROR ASSEMBLY

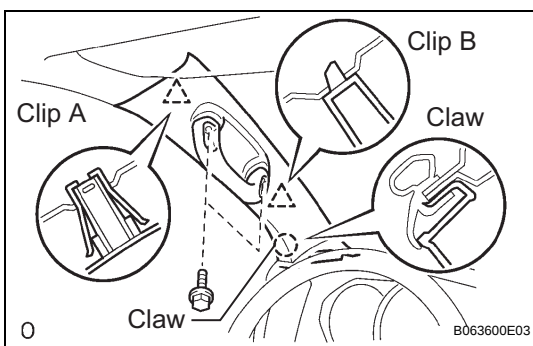

10. INSTALL FRONT PILLAR GARNISH LH

- Install the clip labeled A, clip labeled B and pillar garnish, and engage the claw.
- Install 2 bolts.
- Install the 2 assist grip plugs.


11. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

12. INSTALL CENTER PILLAR GARNISH UPPER LH

- Install the pillar garnish and engage the 6 claws.
- Install the 2 bolts.

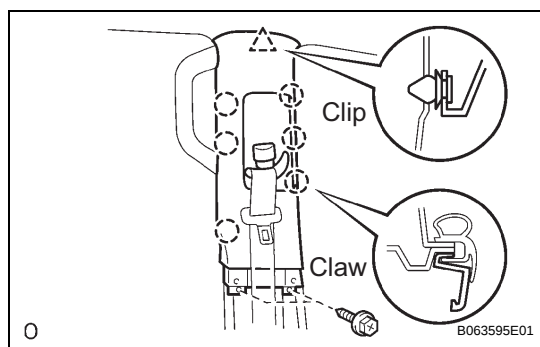


- (c) Install the front seat outer belt (floor anchor side) and install the bolt.

13. INSTALL CENTER PILLAR GARNISH UPPER RH

HINT:

Use the same procedure described for the LH side.

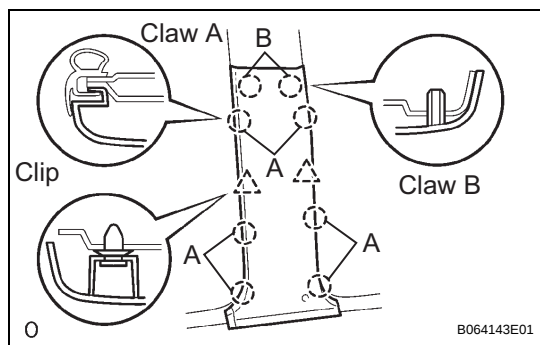

14. INSTALL CENTER PILLAR GARNISH LOWER LH

- (a) Install the 2 clips and pillar garnish. And engage the 6 claws labeled A and 2 claws labeled B.

15. INSTALL CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedure described for the LH side.

16. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER LH

- (a) Install the side garnish and engage the 9 clips.
(b) Install the 3 bolts and clip.
(c) Install the tonneau cover hook and the screw.


17. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER RH

HINT:

Use the same procedure described for the LH side.

18. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER LH (for 50/50 Split Seat Type)

- (a) Install the side garnish and engage the 4 screws.
(b) Engage the 4 clips labeled A and 5 clips labeled B, and install the 3 screws.
(c) Install the rear No. 2 shoulder anchor bolt.

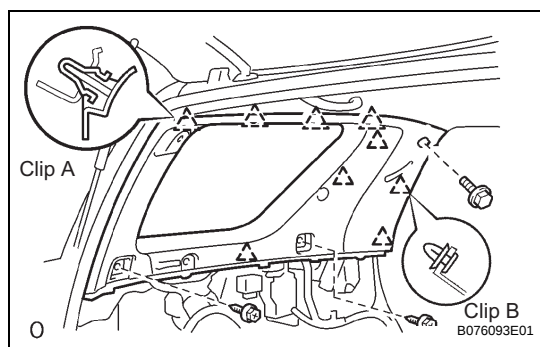

19. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER RH (for 50/50 Split Seat Type)

HINT:


Use the same procedure described for the LH side.

20. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH

- (a) Install the side panel and engage the 6 clips.

- (b) Install the 3 screws and clips.

- (c) Install the screw and deck trim cover.

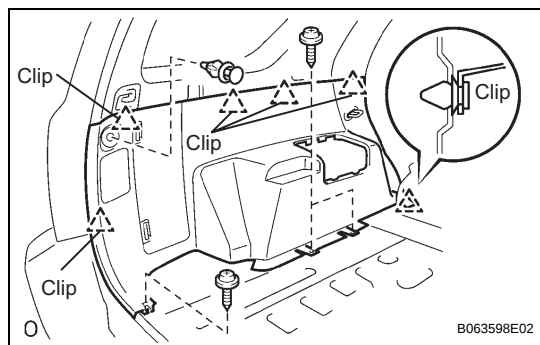


21. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

22. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (for 50/50 Split Seat Type)

- (a) Install the side panel and the 5 clips.

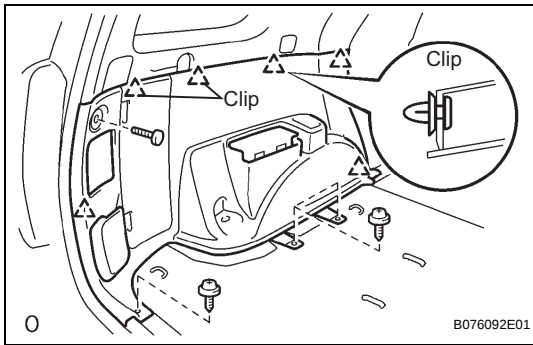

(b) Install the 3 screws and the bolt.

23. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (for 50/50 Split Seat Type)

HINT:

Use the same procedure described for the LH side.

24. INSTALL REAR FLOOR CARPET ASSEMBLY

25. INSTALL DECK TRIM COVER REAR

26. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

27. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

28. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

29. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

30. INSTALL COWL SIDE TRIM BOARD LH


(a) Install the trim board and engage the 2 claws.

(b) Install the cap nut.

31. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure described for the LH side.

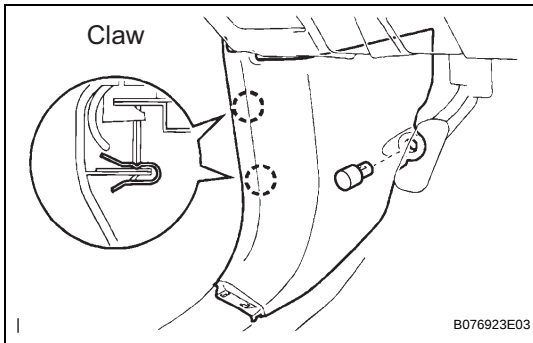


32. INSTALL FRONT DOOR SCUFF PLATE LH

(a) Install the scuff plate. Engage the claw labeled A, claw labeled B, 4 claws labeled C, claw labeled D and claw labeled E.

33. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

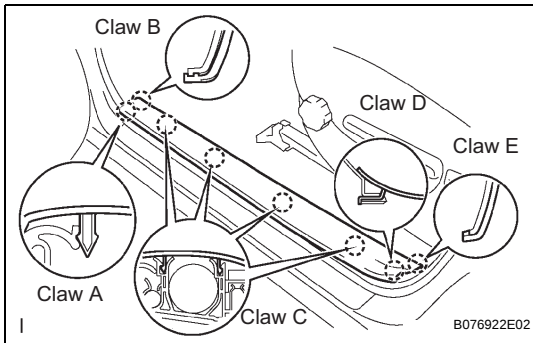


34. INSTALL REAR DOOR SCUFF PLATE LH


(a) Install the scuff plate. Engage the claw labeled A, claw labeled B, 2 claws labeled C and claw labeled D.

35. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

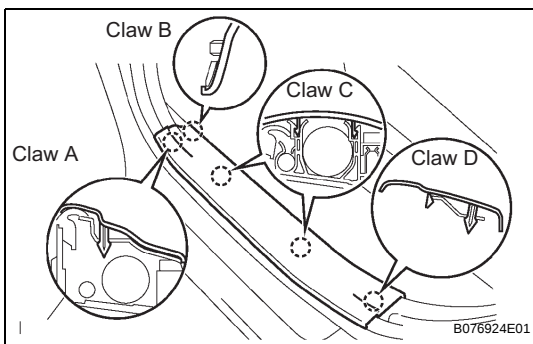

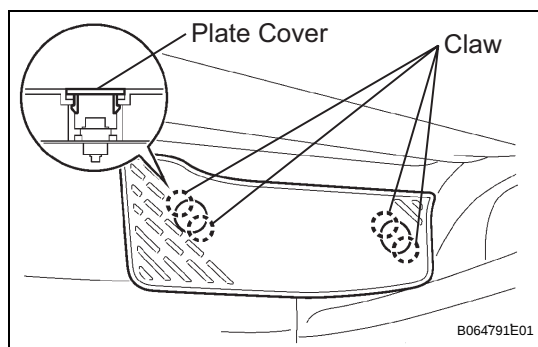

36. INSTALL QUARTER SCUFF PLATE INSIDE LH (for 50/50 Split Seat Type)

- (a) Install the scuff plate and the 2 bolts.
- (b) Engage the 4 claws and covers.

37. INSTALL QUARTER SCUFF PLATE INSIDE RH (for 50/50 Split Seat Type)

HINT:

Use the same procedure described for the LH side.

38. INSTALL SIDE TRIM BOX ASSEMBLY LH

- (a) Install the side trim box and the screws.

39. INSTALL SIDE TRIM BOX ASSEMBLY RH

- (a) Install the side trim box and the screws.

40. INSTALL DECK TRIM SIDE BOARD UPR LH

- (a) Install the side board and the screw.

41. INSTALL DECK TRIM SIDE BOARD UPR RH

- (a) Install the side board and the screw.

42. INSTALL DECK TRIM COVER REAR

- (a) Install the trim cover.



43. INSTALL DECK FLOOR BOX LH

- (a) Install the deck floor box, luggage hold belt and bolt.
- (b) Install the cover and the claws.

44. INSTALL DECK FLOOR BOX RH


HINT:

Use the same procedure described for the LH side.

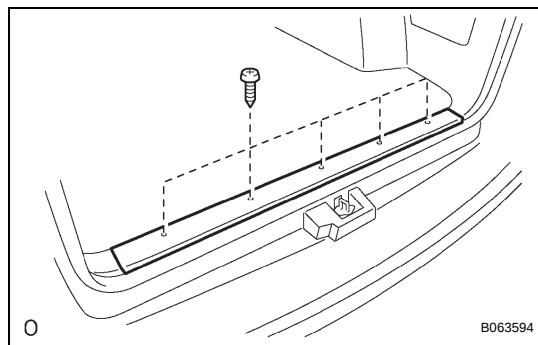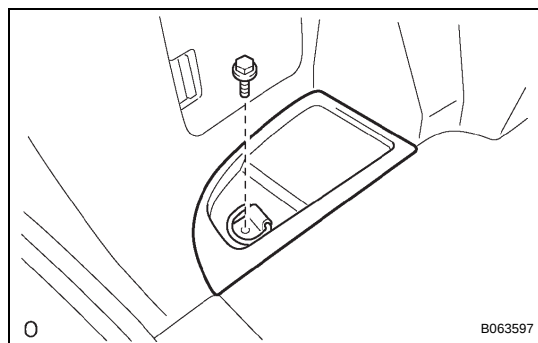

45. INSTALL REAR FLOOR MAT SUPPORT PLATE REAR

- (a) Install the mat support plate and 5 bolts.

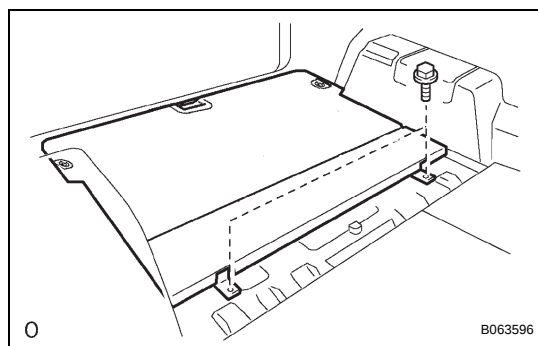

46. INSTALL DECK BOARD ASSEMBLY

- (a) Install the deck board assembly and the 2 bolts.

47. INSTALL DECK BOARD SUB-ASSEMBLY

- (a) Install the deck board sub-assembly and the 2 bolts.


48. INSTALL BACK DOOR WEATHERSTRIP

49. INSTALL SEAT ANCHOR RAIL NO. 4 (for 50/50 Split Seat Type)

- (a) Install the 2 covers, 2 bolts and anchor rail.

50. INSTALL REAR NO. 2 SEAT LOCK ASSEMBLY LH

- (a) Install the seat lock and 2 bolts.

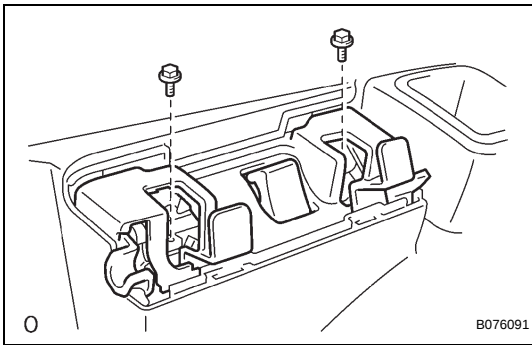

- 51. INSTALL REAR NO. 2 SEAT LOCK ASSEMBLY RH**
(a) Install the seat lock and 2 bolts.
- 52. INSTALL NO. 3 SEAT LEG COVER NO. 2 (for 50/50 Split Seat Type)**
- 53. INSTALL REAR NO. 2 SEAT ASSEMBLY (for 50/50 Split Seat Type)**
HINT:
See page [SE-38](#)
- 54. INSTALL TONNEAU COVER RETRACTOR SUB-ASSEMBLY**