



STEERING ANGLE SENSOR

COMPONENTS

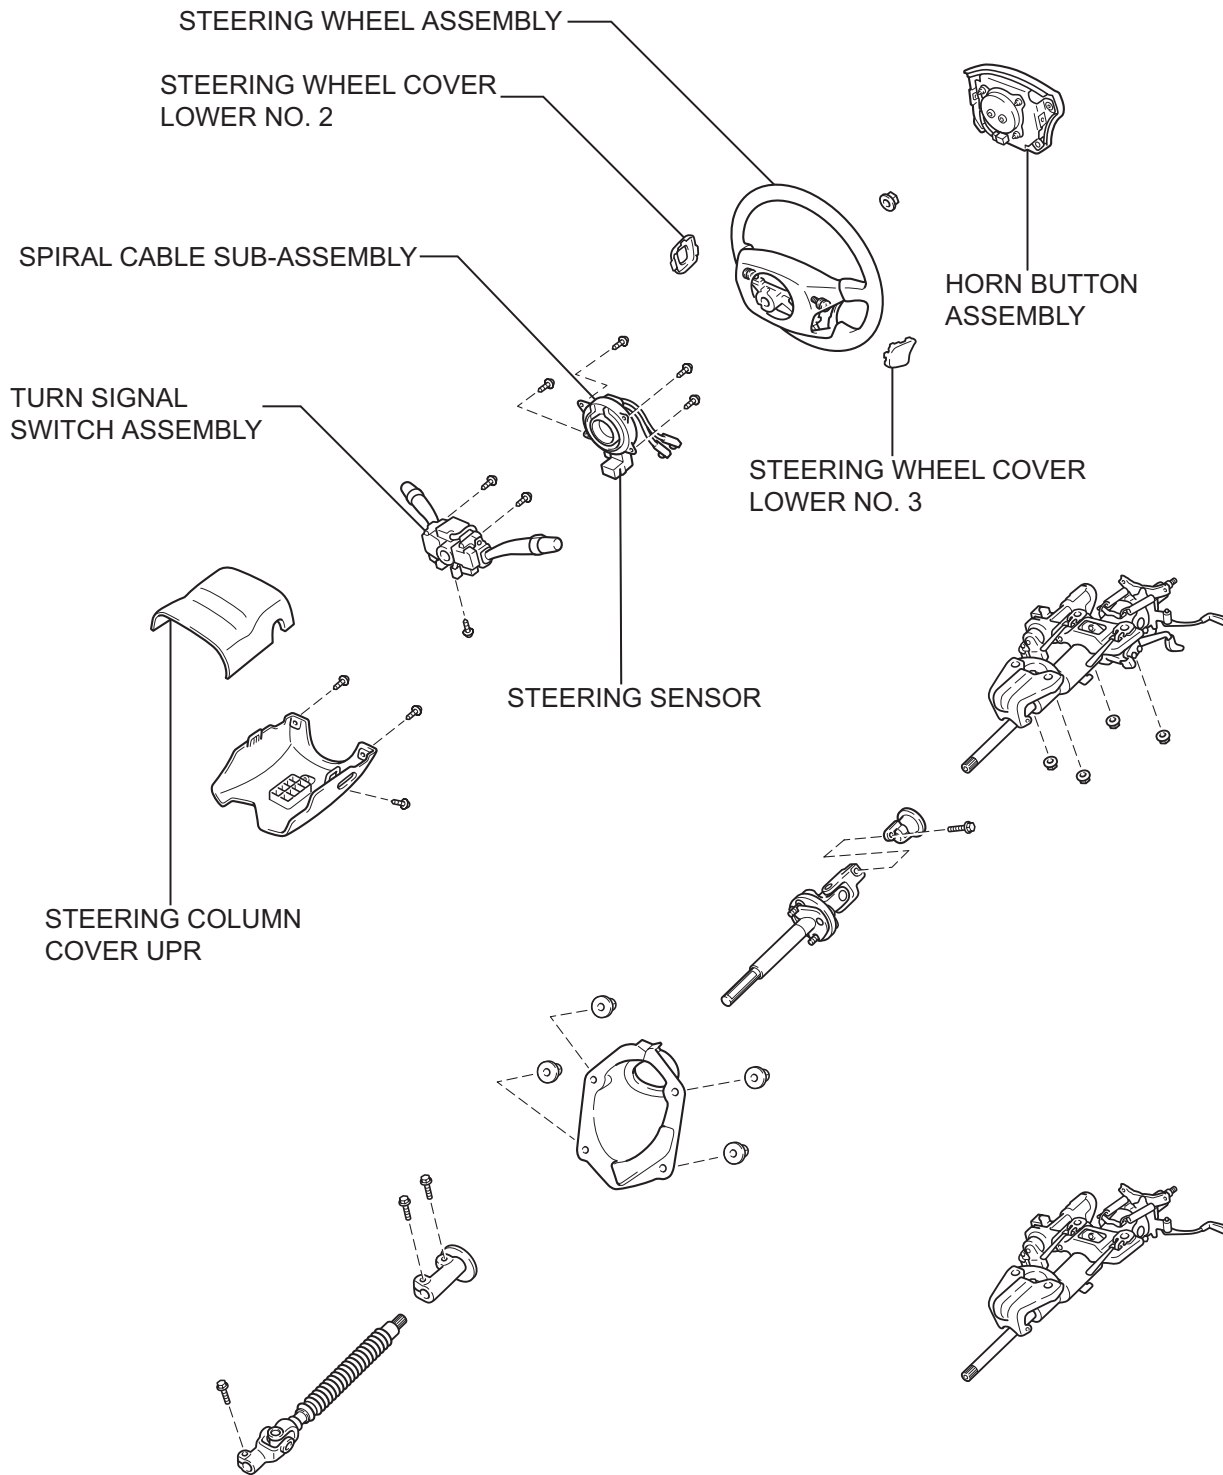


REMOVAL

1. PRECAUTION (See page [SR-8](#))
2. DISCONNECT BATTERY NEGATIVE TERMINAL
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE STEERING WHEEL COVER LOWER NO. 3
5. REMOVE STEERING WHEEL COVER LOWER NO. 2
6. REMOVE HORN BUTTON ASSEMBLY (See page [SR-8](#))
7. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-9](#))
8. REMOVE STEERING COLUMN COVER UPR
9. REMOVE SPIRAL CABLE SUB-ASSEMBLY (See page [SR-9](#))
10. REMOVE TURN SIGNAL SWITCH ASSEMBLY (See page [SR-10](#))
11. REMOVE STEERING SENSOR
 - (a) Remove the steering sensor connector.

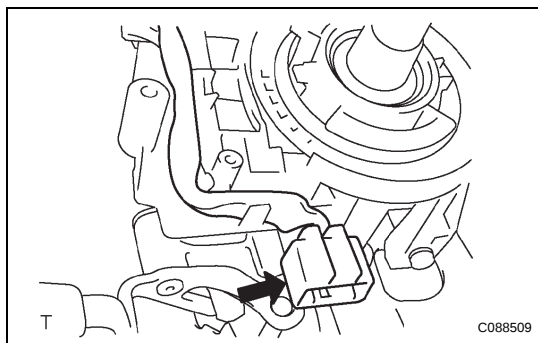



- (b) Remove the 2 claws, then remove the steering sensor.

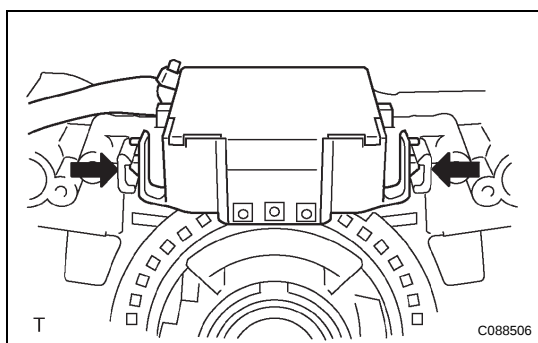

INSTALLATION

1. INSTALL STEERING SENSOR
 - (a) Install the steering sensor.

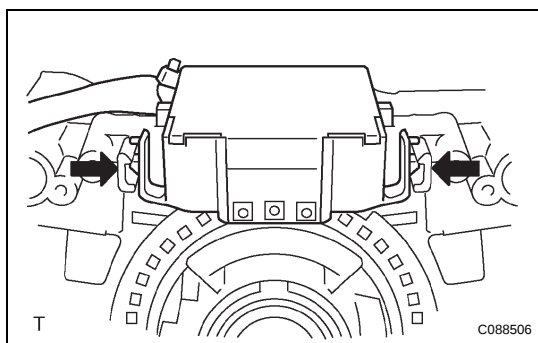

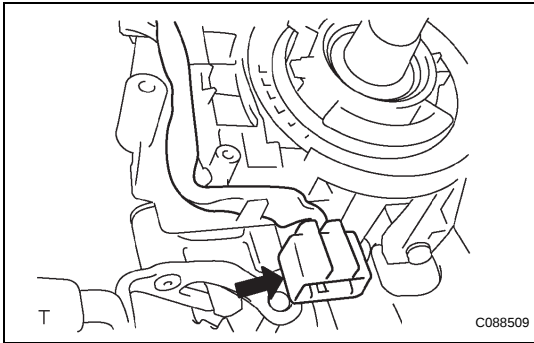

(b) Install the steering sensor connector.

2. **INSTALL TURN SIGNAL SWITCH ASSEMBLY** (See page [SR-21](#))
3. **INSPECT SPIRAL CABLE SUB-ASSEMBLY** (See page [RS-398](#))
4. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
5. **INSTALL SPIRAL CABLE SUB-ASSEMBLY** (See page [SR-21](#))
6. **INSTALL STEERING COLUMN COVER UPR** (See page [SR-21](#))
7. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-21](#))
8. **INSTALL HORN BUTTON ASSEMBLY** (See page [SR-21](#))
9. **INSTALL STEERING WHEEL COVER LOWER NO. 2**
10. **INSTALL STEERING WHEEL COVER LOWER NO. 3**
11. **INSPECT SRS WARNING LIGHT** (See page [SR-22](#))
12. **PERFORM STEERING ANGLE SENSOR ZERO POINT CALIBRATION**
[BC-20](#)
13. **CHECK VSC SENSOR SIGNAL**
[BC-23](#)