


INTERIOR LIGHT

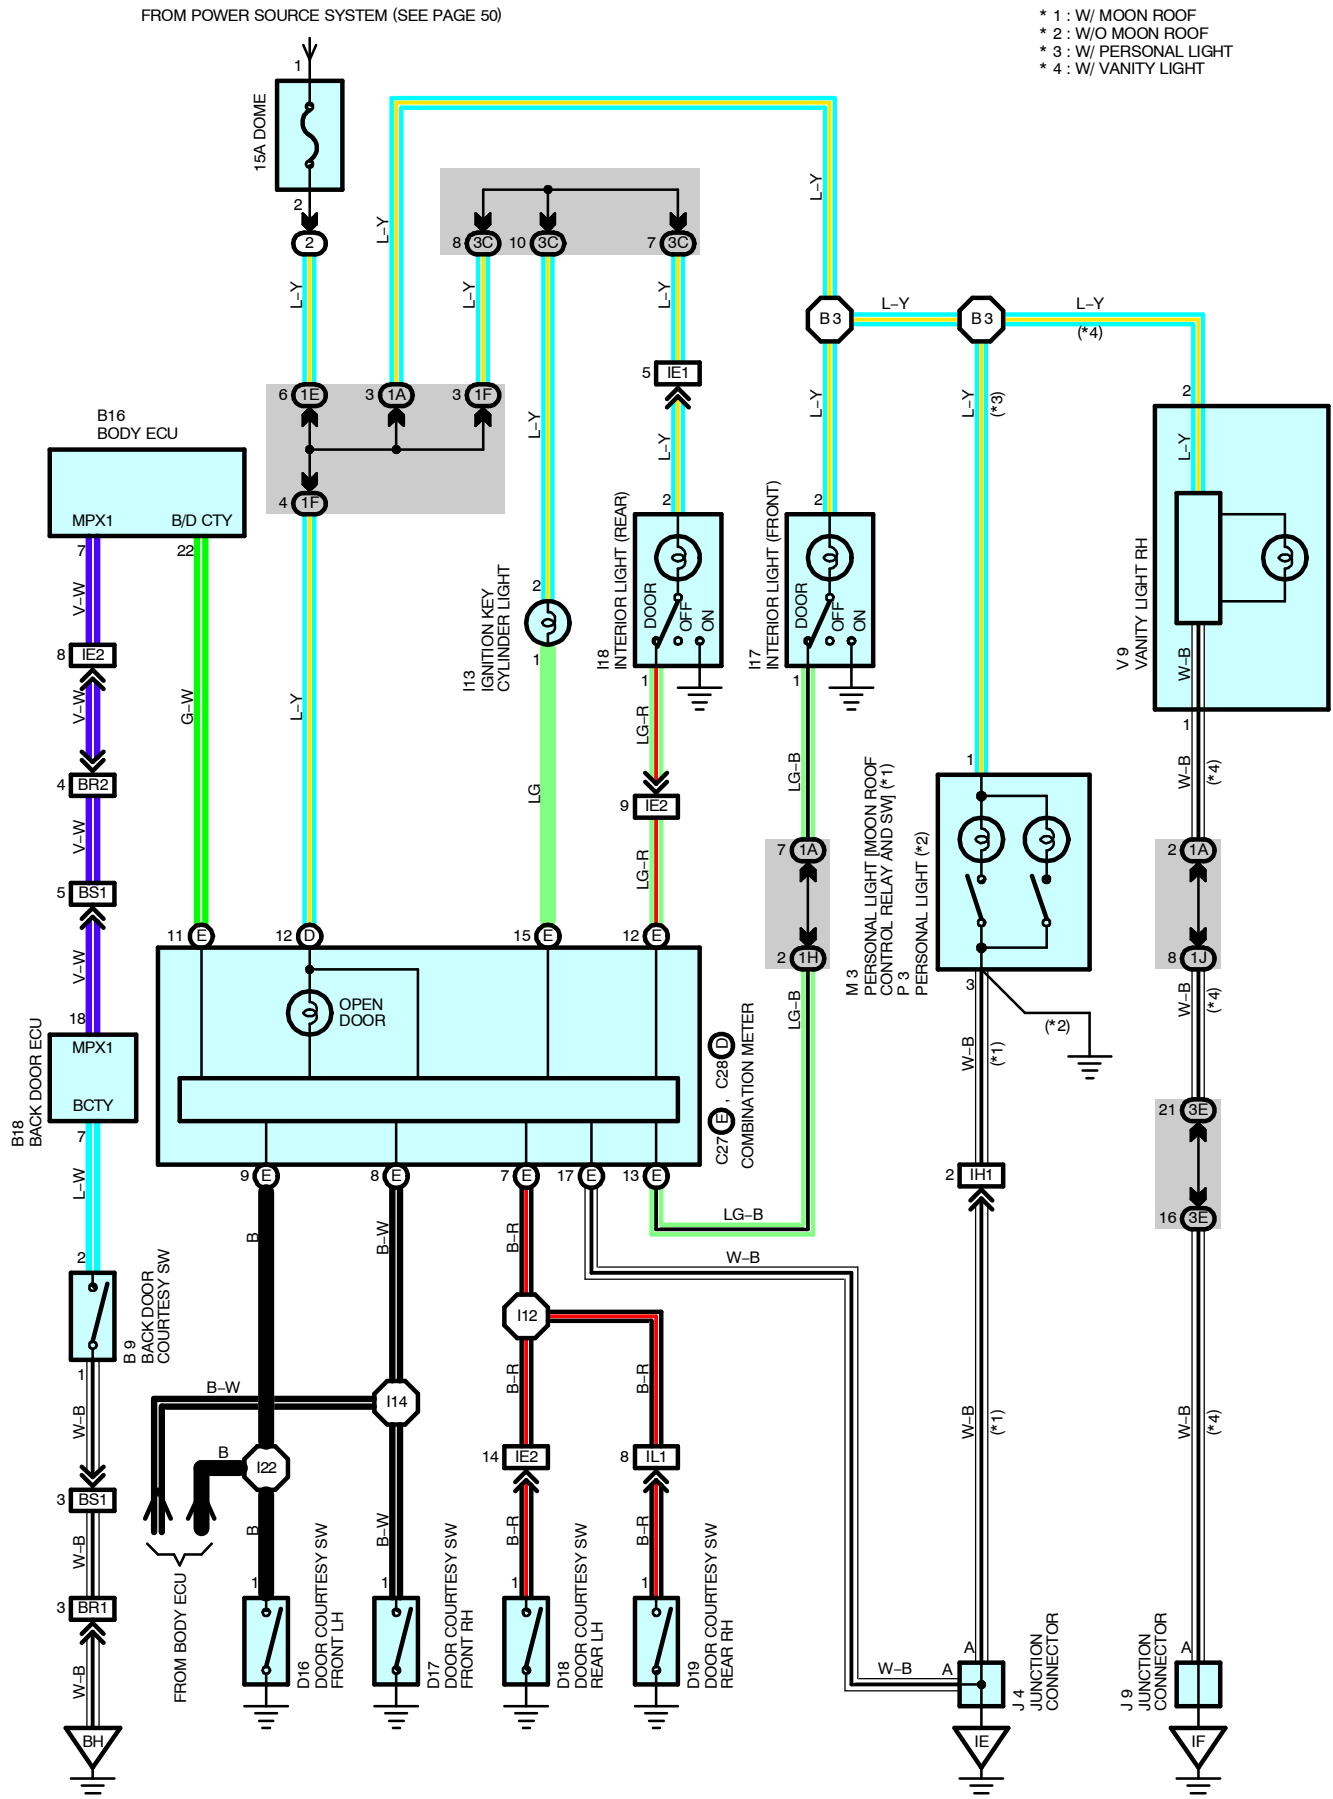

SYSTEM OUTLINE

NORMAL OPERATION

- * When the front door LH, RH rear door LH or RH is opened
When the door is opened, the interior light (Front) and open door warning light is turned on. When the front door LH, RH rear door LH and RH are closed, the interior light (Front) is turned off.
- * When the back door is opened, interior light (Rear) and the open door warning light is turned on. When back door is closed, the interior light (Rear) is turned off.
- * When all the doors are closed, the open door warning light is turned off.

ILLUMINATED ENTRY SYSTEM

- * When driver's door is opened, the ignition key cylinder light is turned on.
- * The ignition key cylinder light remains on for approx. 5 seconds after driver's door is closed.

SERVICE HINTS

D16, D17, D18, D19 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : Closed with door open

B9 BACK DOOR COURTESY SW

1-2 : Closed with door open

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B9	34	D17	34	J4	33
B16	32	D18	34	J9	33
B18	34	D19	34	M3	35
C27	E 32	I13	33	P3	35
C28	D 32	I17	34	V9	35
D16	34	I18	34		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Roof Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1H		
1J		
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IE2		
IH1	42	Roof Wire and Cowl Wire (Instrument Panel Reinforcement Left)
IL1	42	Cowl Wire and Floor Wire (Right Kick Panel)
BR1	44	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BR2		
BS1	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

INTERIOR LIGHT



: GROUND POINTS

Code	See Page	Ground Points Location
IE	42	Cowl Side Panel LH
IF	42	Cowl Side Panel RH
BH	44	Left Quarter Panel Inner



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I12	42	Cowl Wire	I22	42	Cowl Wire
I14			B3	44	Roof Wire

