



ILLUMINATION

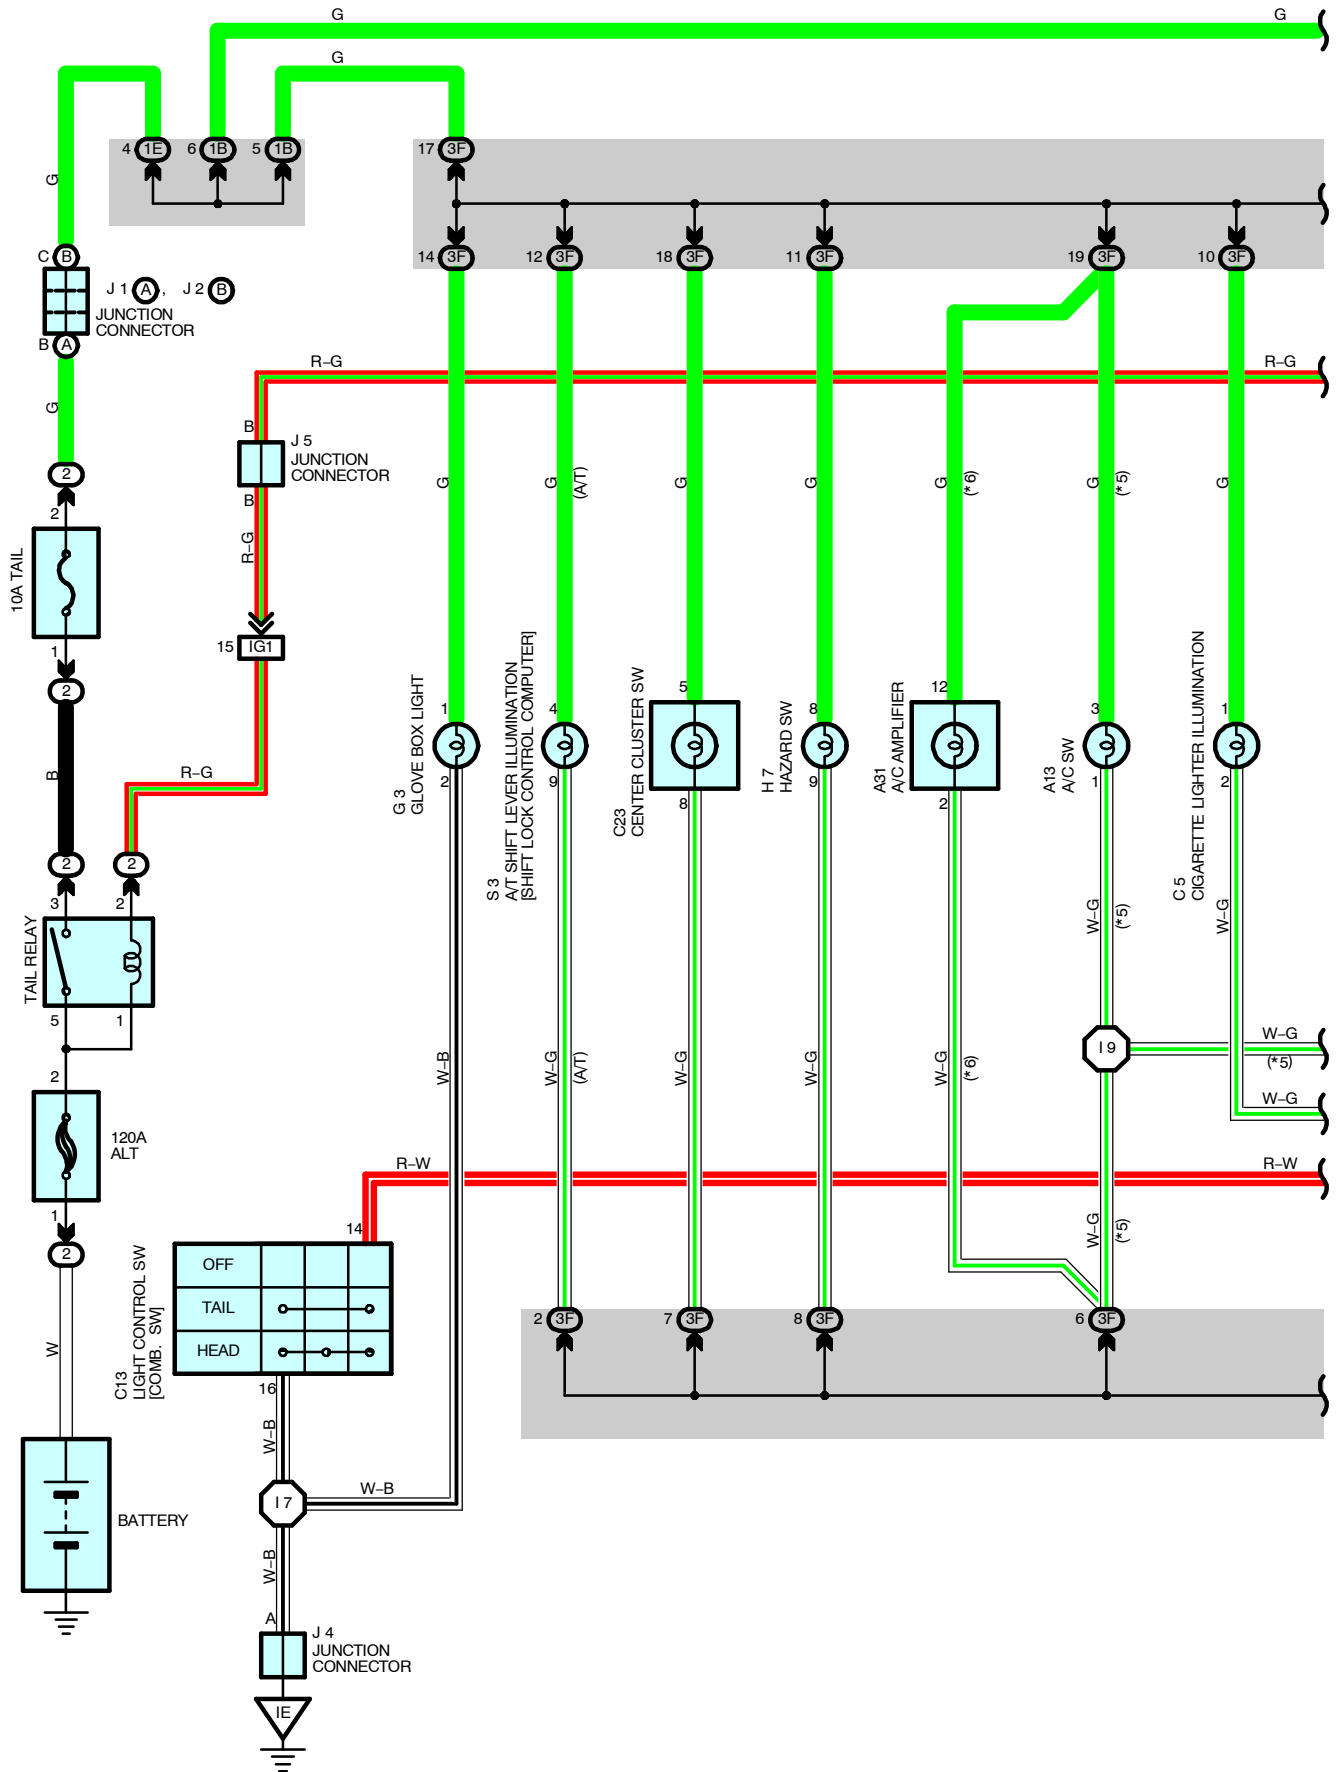

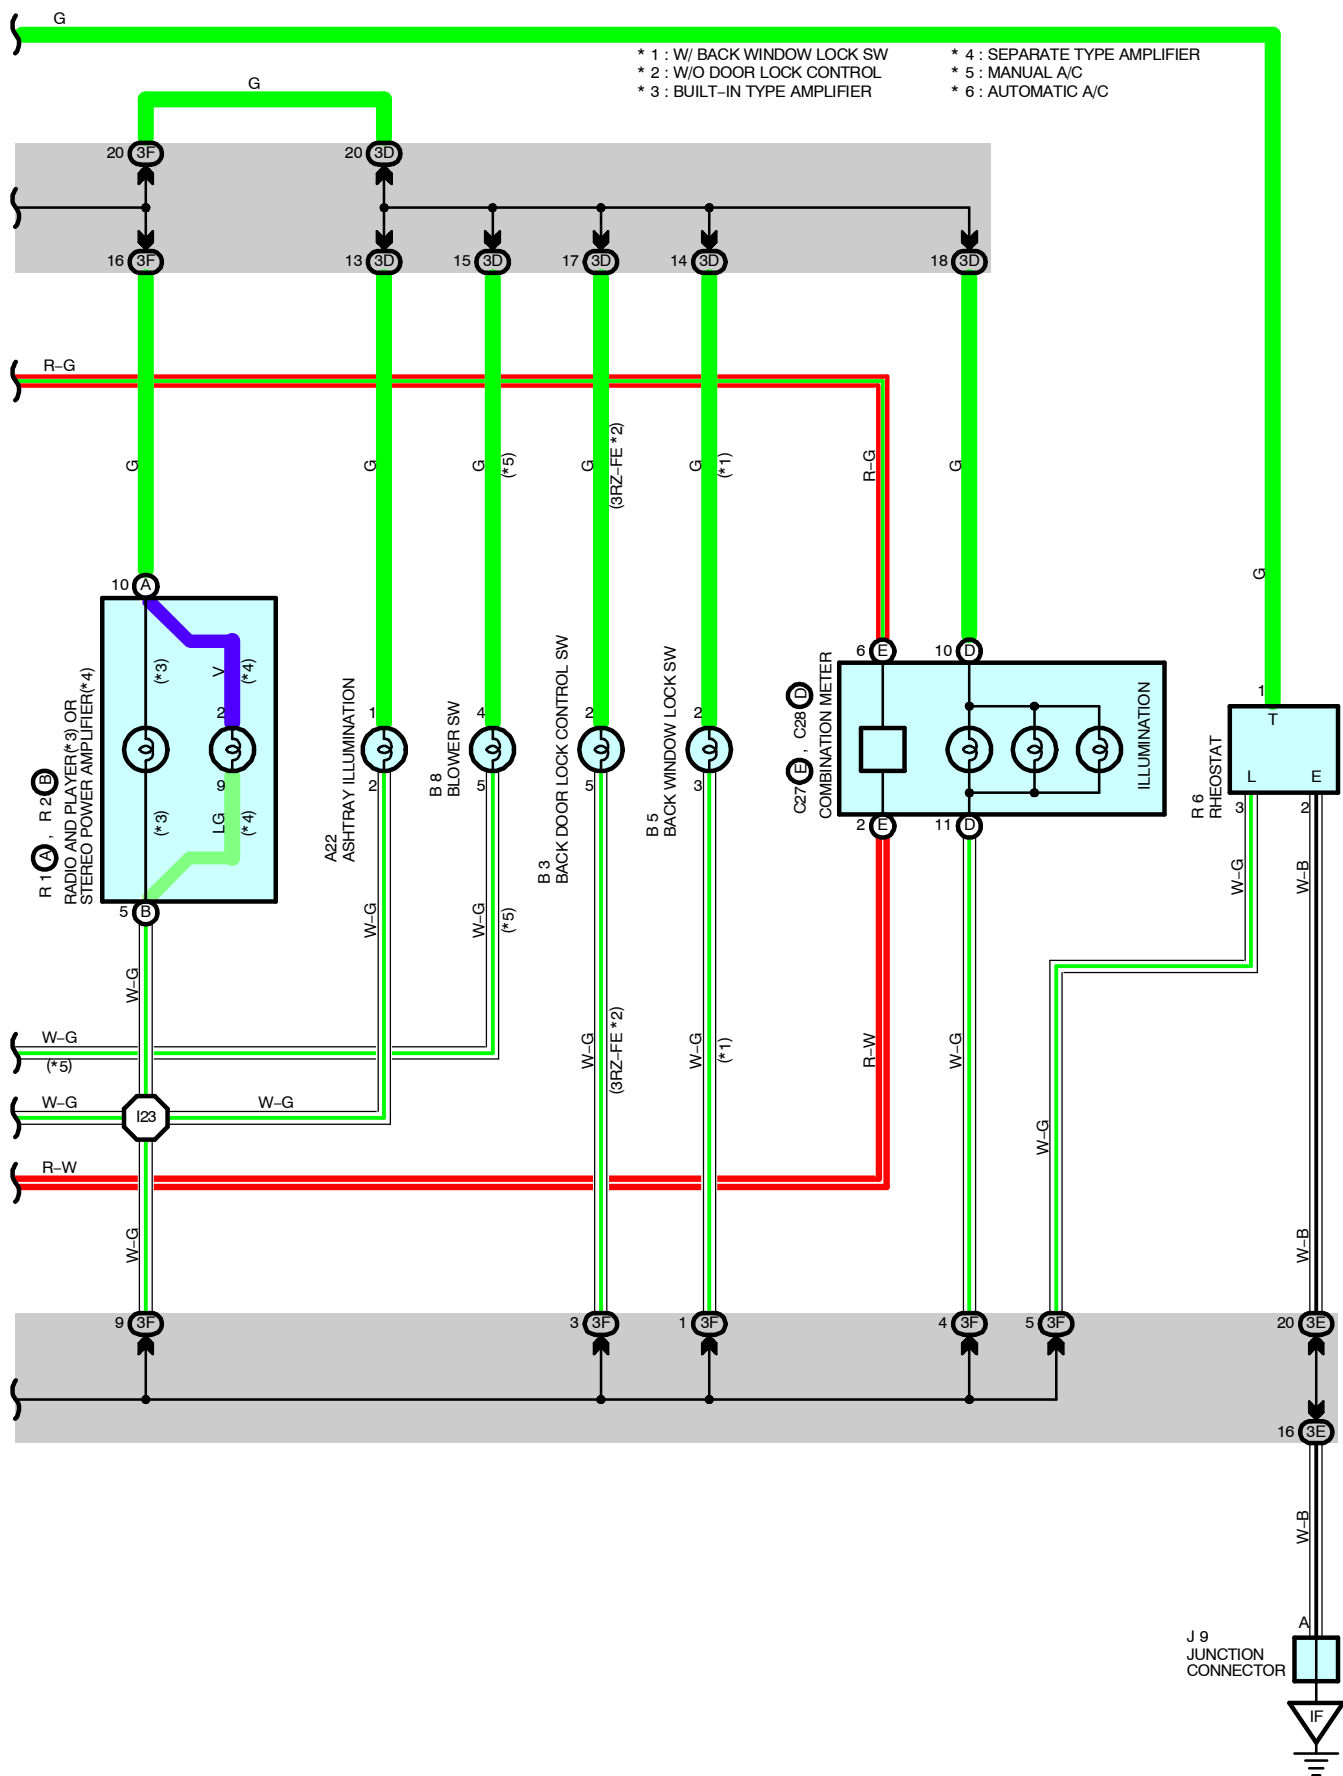

ILLUMINATION

SERVICE HINTS

C13 LIGHT CONTROL SW [COMB. SW]

14–16 : Closed with light control SW at **TAIL** or **HEAD** position

TAIL RELAY [ENGINE ROOM R/B]

5–3 : Closed with light control SW at **TAIL** or **HEAD** position

R6 RHEOSTAT

1–2 : Approx. **12** volts with rheostat fully turned counterclockwise and **0** volts with fully turned clock wise

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A13	32	C23	32	J2	B 31 (3RZ–FE)
A22	32	C27	E 32	J4	33
A31	32	C28	D 32	J5	33
B3	32	G3	33	J9	33
B5	32	H7	33	R1	A 33
B8	32	J1	A	R2	B 33
C5	32			R6	33
C13	32	J2	B	S3	33
					29 (5VZ–FE)
					31 (3RZ–FE)
					29 (5VZ–FE)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
3D	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		
3F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	42	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	42	Cowl Side Panel LH
IF	42	Cowl Side Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I7	42	Cowl Wire	I23	42	Cowl Wire
I9					

