

Initialization of Back Door Power Window

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2010	4Runner	

Introduction

This bulletin outlines the initialization procedure for the back door power window on the 4Runner.

To minimize the battery discharge during transportation and storage, the Short Pin has been removed at the assembly plant, resulting in the following feature being inoperative:

- One-touch open and close with jam protection.

Use the following initialization procedure after installing the Short Pin during Pre-Delivery Service (PDS) and whenever the battery has been disconnected.

NOTE

Any time the battery terminal has been disconnected, the back door power window MUST be re-initialized.


Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—

Initialization of Back Door Power Window

Initializing Procedure

1. Cycle ignition switch to the "IG-ON" position.
2. Push the back door power window switch "DOWN" to open the window. **Figure 1.**

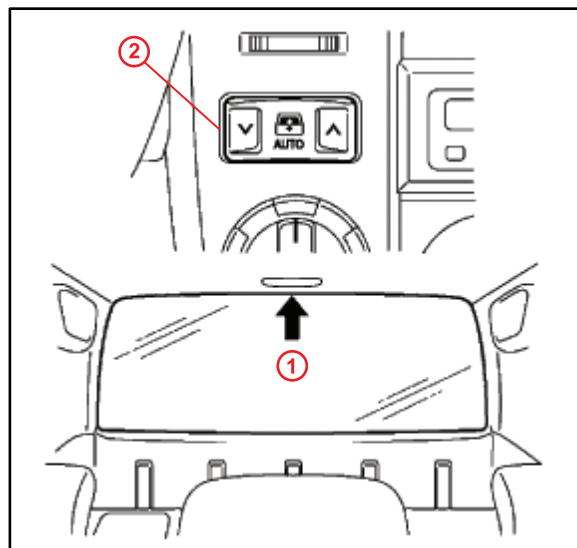

1	Completely Closed
2	Window Switch

3. Push and hold the back door power window switch "UP" until the window closes. Continue holding it for approximately 1 second.
4. Check for proper operation of the "one-touch open/close" functions by pushing the switch briefly "DOWN" and then "UP".

NOTE

Jam protection function becomes effective through the above initialization procedure.