


180

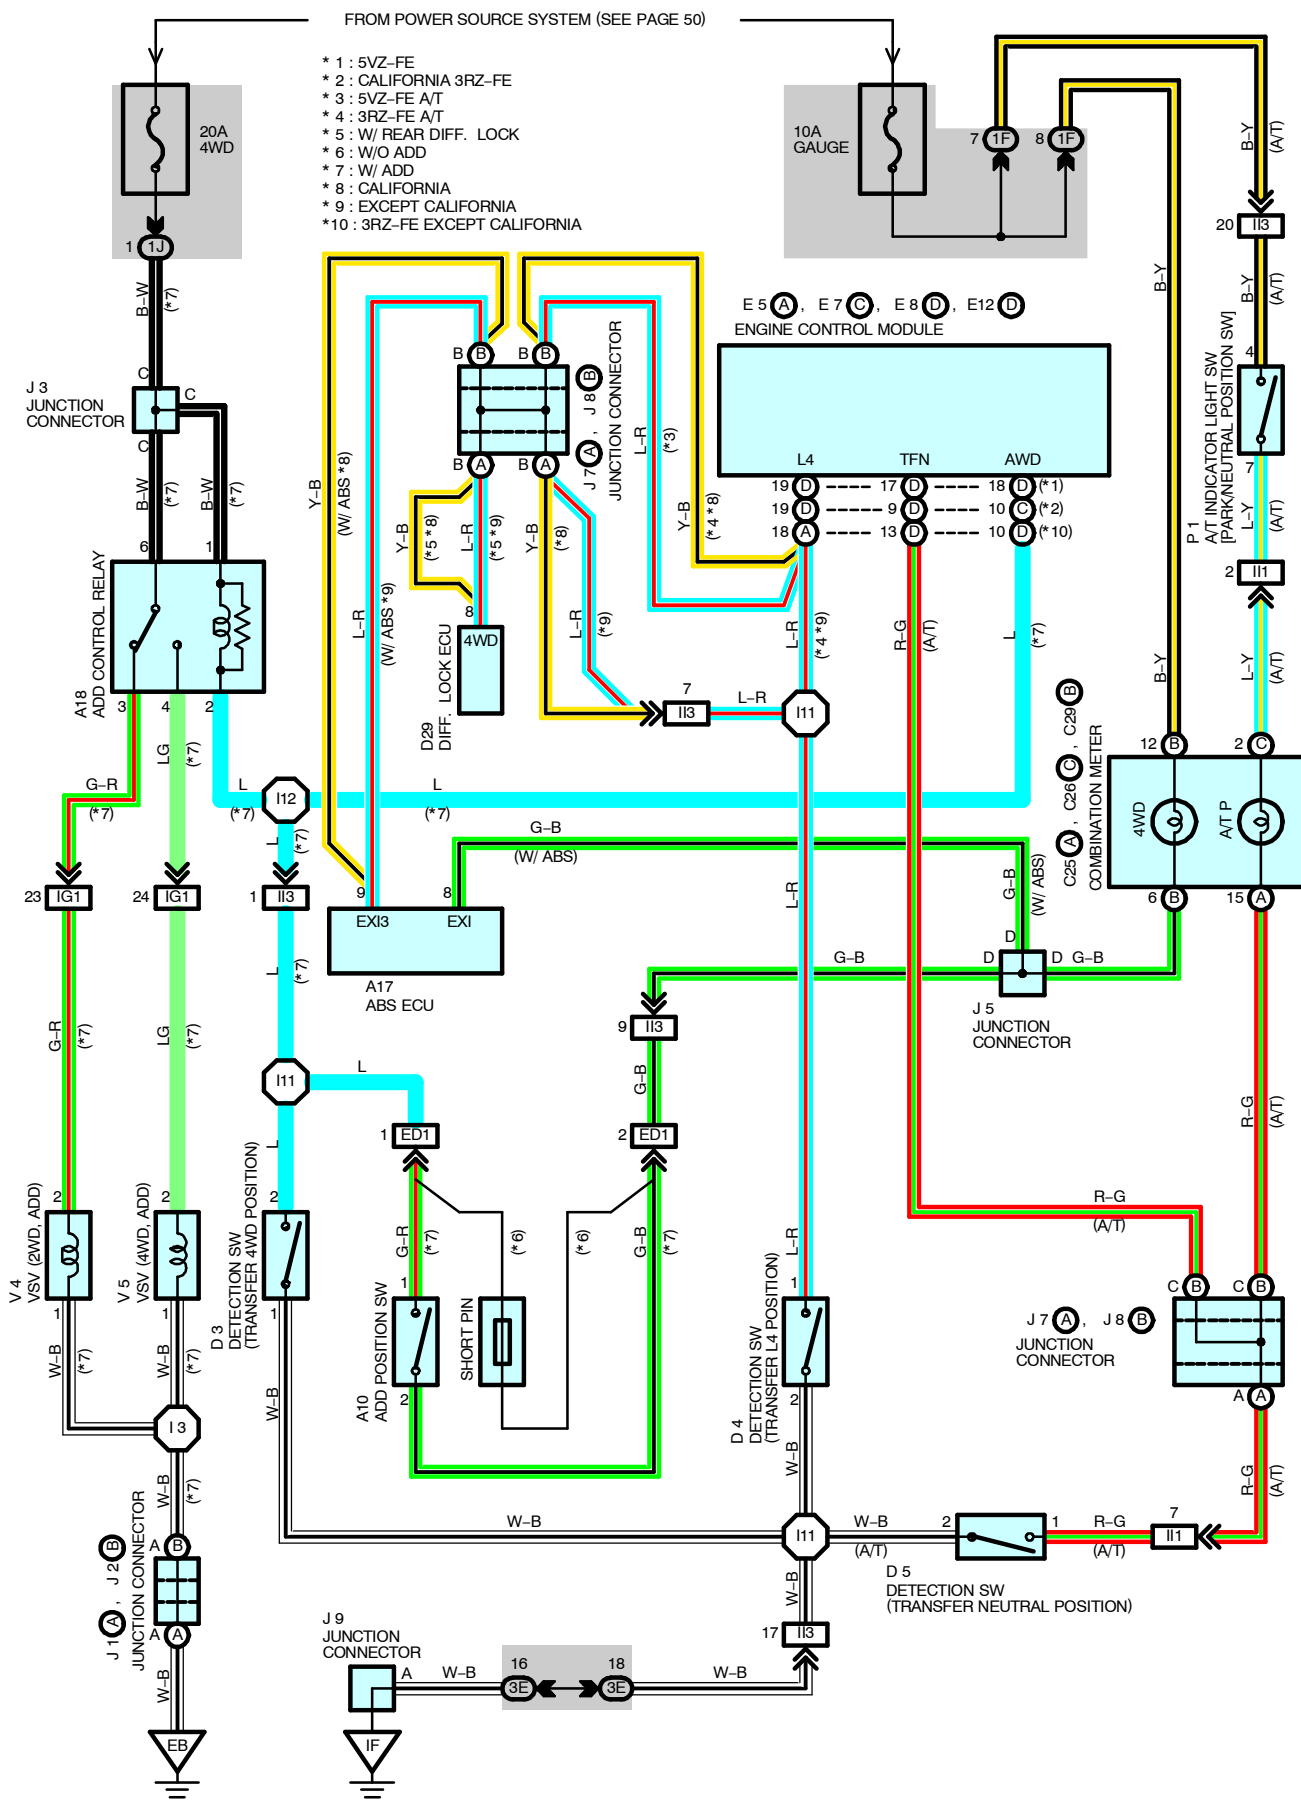

SERVICE HINTS

P1 A/T INDICATOR LIGHT SW [PARK/NEUTRAL POSITION SW]

4-7 : Closed with A/T shift position at **P** position

D5 DETECTION SW (TRANSFER NEUTRAL POSITION)

1-2 : Closed with transfer position at **NEUTRAL** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A10	28 (5VZ-FE)	D5	28 (5VZ-FE)	J3	33
	30 (3RZ-FE)		30 (3RZ-FE)	J5	33
A17	32	D29	32	J7	A 33
A18	32	E5	A 33	J8	B 33
C25	A 32	E7	C 33	J9	33
C26	C 32	E8	D 33	P1	29 (5VZ-FE)
C29	B 32	E12	D 33		31 (3RZ-FE)
D3	28 (5VZ-FE)	J1	A 29 (5VZ-FE)	V4	29 (5VZ-FE)
	30 (3RZ-FE)		31 (3RZ-FE)		31 (3RZ-FE)
D4	28 (5VZ-FE)	J2	B 29 (5VZ-FE)	V5	29 (5VZ-FE)
	30 (3RZ-FE)		31 (3RZ-FE)		31 (3RZ-FE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		
3E	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	38 (5VZ-FE)	Engine Wire and Front Differential Wire (Near the Front Differential)
	40 (3RZ-FE)	Engine Wire and Front Differential Wire (Near the Starter)
IG1	42	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
II1	42	Engine Wire and Cowl Wire (On the Glove Box)
II3		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	38 (5VZ-FE)	Front Left Fender
	40 (3RZ-FE)	
IF	42	Cowl Side Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	42	Engine Room Main Wire	I12	42	Cowl Wire
I11	42	Engine Wire			