

2004 TOYOTA 4RUNNER REMOTE PROGRAMMING

Have all transmitters for the vehicle at hand

1. With the key out of the ignition, unlock and open drivers door (all other doors must be closed)

2. Within 5 seconds,

Insert the key into the ignition (Do NOT Turn it) and Pull key out.

Insert the key into the ignition (Do NOT Turn it) and Pull key out.

3. Within 40 seconds,

Close then open the drivers door.

Close then open the drivers door.

Insert the key into the ignition (Do NOT Turn it) and Pull key out.

4. Within 40 seconds.

Close then open the drivers door.

Close then open the drivers door.

Insert the key into ignition and leave it in the ignition.

Close the drivers door. Turn the ignition to ON then back to OFF (Do NOT Start or crank engine).

Remove the key from the ignition.

5. Within 3 seconds, the power door locks should lock then unlock automatically indicating successful entry into programming mode. Return to step 1 if the door locks do not cycle at this point or try the alternate procedure listed below.

6. Within 40 second,

A. Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds.

B. Immediately after letting go of the lock and unlock buttons, press and hold the lock button by itself.

Within 10 seconds, the door locks should lock and then unlock once indicating successful programming.

(If the door locks cycle twice, repeat steps A and B in step 6 as the remote was not accepted)

Repeat steps A and B in step 6 for each new remote.

7. Open drivers door.

Alternate programming procedure: Have all remotes for the vehicle ready. Toyota Avalon vehicles use step 10a, all other vehicles use 10b.



1. Make sure all doors are closed
2. Open Driver's door
3. Insert key into ignition, then remove it
4. Press LOCK and UNLOCK on the vehicle door lock switch at 1 second intervals 5 times.
5. Close and re-open driver's door
6. Press LOCK and UNLOCK on the vehicle door lock switch at 1 second intervals 5 times.
7. Insert key into ignition switch
8. Turn the ignition to ON then back to OFF (Do NOT Start or crank engine).
9. Remove Key from ignition
10. Door locks should cycle to confirm entry into programming mode
 - a. AVALON – Press LOCK on remote for a minimum of 1 second
 - b. ALL OTHER VEHICLES – Press and hold LOCK & UNLOCK together for 1.5 seconds; then press and hold LOCK until the locks cycle
11. Locks should cycle once to confirm programming. If they cycle twice, the programming failed
12. Repeat button procedure to program remaining remotes
13. Close driver's door. Test remotes.



View PDF Manual

[View User Manual](#)

[Find Manuals Now](#)

