


REMOVAL HOLE COVER

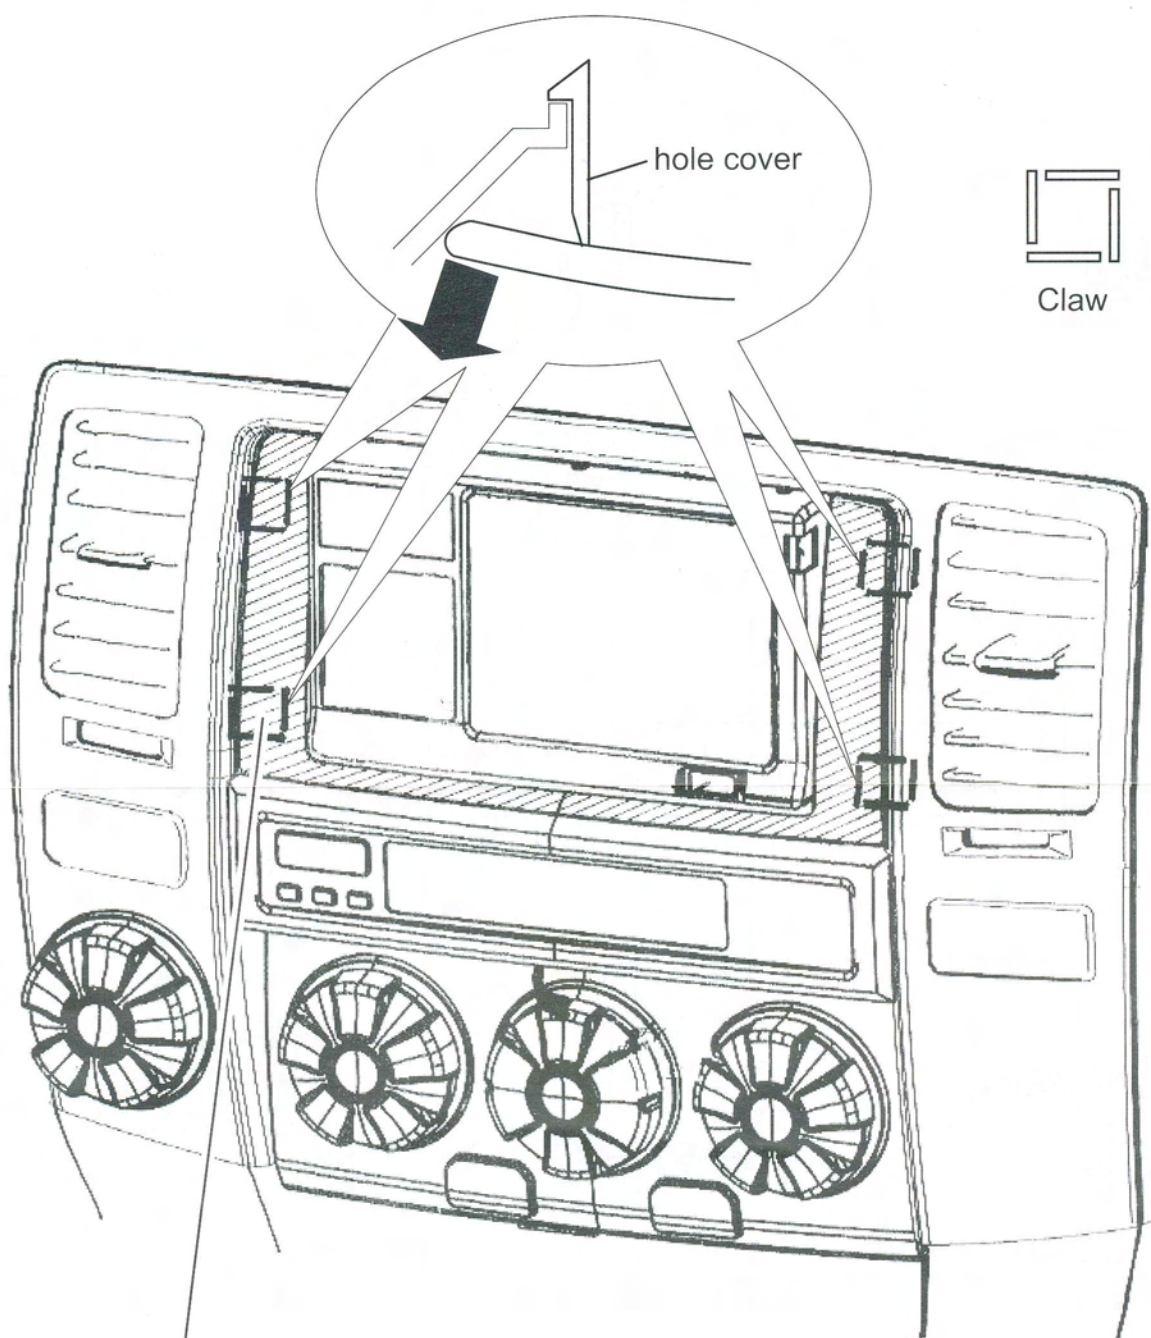

Disengage the 4 claws and remove the hole cover.

ELECTRICAL WIRING DIAGRAM NAVIGATION SYSTEM

