


Last Modified: 5-10-2010	6.4 K	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000476B000X
Title: EXTERIOR PANELS / TRIM: REAR BUMPER: COMPONENTS (2010 4Runner)		

COMPONENTS


ILLUSTRATION

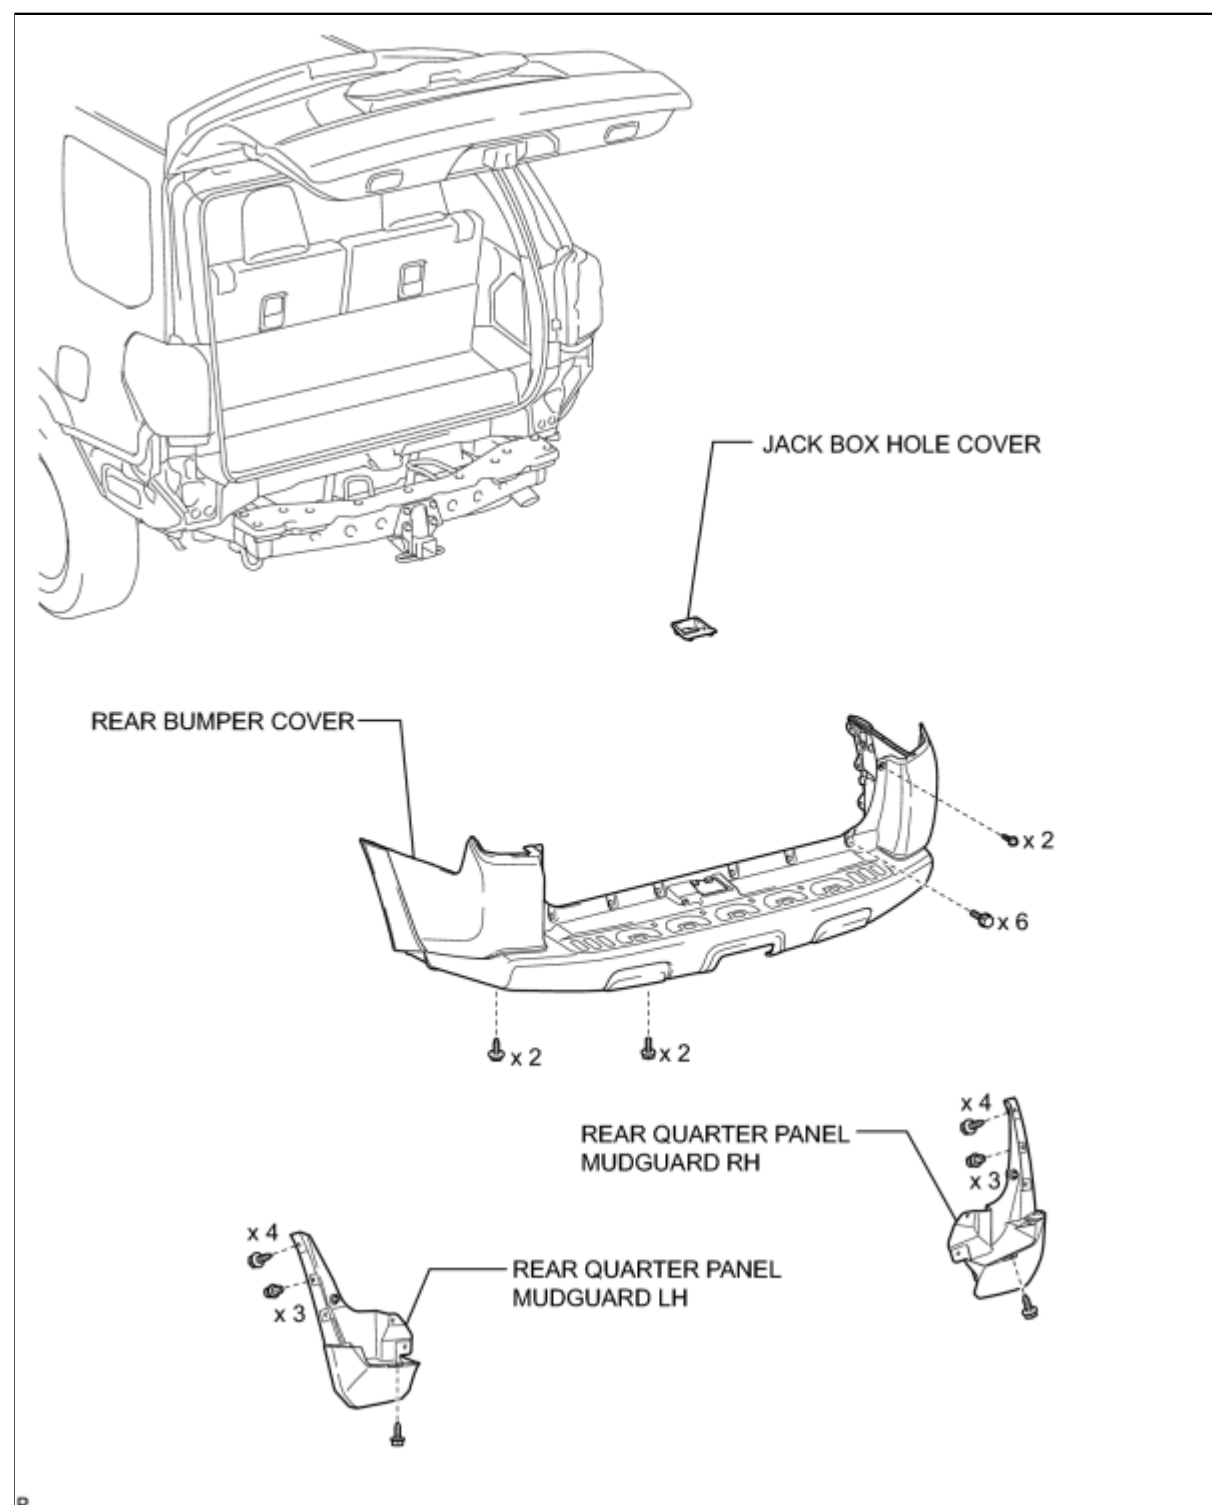

Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM0000038K200DX
Title: EXTERIOR PANELS / TRIM: REAR BUMPER: REMOVAL (2010 4Runner)		

REMOVAL

1. REMOVE JACK BOX HOLE COVER

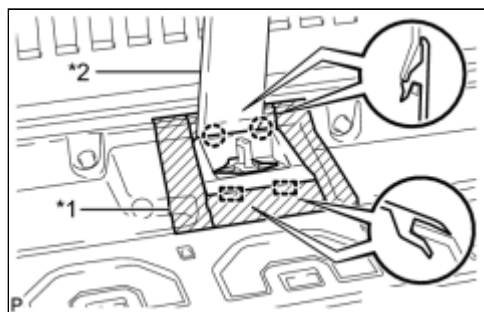

- Put protective around the jack box hole cover.
- Using a moulding remover, Detach the 2 claws, 2 guide and remove the jack box hole cover.

Text in Illustration

*1	Protective Tape
*2	Moulding Remover

2. REMOVE REAR QUARTER PANEL MUDGUARD LH

INFO


3. REMOVE REAR QUARTER PANEL MUDGUARD RH

HINT:

Use the same procedure described for the LH side.

4. REMOVE REAR BUMPER COVER

- Remove the 2 bolts and 2 screws.

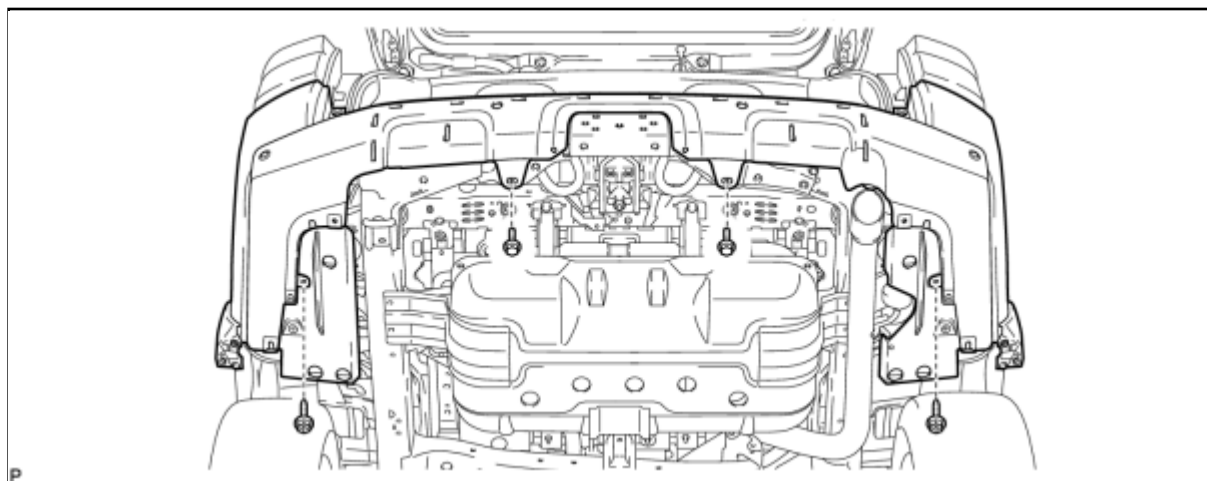


- Put protective tape around the rear bumper cover.
- Remove the 2 screws and 6 bolts.
- w/ Intuitive Parking Assist System:

Detach the 18 claws and disconnect the connector.

(e) w/o Intuitive Parking Assist System:


Detach the 18 claws.

(f) Remove the rear bumper cover.

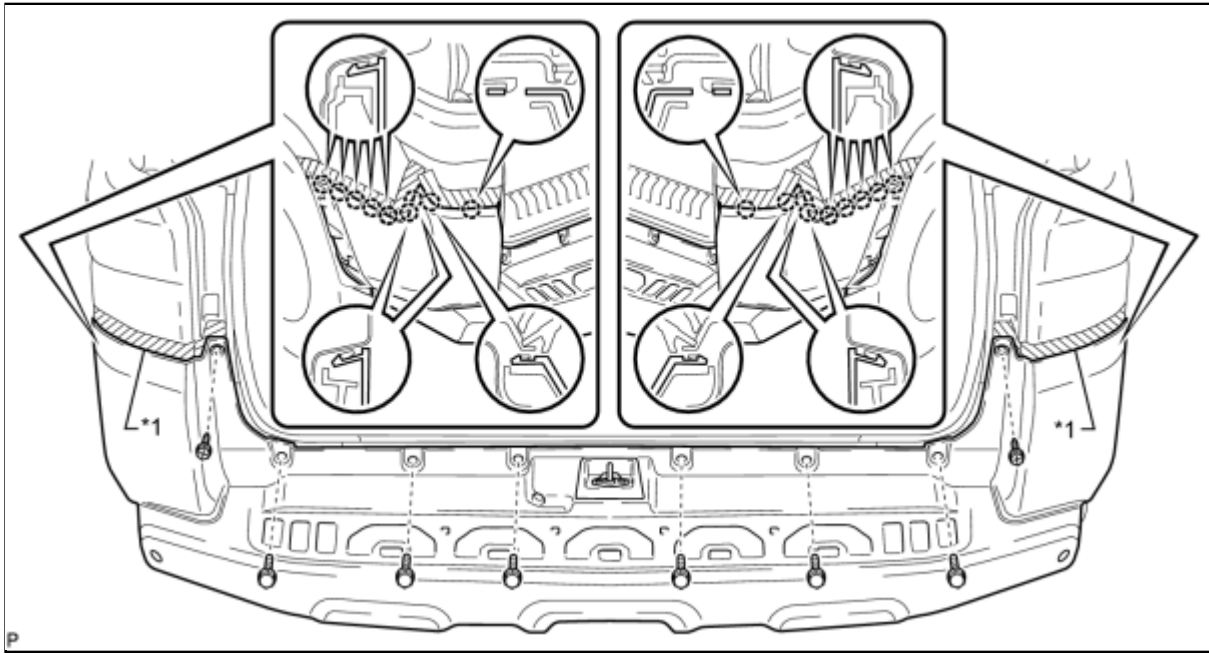

Text in Illustration

* 1	Protective Tape	-	-
-----	-----------------	---	---

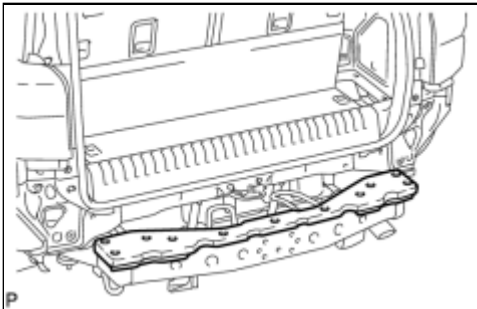

5. REMOVE REAR BUMPER ENERGY ABSORBER

(a) Remove the rear bumper energy absorber.

6. REMOVE REAR BUMPER BAR REINFORCEMENT LH

(a) Remove the 3 bolts and rear bumper bar reinforcement.