


KEY REMINDER AND SEAT BELT WARNING

FROM POWER SOURCE SYSTEM (SEE PAGE 50)

* 1 : W/ POWER SEAT
* 2 : W/O POWER SEAT

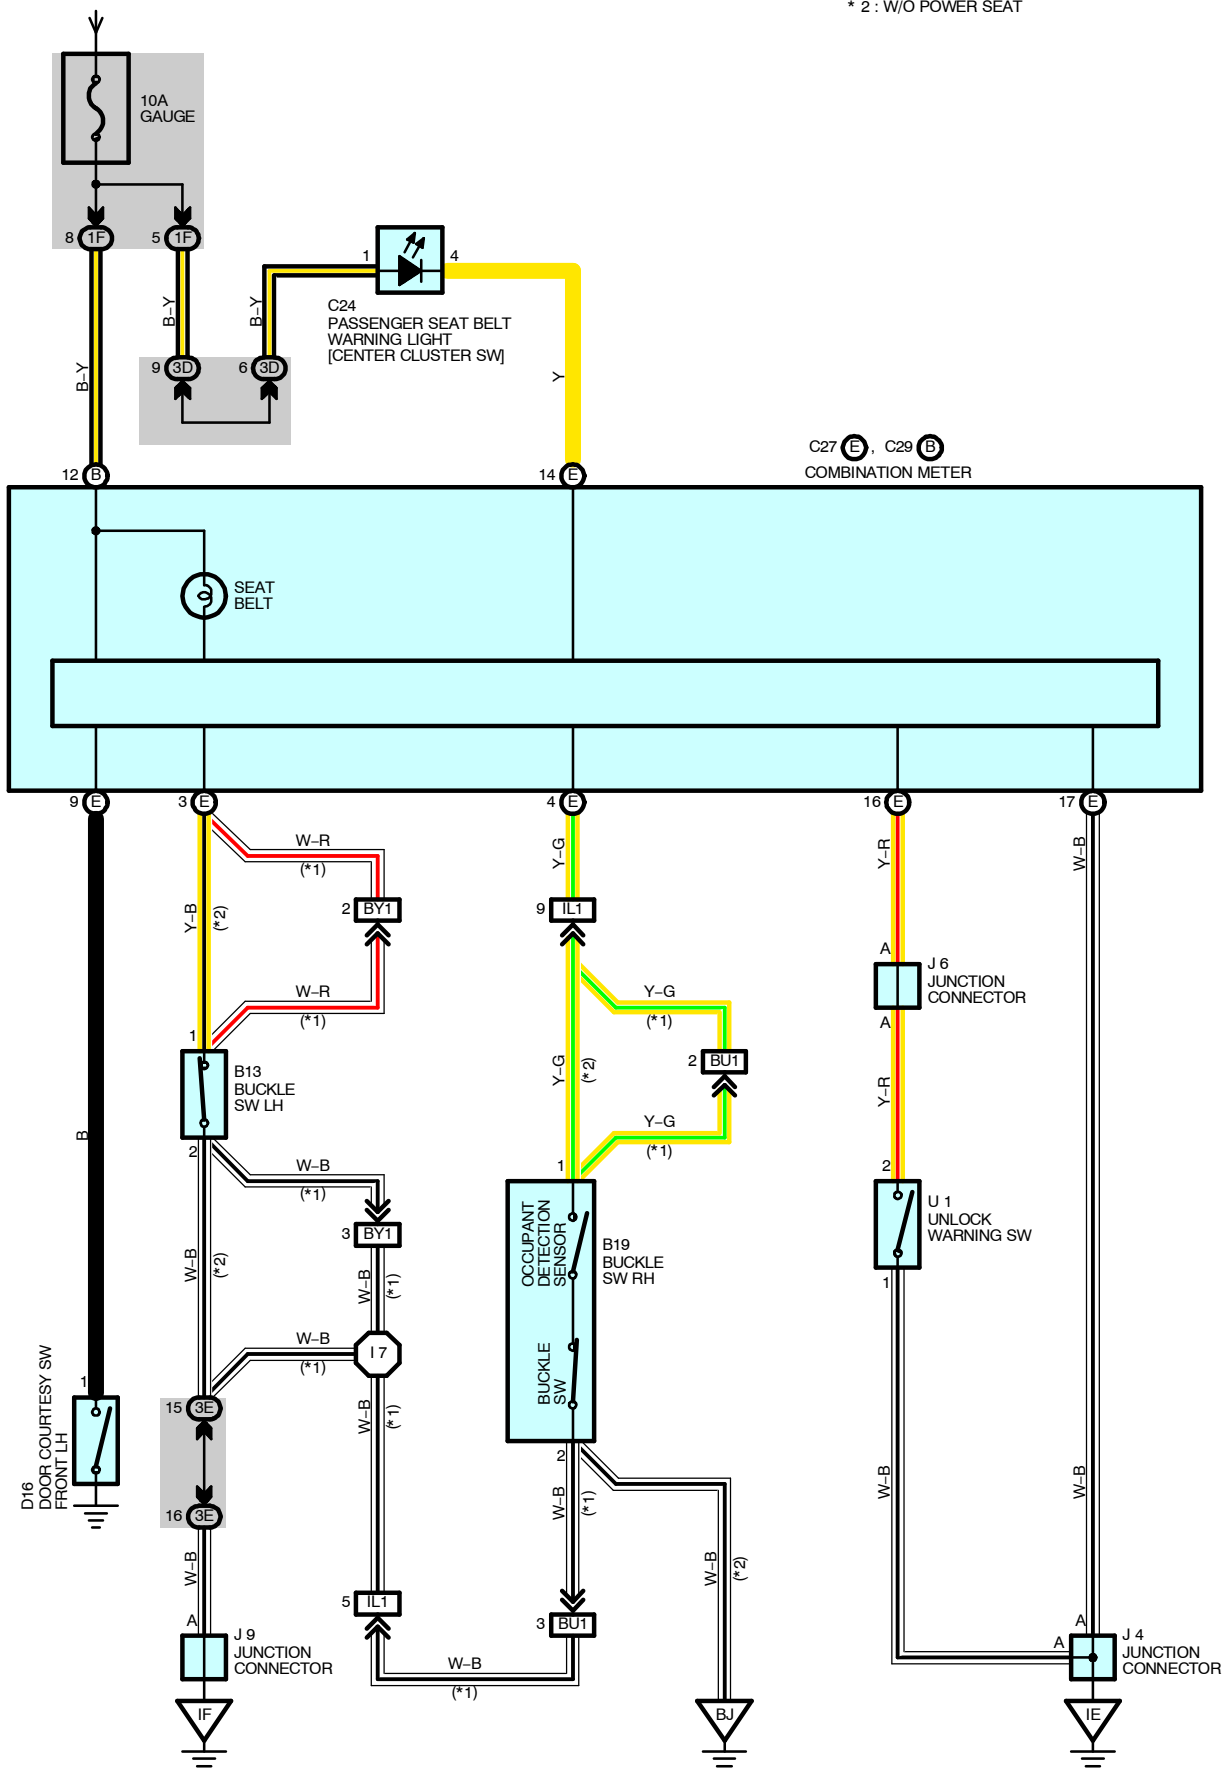

SYSTEM OUTLINE

1. SEAT BELT WARNING SYSTEM

When the ignition SW turned on, a signal is input to the combination meter. To determine whether the driver has fastened the seat belt, a signal is input from the buckle SW LH to the combination meter TERMINAL (E) 3. When the seat belt is not fastened, the seat belt warning light in the combination meter blinks, and emits a warning sound.

In addition, the front passenger is recognized by a sensor (Seat belt warning occupant detection sensor (Buckle SW RH)) is installed in the front passenger seat, and determines whether the seat belt is fastened. When not fastened, the signals from the buckle SW RH is input to combination meter TERMINAL (E) 4, and the passenger seat belt warning light blinks to warn the passenger.

2. KEY REMINDER SYSTEM

When the driver door is opened with the ignition SW off and ignition key remaining in the key cylinder (Unlock warning SW on), a signal is input from the unlock warning SW to the combination meter TERMINAL (E) 16, and from the door courtesy SW front LH to combination meter TERMINAL (E) 9. As a result, the buzzer in the combination meter goes on and warns the driver that the key is remaining in the key cylinder.

SERVICE HINTS

C27 (E), C29 (B) COMBINATION METER

(B)12-GROUND : Approx. 12 volts with ignition SW on

(E)17-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B13	34 (w/o Power Seat)	C24	32	J4	33
	36 (w/ Power Seat)	C27	E	J6	33
B19	34 (w/o Power Seat)	C29	B	J9	33
	36 (w/ Power Seat)	D16	34	U1	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3D	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL1	42	Cowl Wire and Floor Wire (Right Kick Panel)
BU1	46	Floor Wire and Seat No.2 Wire (Under the Front Passenger's Seat)
BY1	46	Cowl Wire and Seat No.1 Wire (Under the Driver's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	42	Cowl Side Panel LH
IF	42	Cowl Side Panel RH
BJ	44	Right Quarter Panel Inner

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I7	42	Cowl Wire			