


POWER OUTLET

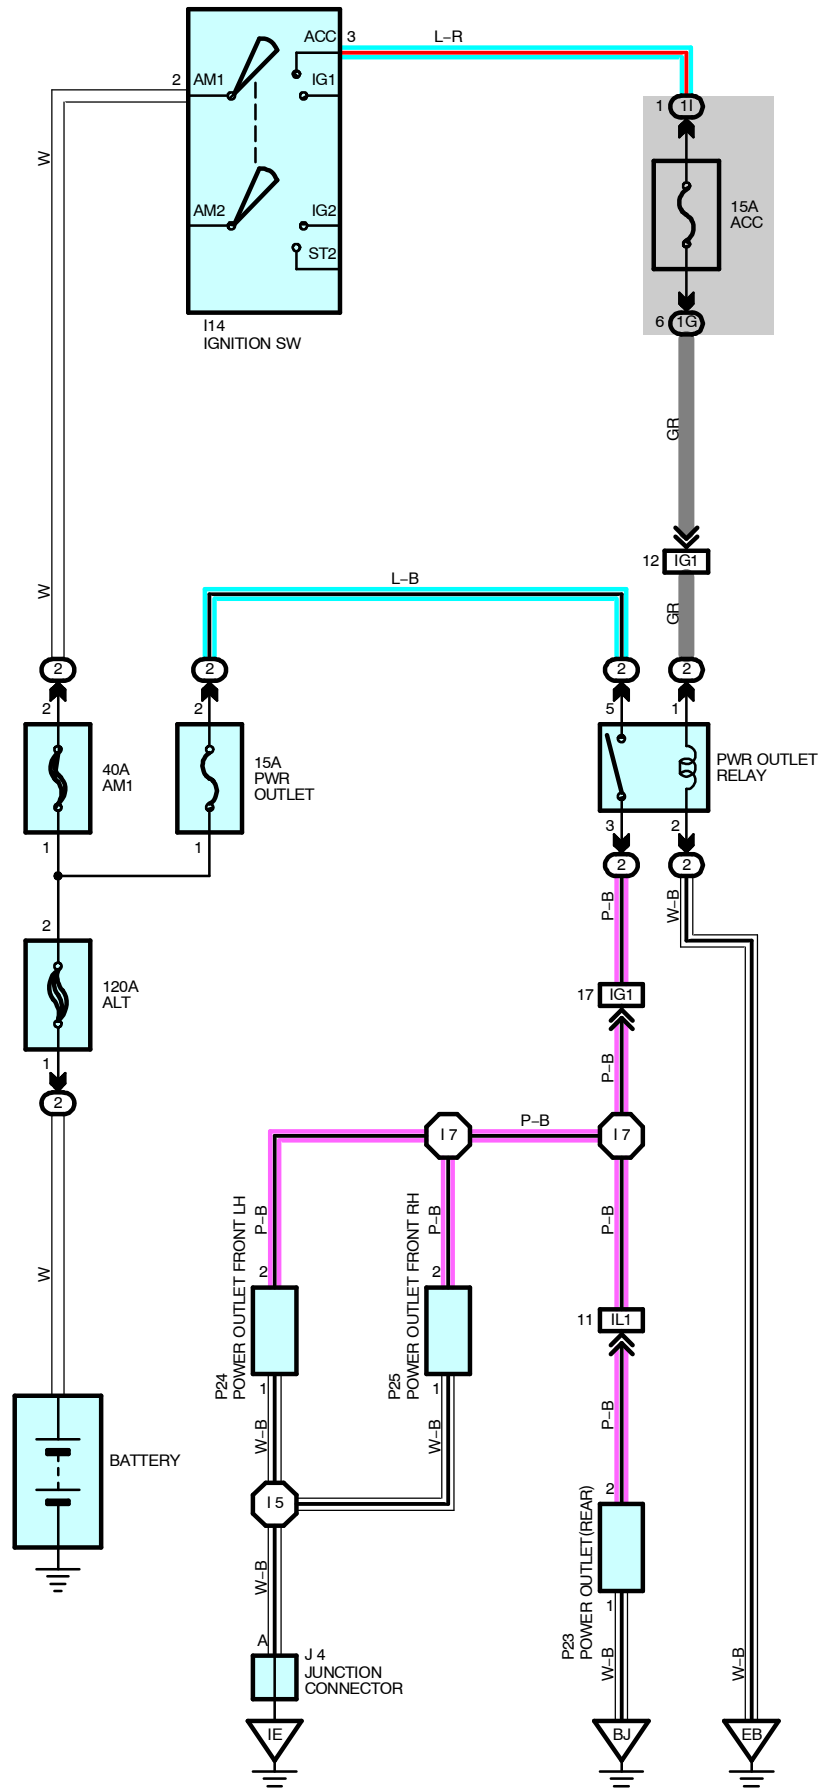

SERVICE HINTS

PWR OUTLET RELAY [ENGINE ROOM R/B]

- 3-5 : Closed with ignition SW at **ACC** or **ON** position
1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
5-GROUND : Always approx. **12** volts
2-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I14	33	P23	35	P25	33
J4	33	P24	33		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1I	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	42	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IL1	42	Cowl Wire and Floor Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
EB	38 (5VZ-FE)	Front Left Fender
	40 (3RZ-FE)	
IE	42	Cowl Side Panel LH
BJ	44	Right Quarter Panel Inner

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	42	Cowl Wire	I7	42	Cowl Wire