


RADIO AND PLAYER

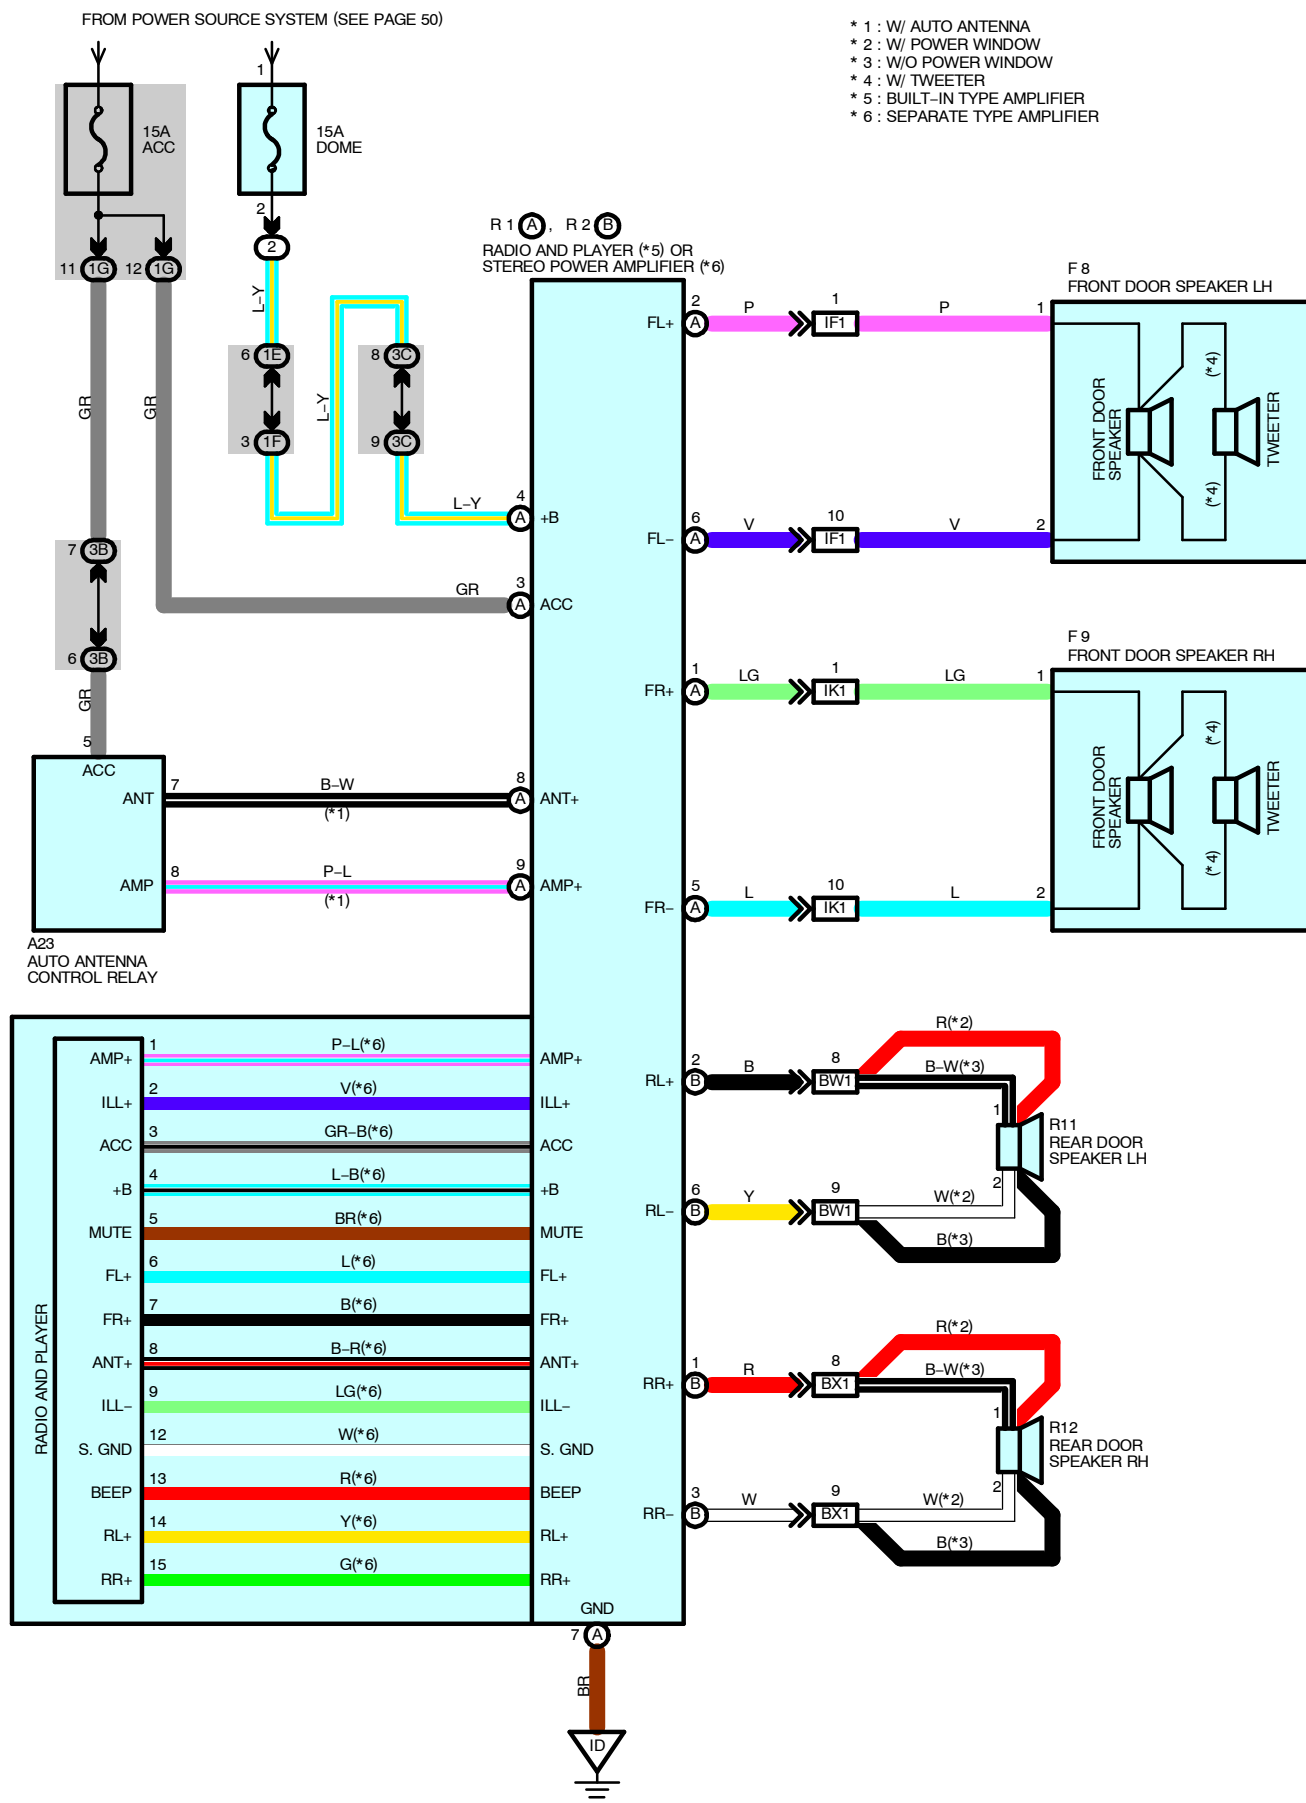

SERVICE HINTS

R1 (A) RADIO AND PLAYER (BUILT-IN TYPE AMPLIFIER) OR

STEREO POWER AMPLIFIER (SEPARATE TYPE AMPLIFIER)

- (A) 3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
- (A) 4-GROUND : Always approx. **12** volts
- (A) 7-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code		See Page	Code	See Page
A23	32	R1	A	33	R12	35
F8	34	R2	B	33		
F9	34	R11		35		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3B	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	42	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IK1	42	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BW1	44	Rear Door LH Wire and Cowl Wire (Left Center Pillar)
BX1	44	Rear Door RH Wire and Cowl Wire (Right Center Pillar)

: GROUND POINTS

Code	See Page	Ground Points Location
ID	42	Left Kick Panel