


228





- * 1 : 5VZ-FE
- * 2 : 3RZ-FE
- * 3 : W/ 2-4 SELECT SW
- * 4 : W/ REAR DIFF. LOCK
- * 5 : W/ CRUISE CONTROL
- * 6 : AUTOMATIC A/C
- * 7 : W/O DAYTIME RUNNING LIGHT
- * 8 : W/ DAYTIME RUNNING LIGHT
- * 9 : W/ POWER SEAT
- * 10 : W/O POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 50)

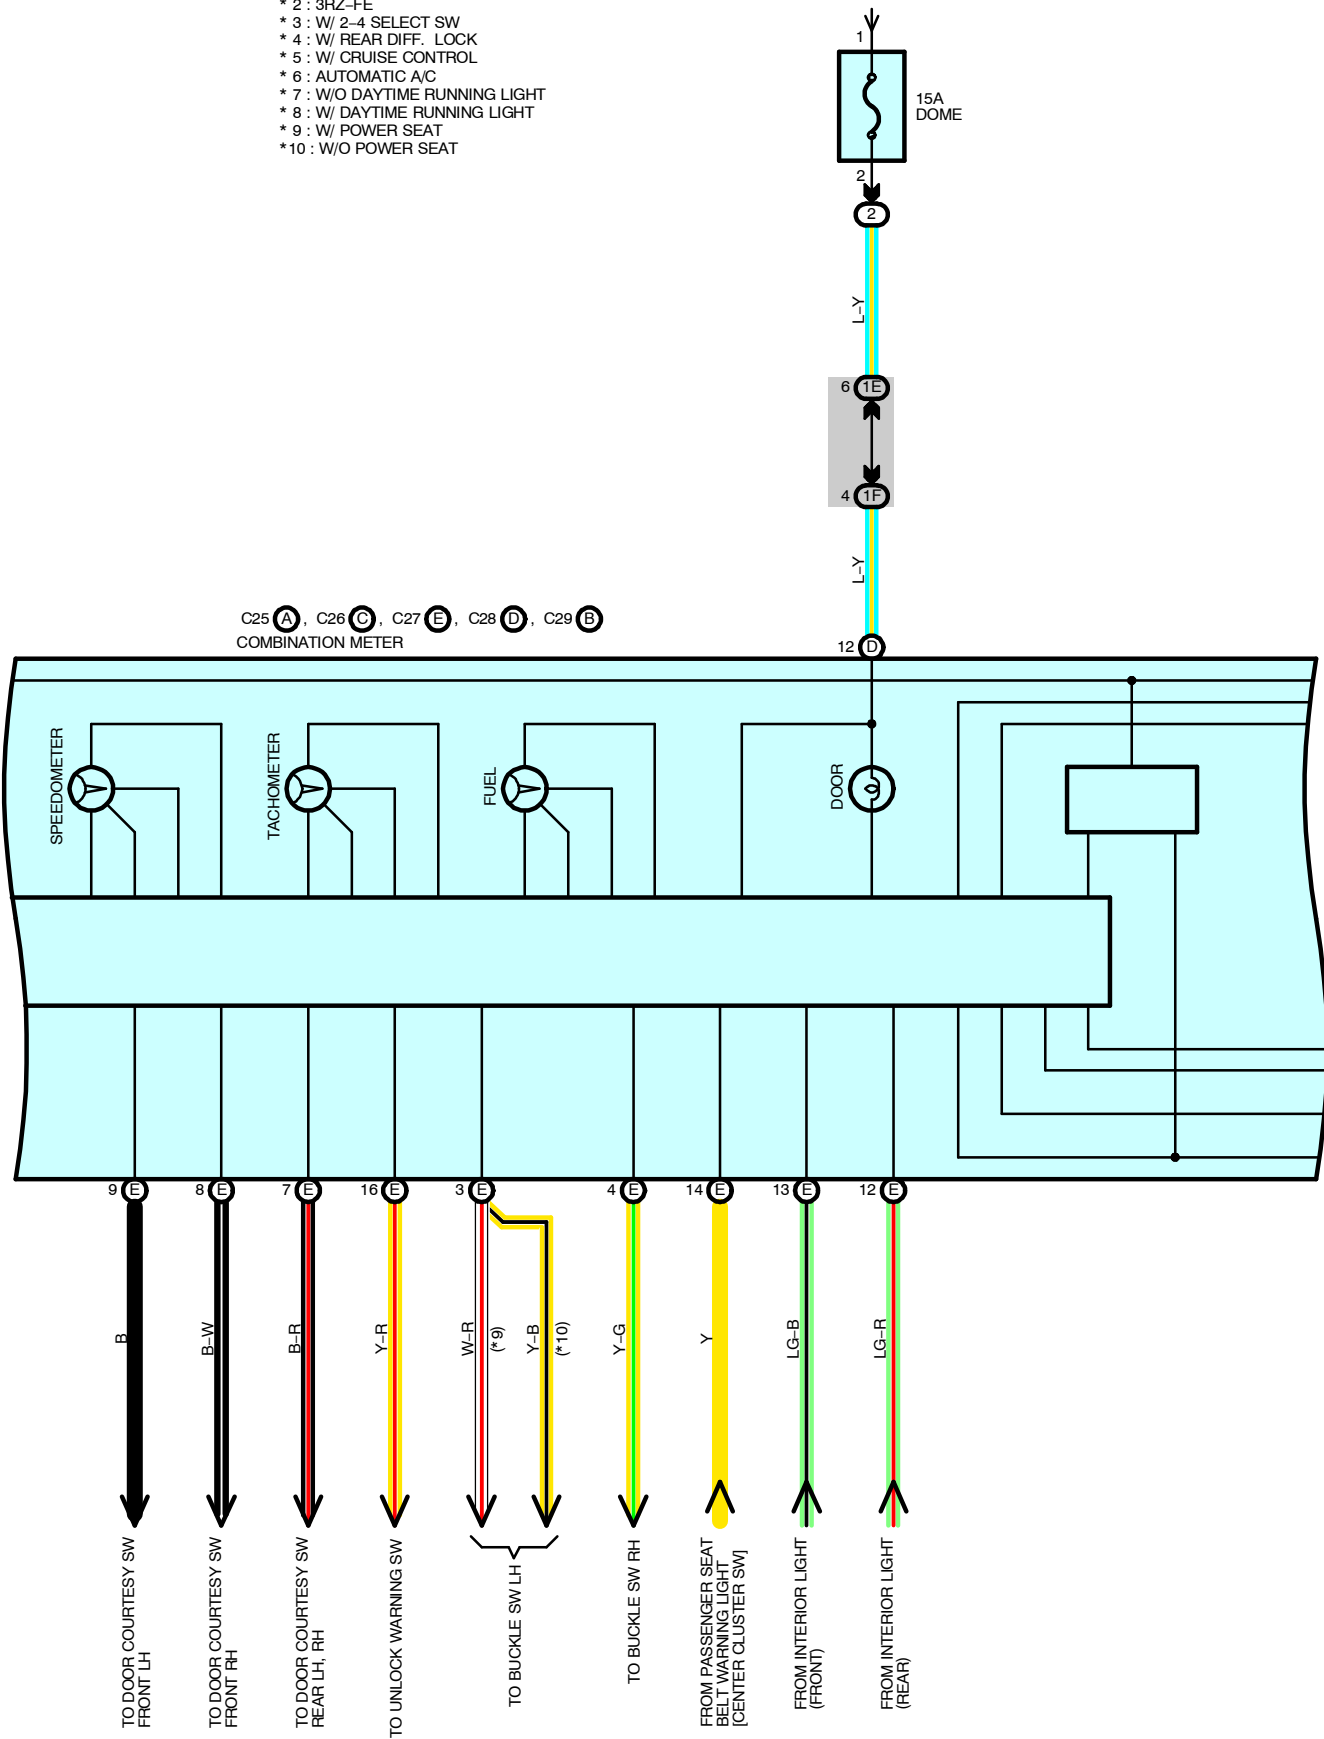

COMBINATION METER

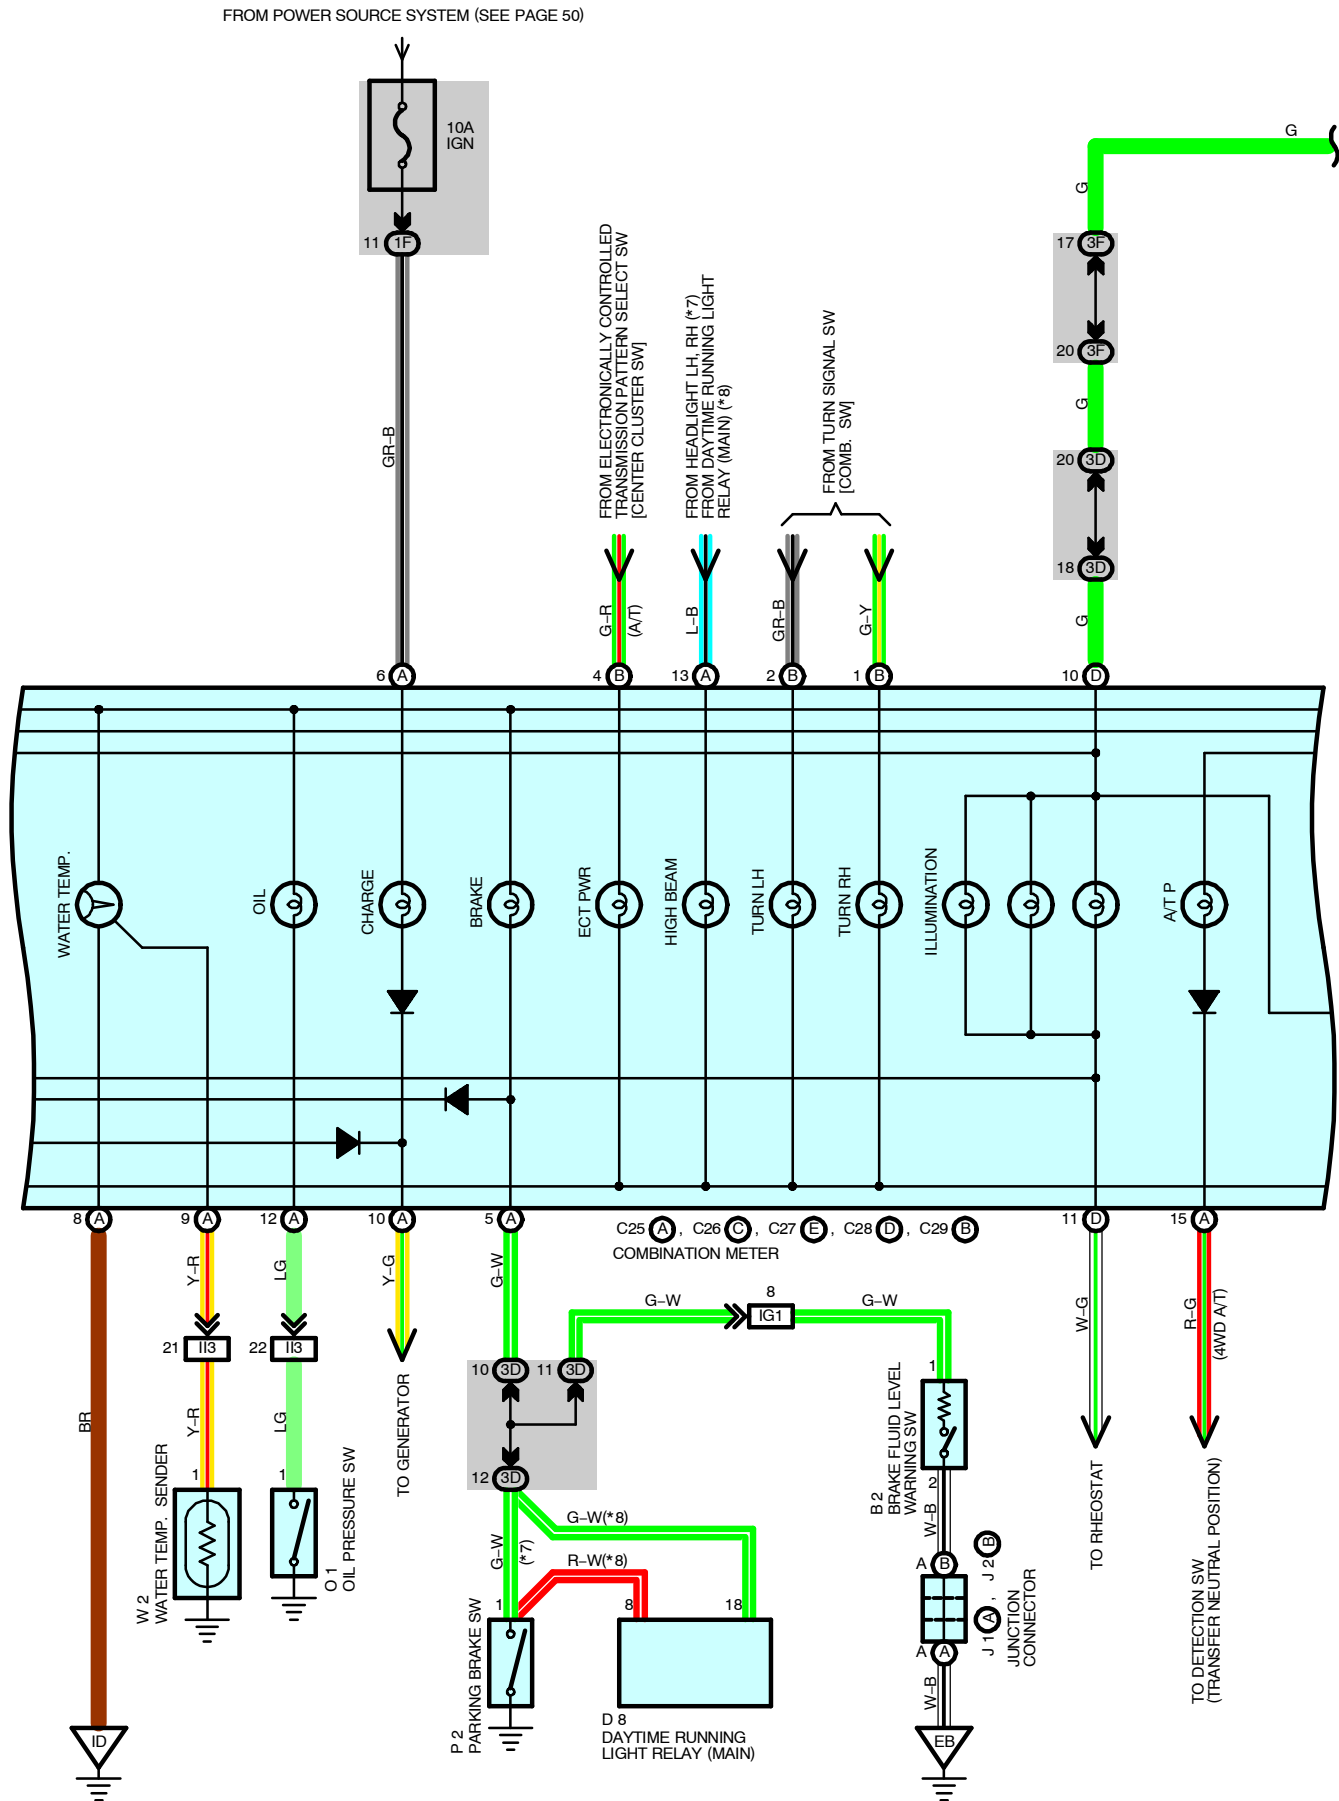

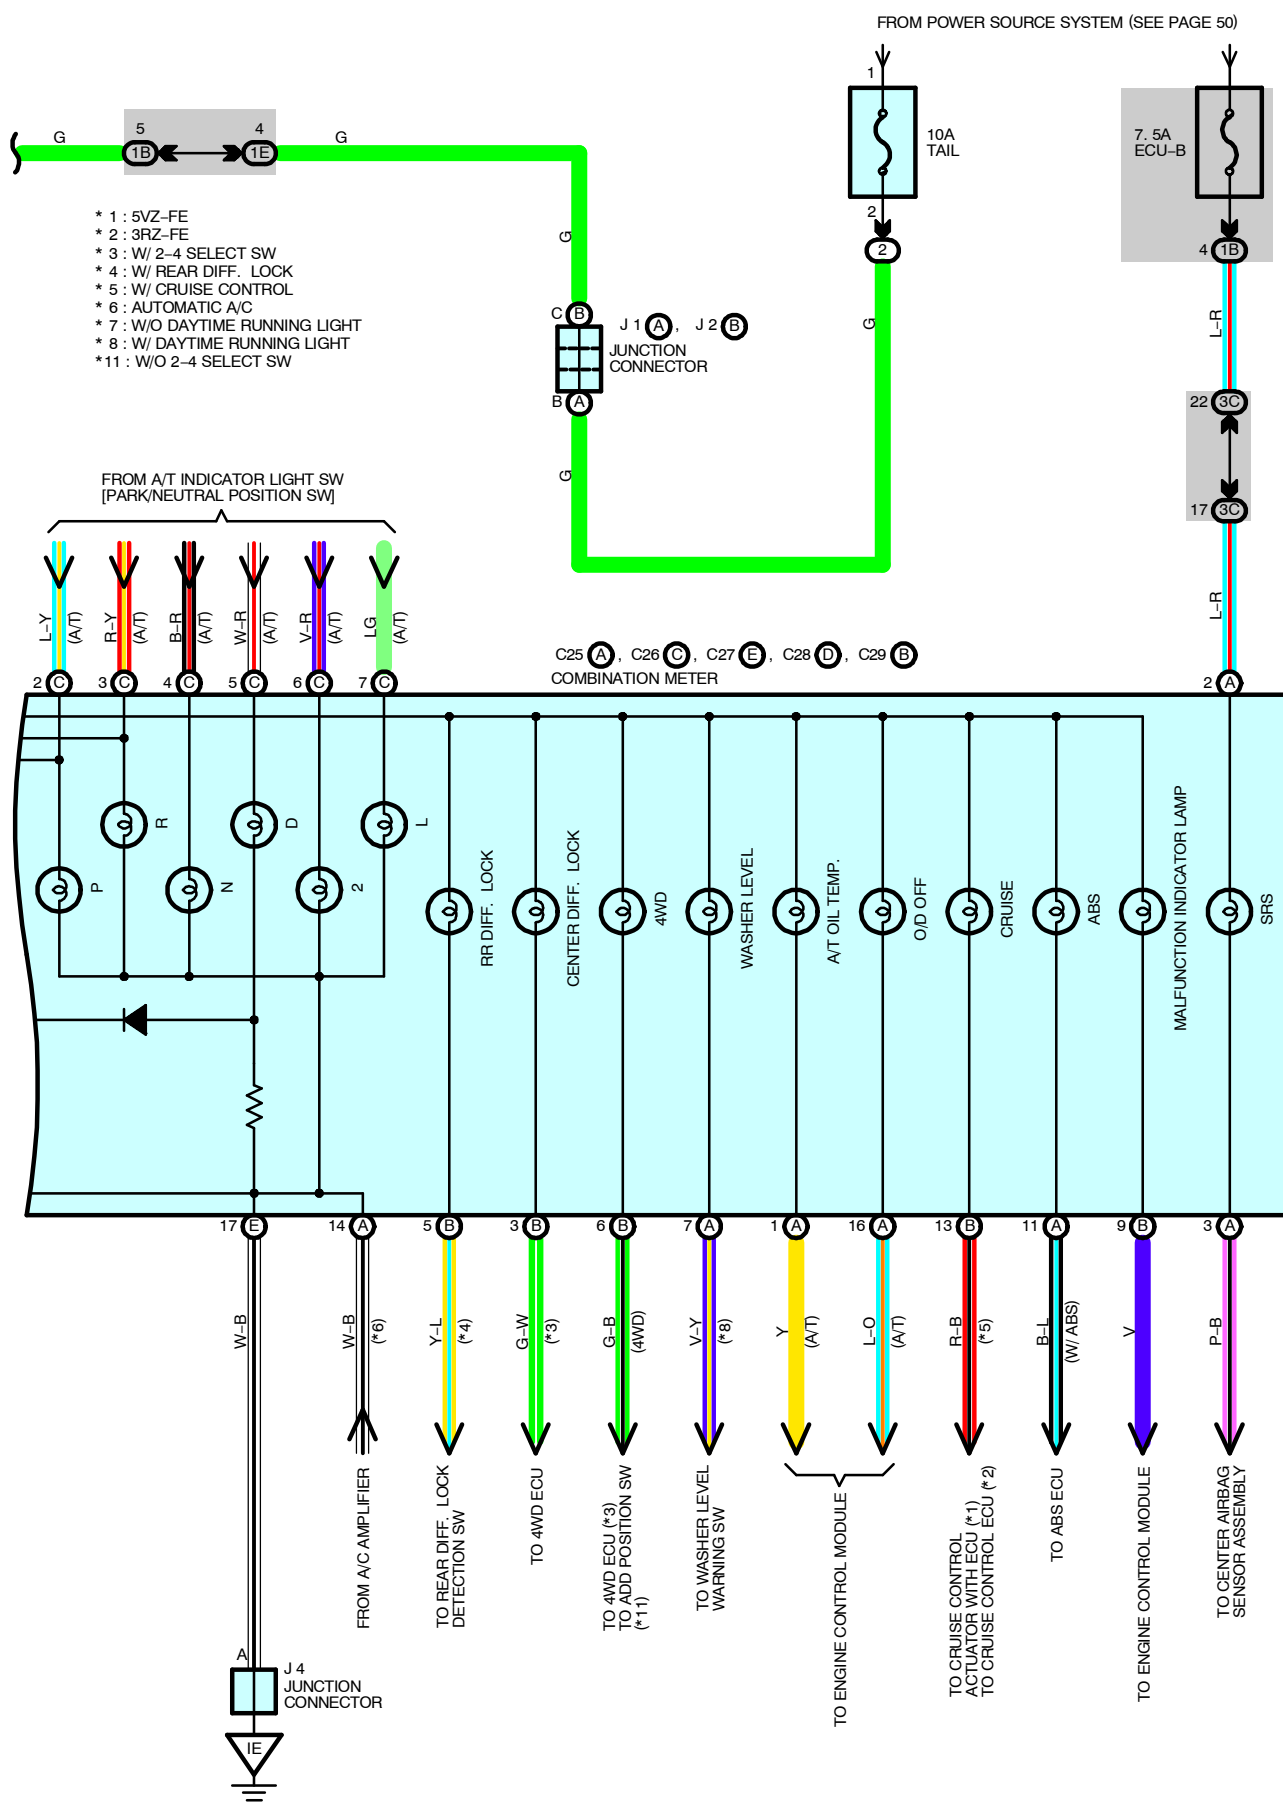

COMBINATION METER

SERVICE HINTS

B2 BRAKE FLUID LEVEL WARNING SW

1-2 : Closed with float down

C25 (A), C27 (E), C29 (B) COMBINATION METER

(B)12-GROUND : Approx. 12 volts with ignition SW on

(A) 6-GROUND : Approx. 12 volts with ignition SW on

(A) 8, (E)17-GROUND : Always continuity

P2 PARKING BRAKE SW

1-GROUND : Closed with parking brake lever pulled up



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A17	32	C29	B 32	J4	33
B2	28 (5VZ-FE)	D8	32	O1	29 (5VZ-FE)
	30 (3RZ-FE)	F10	34		31 (3RZ-FE)
C25	A 32	J1	A 29 (5VZ-FE)	P2	33
C26	C 32		31 (3RZ-FE)	V2	31 (3RZ-FE)
C27	E 32	J2	B 29 (5VZ-FE)	W2	29 (5VZ-FE)
C28	D 32		31 (3RZ-FE)		31 (3RZ-FE)



: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3D		
3E		
3F		



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	42	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IG1	42	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
II3	42	Engine Wire and Cowl Wire (On the Glove Box)



: GROUND POINTS

Code	See Page	Ground Points Location
EB	38 (5VZ-FE)	Front Left Fender
	40 (3RZ-FE)	
ID	42	Left Kick Panel
IE	42	Cowl Side Panel LH

