



REPLACEMENT

1. REMOVE REAR WHEEL

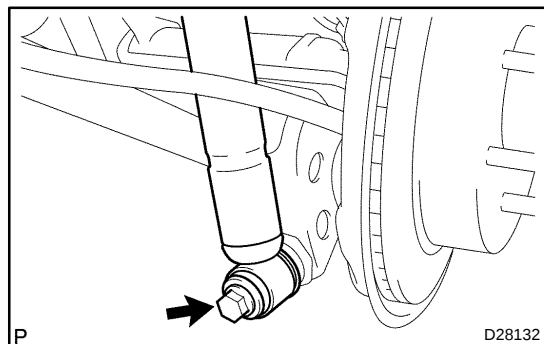

2. SEPARATE SHOCK ABSORBER ASSY REAR LH

- Support the rear axle housing.
- Remove the bolt, separate the shock absorber assy rear LH from the rear axle.

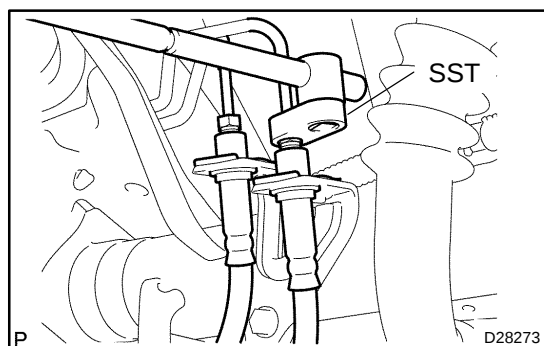

3. DISCONNECT REAR BRAKE TUBE FLEXIBLE HOSE

- Using SST, disconnect the 2 rear brake tubes from each of the flexible hoses.
Use a container to catch brake fluid as it drains out.
SST 09023-00100
- Remove the 2 clips and disconnect the 2 flexible hoses.


4. REMOVE COIL SPRING REAR LH

- Start to lower the rear axle housing.

NOTICE:

Be careful not to snap the brake line and parking brake cable.

- While lowering the rear axle housing, remove the coil spring rear LH.

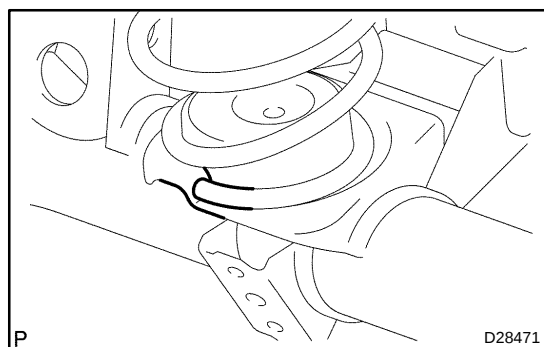


5. INSTALL COIL SPRING REAR LH

- Install the coil spring rear LH to the rear axle housing.

HINT:


Fit the lower end of the coil spring into the gap of the spring lower seat.

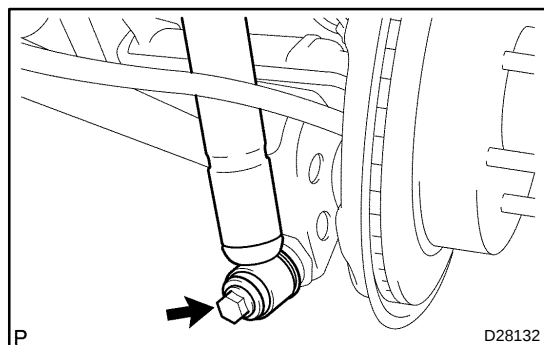

6. CONNECT SHOCK ABSORBER ASSY REAR LH


- Install the shock absorber, temporarily tighten the bolt.

7. STABILIZE SUSPENSION (See page 27-3)

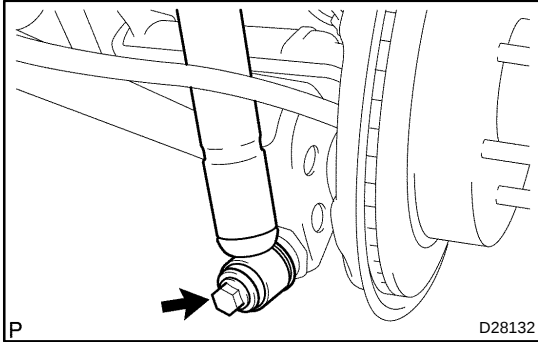

8. FULLY TIGHTEN SHOCK ABSORBER ASSY REAR LH

- (a) Fully tighten the bolt.
Torque: 98 N·m (1,000 kgf·cm, 72 ft·lbf)

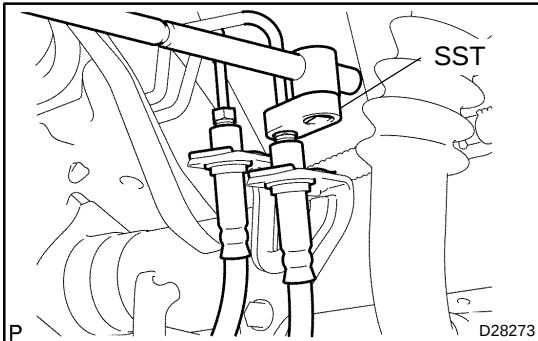

9. CONNECT REAR BRAKE TUBE FLEXIBLE HOSE

- (a) Install the 2 clips with the 2 flexible hoses.
 (b) Using SST, connect the break tubes to the flexible hose.
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)
 SST 09023-00100

10. FILL RESERVOIR WITH BRAKE FLUID

11. BLEED BRAKE LINE (See page 32-4)

12. CHECK FLUID LEVEL IN RESERVOIR (See page 32-4)

13. CHECK BRAKE FLUID LEAKAGE

14. INSTALL REAR WHEEL

Torque: 112 N·m (1,137 kgf·cm, 83 ft·lbf)