


## Power Outlet (12V)

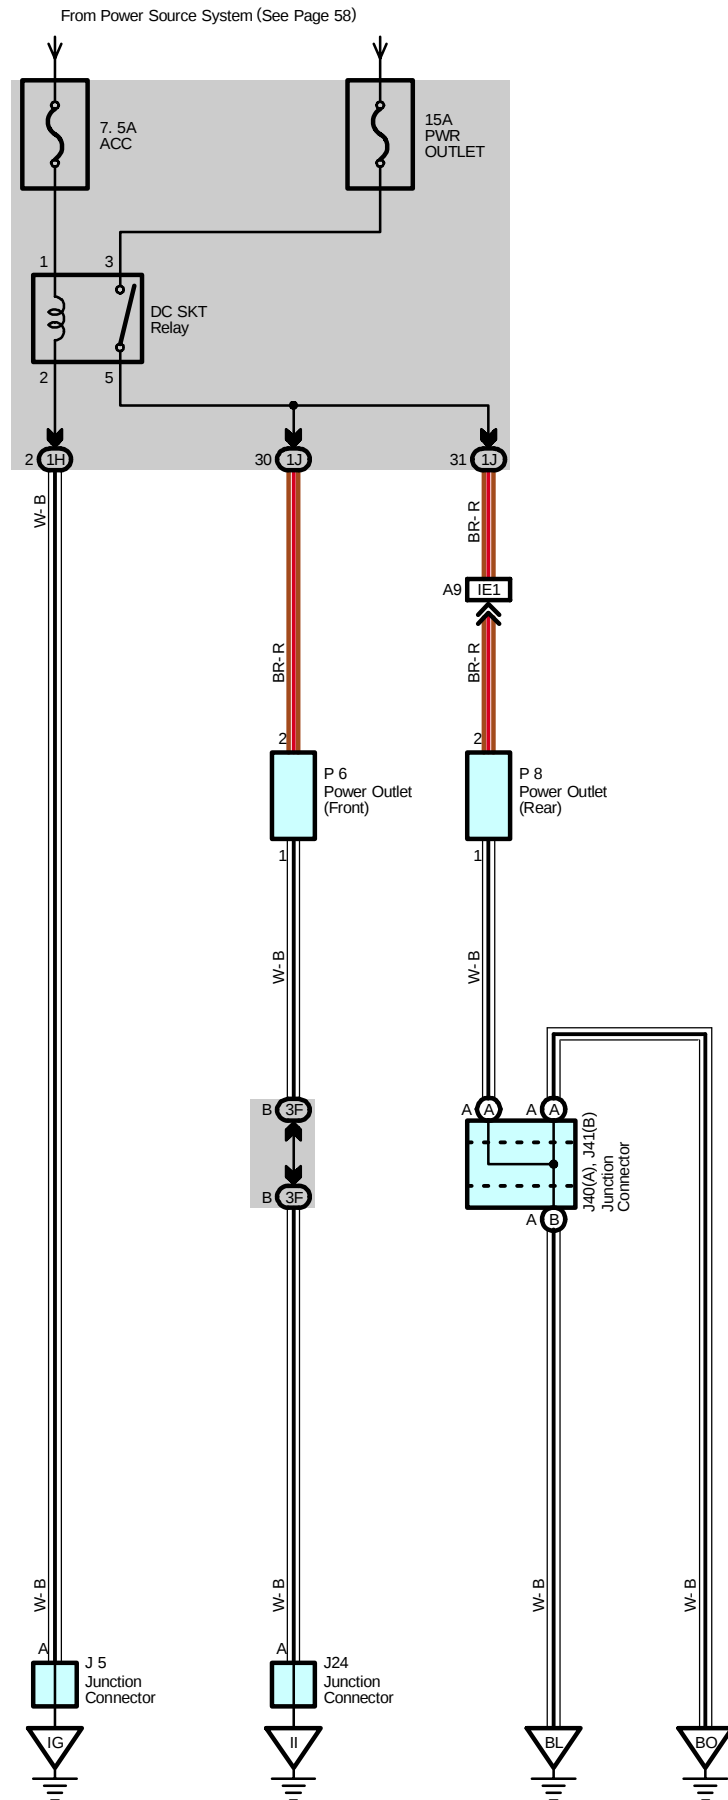

## Service Hints

### DC SKT Relay

3-5 : Closed with ignition SW at ACC or ON position

## ○ : Parts Location

| Code | See Page           | Code |   | See Page           | Code | See Page           |
|------|--------------------|------|---|--------------------|------|--------------------|
| J5   | <a href="#">38</a> | J40  | A | <a href="#">40</a> | P6   | <a href="#">39</a> |
| J24  | <a href="#">38</a> | J41  | B | <a href="#">40</a> | P8   | <a href="#">41</a> |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page           | Junction Block and Wire Harness (Connector Location)             |
|------|--------------------|------------------------------------------------------------------|
| 1H   | <a href="#">25</a> | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)   |
| 1J   |                    |                                                                  |
| 3F   | <a href="#">28</a> | Instrument Panel Wire and Center J/B (Instrument Panel Brace RH) |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)  |
|------|--------------------|-------------------------------------------------------------|
| IE1  | <a href="#">50</a> | Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel) |

## ▽ : Ground Points

| Code | See Page           | Ground Points Location    |
|------|--------------------|---------------------------|
| IG   | <a href="#">48</a> | Left Kick Panel           |
| II   | <a href="#">48</a> | Instrument Panel Brace RH |
| BL   | <a href="#">54</a> | Floor Seat Crossmember LH |
| BO   | <a href="#">54</a> | Rear Pillar LH            |