

INSPECTION

1. INSPECT V-RIBBED BELT TENSIONER ASSEMBLY

- Remove the V belt from the tensioner pulley. Then check that nothing gets caught the tensioner by turning it clockwise and counterclockwise.
- When a malfunction exists, replace the tensioner.

INSTALLATION

1. INSTALL FAN AND GENERATOR V BELT

- Set the V belt onto every parts except the No. 2 idler pulley, as shown in the illustration.
- Loosen the V belt by turning the belt tensioner counterclockwise.
- Set the V belt to the No. 2 idler pulley.
- After installing a new belt, check that the mark is within the B range as shown in the illustration.

