


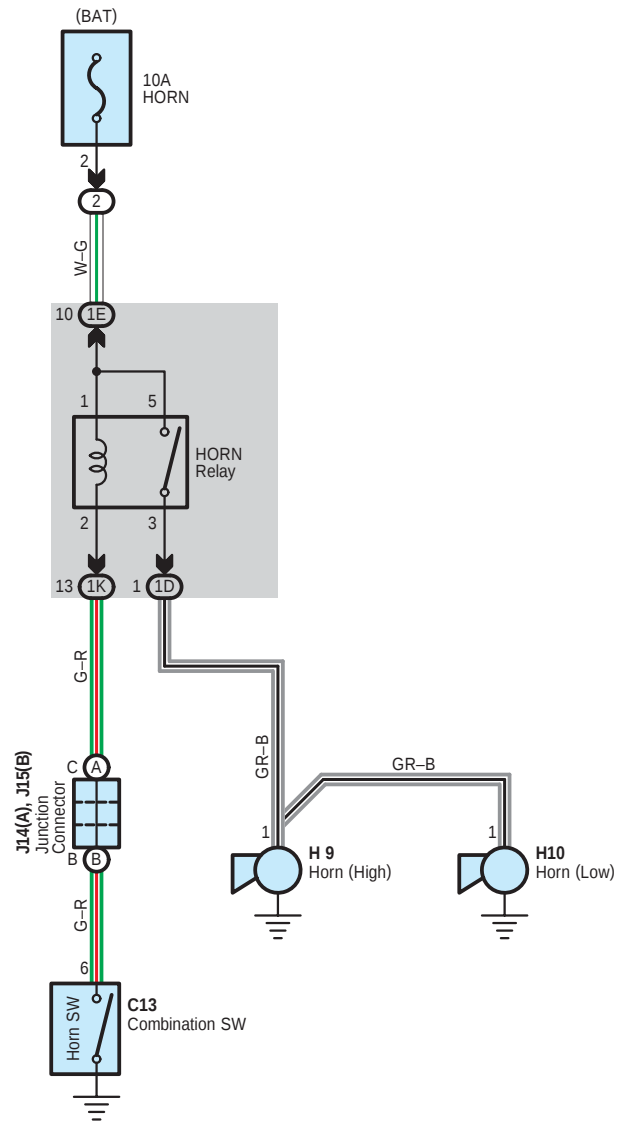

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C13	37	H10	32 (2UZ-FE)	J15	B
H9	32 (2UZ-FE)		34 (1GR-FE)		
	34 (1GR-FE)	J14	A	38	

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E		
1K	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)