



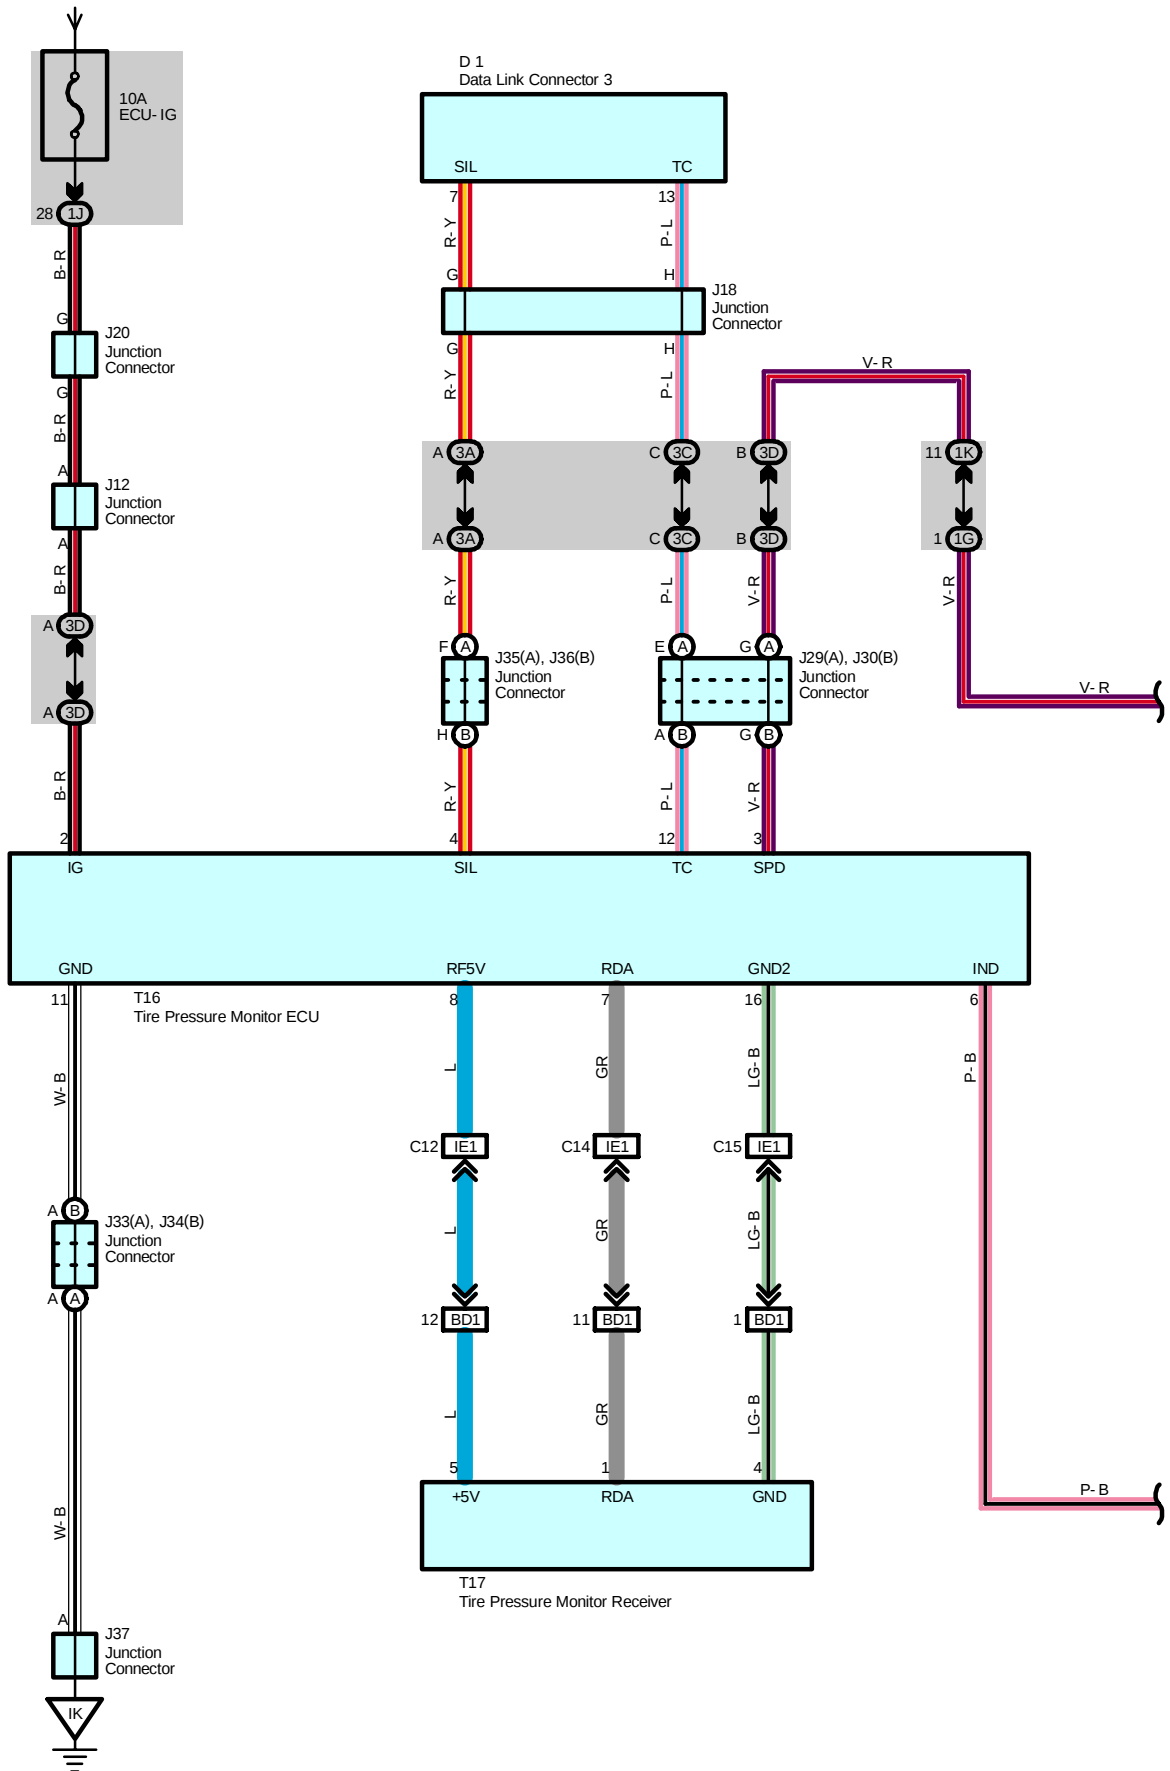

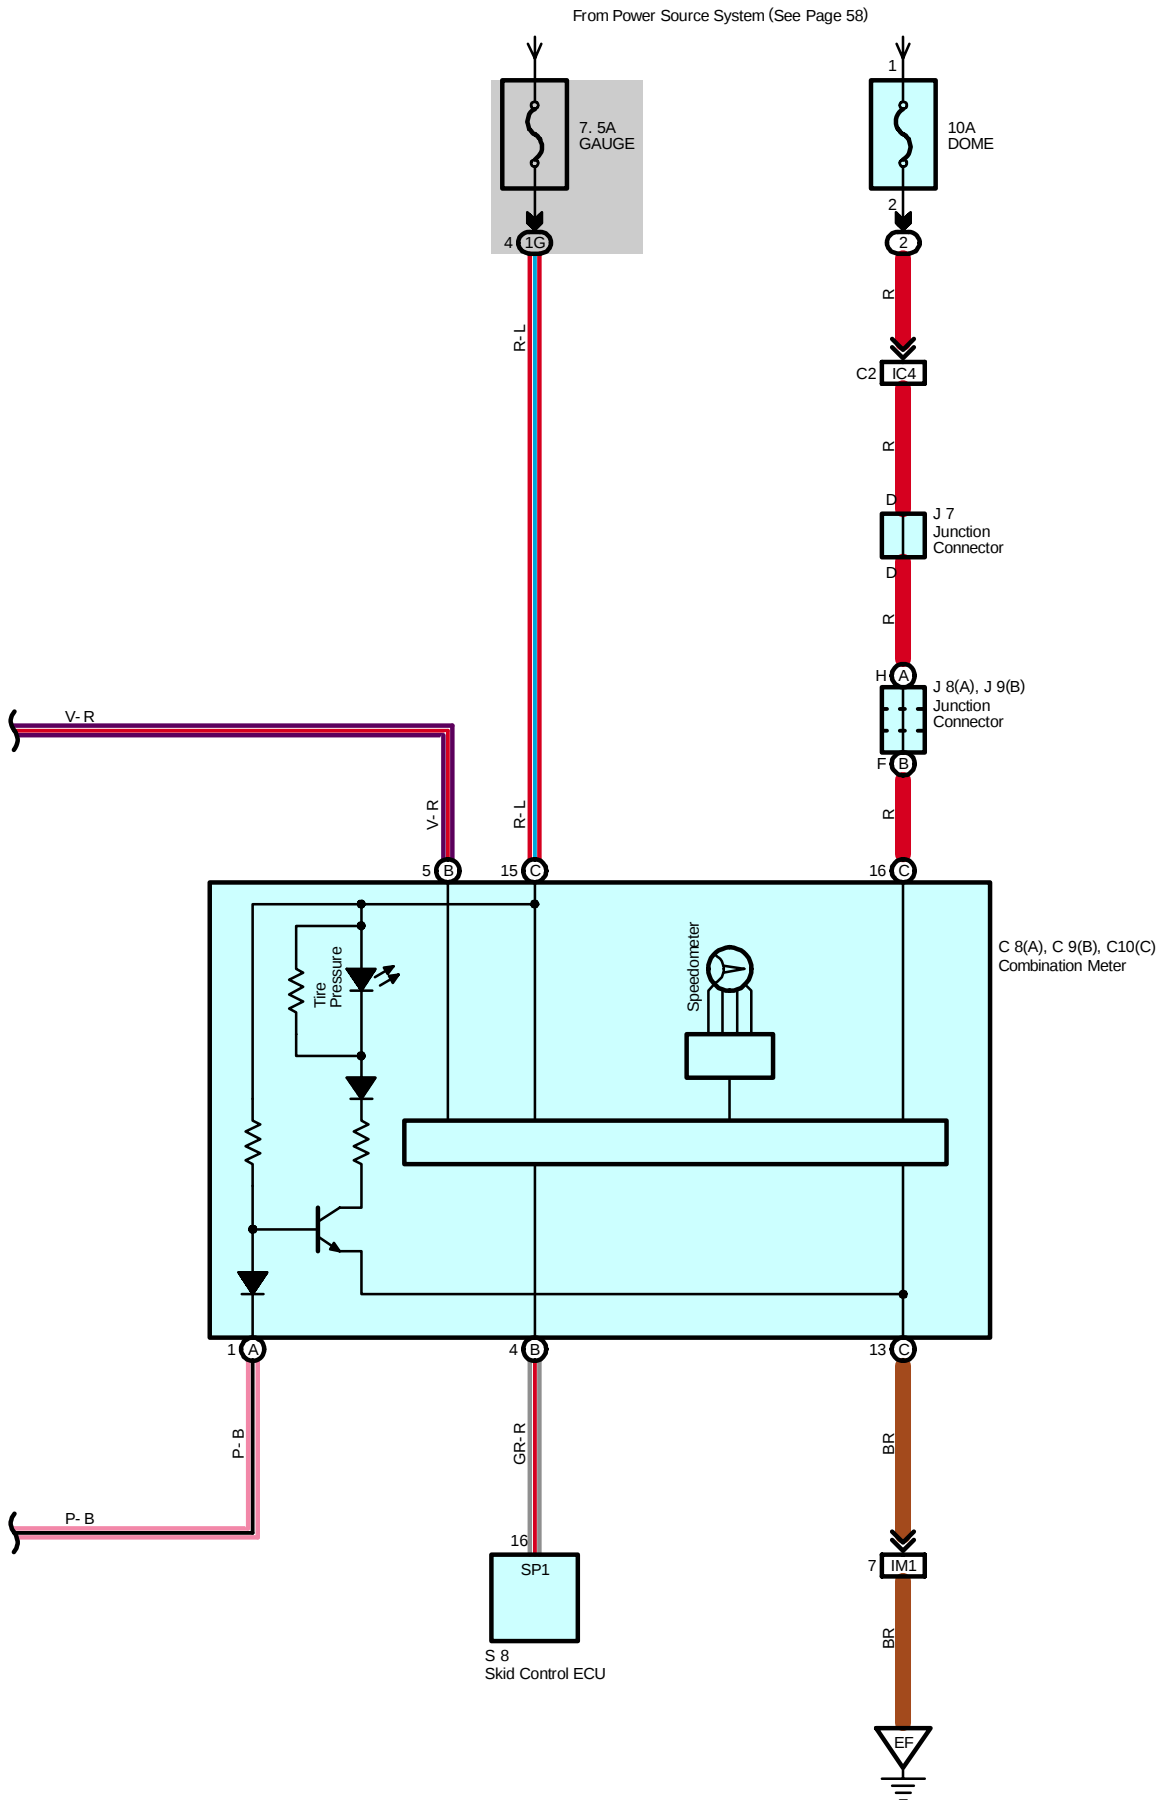

Tire Pressure Warning System

System Outline

The air pressure sensor installed in the tire wheel detects the tire air pressure and transmits signals to the vehicle side receiver. When the detected tire air pressure is below a specified level, the warning light in the combination meter comes on to inform the driver.

Warnings when the tire pressure is low

* When the tire air pressure is below a specified level, the warning light in the combination meter comes on.

Service Hints

T16 Tire Pressure Monitor ECU

2-Ground : Approx. 12 volts with ignition SW at ON position

11-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	A 37	J12	38	J35	A 38
C9	B 37	J18	38	J36	B 38
C10	C 37	J20	38	J37	38
D1	37	J29	A 38	S8	39
J7	38	J30	B 38	T16	39
J8	A 38	J33	A 38	T17	41
J9	B 38	J34	B 38		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K		
3A	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3C		
3D		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM1	52	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BD1	54	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)

▽ : Ground Points

Code	See Page	Ground Points Location
EF	44 (2UZ-FE)	Rear Side of Left Bank Cylinder Block
	46 (1GR-FE)	
IK	48	Right Kick Panel

