



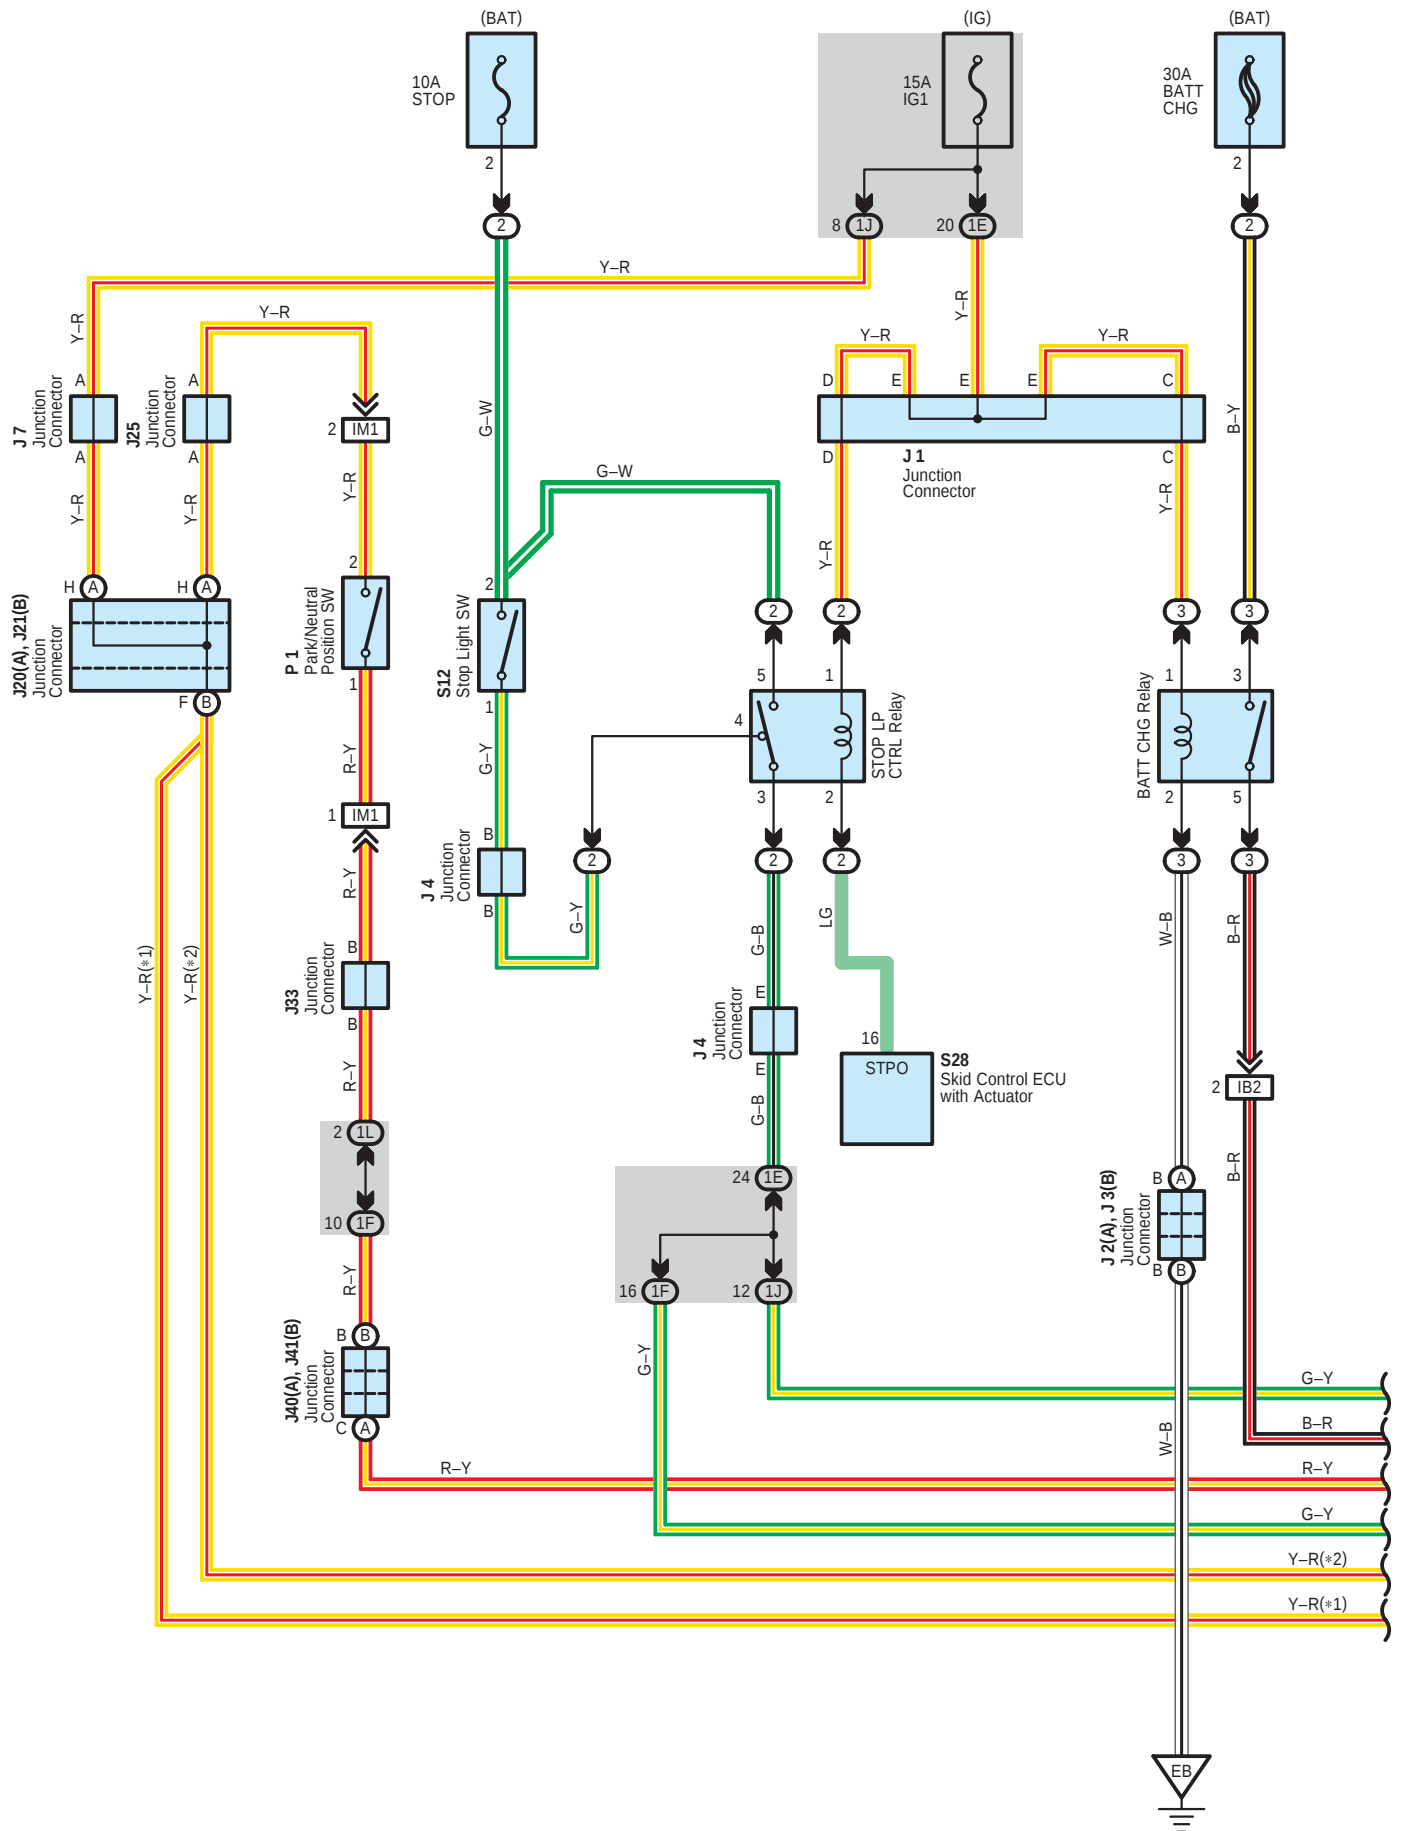

Trailer Towing

- * 1 : w/ Daytime Running Light
- * 2 : w/o Daytime Running Light

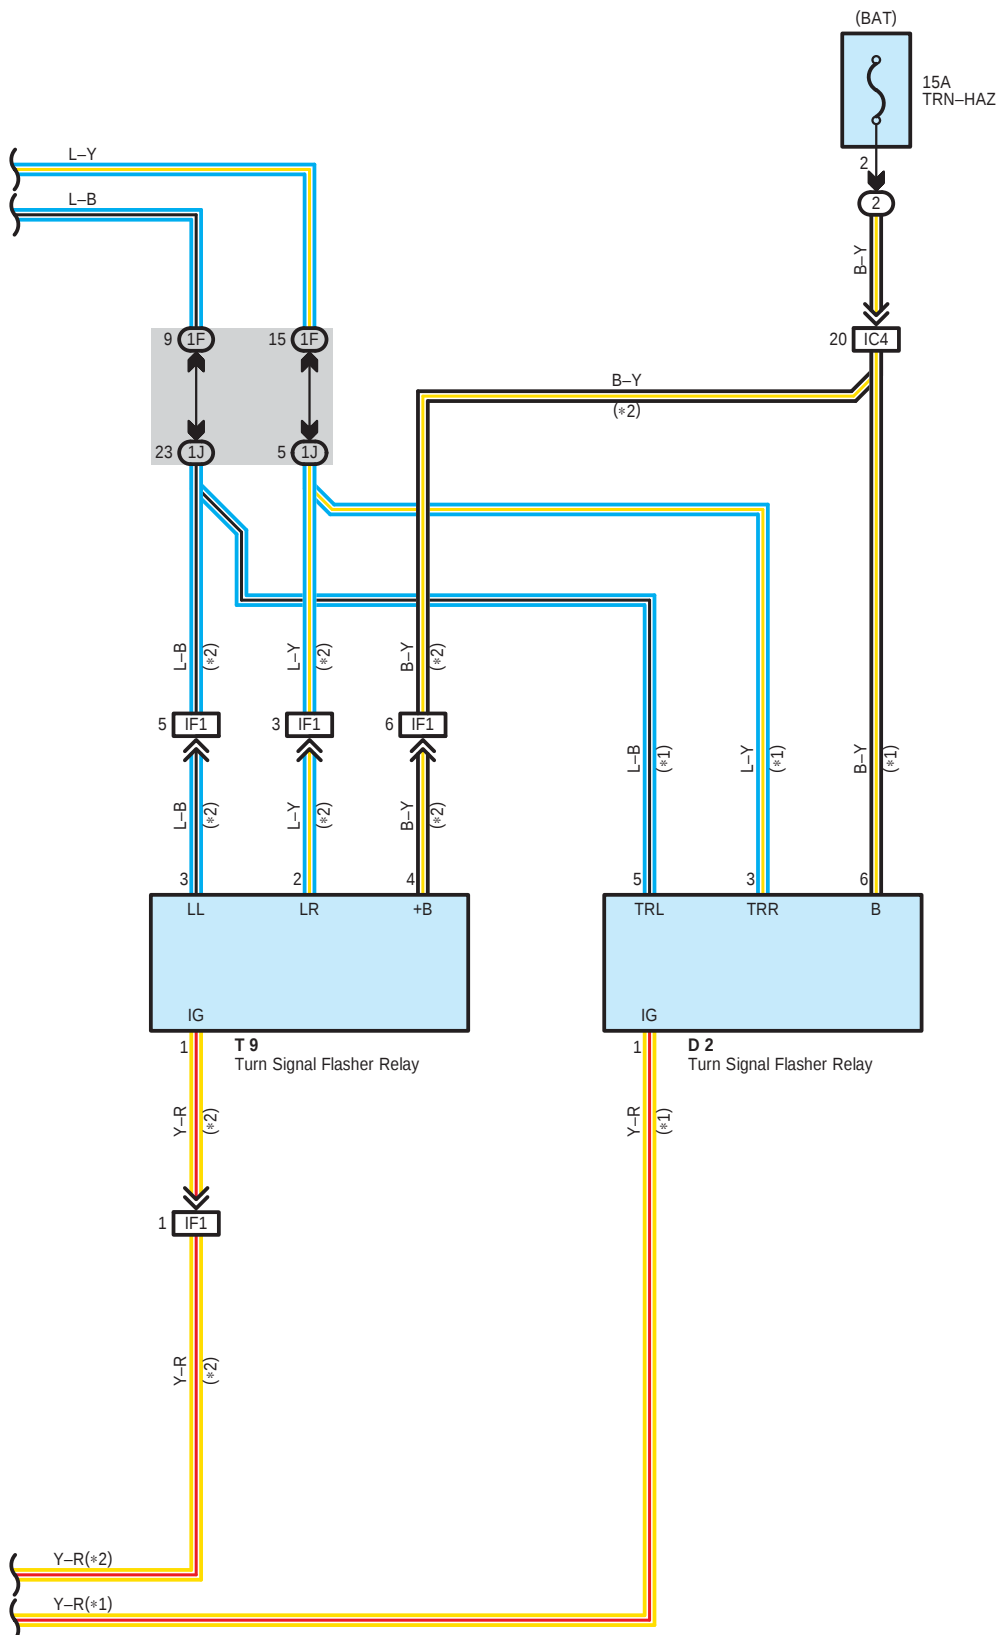

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
D2	37	J14	A	38	
J1	33 (2UZ-FE)	J15	B	38	P1
	35 (1GR-FE)	J16		38	33 (2UZ-FE)
J2	A	J20	A	38	S12
		J21	B	38	39
J3	B	J25		38	S28
		J33		38	33 (2UZ-FE)
J4	38	J39		40	35 (1GR-FE)
J5	38	J40	A	40	T6
J7	38	J41	B	40	T9
					T14
					T15
					41
					41

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F	24	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	46	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)
IC4	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IF1	46	Instrument Panel Wire and Relay Wire (Behind the Instrument Panel J/B)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BF1	48	Frame No.3 Wire and Floor No.2 Wire (Rear Side of Side Frame LH)
BG1	48	Floor No.2 Wire and Frame No.3 Wire (Rear Side of Side Frame LH)

 : Ground Points

Code	See Page	Ground Points Location
EB	44 (2UZ-FE)	Front Left Fender
	45 (1GR-FE)	
IG	46	Left Kick Panel
BL	48	Floor Seat Crossmember LH
BO	48	Rear Pillar LH