 
 
 
 

 

 


Mode	Use	Lights	Shifter	Control	Center Diff
<b>2 HI</b> Rear Wheel Drive	Normal driving			Shift transfer case to H2-H4.	-
<b>4 HI</b> All Wheel Drive	Loose or changing surfaces: Gravel, patchy snow, slippery pavement.			Press 4WD button on side of transfer case shifter. (Can switch while moving up to 100 km/h)	Open
<b>4 HI Locked</b> Four Wheel Drive	Very loose surfaces: Mud, sand, pebbles, deep snow. Do not use on hard surfaces.			Shift transfer case to H4 L.	Locked
<b>4 LO</b>	Steep or technical terrain. Downhill engine braking. Low speed only.			Stop, shift gear to neutral then shift transfer case to L4 L.	Locked
<b>Rear Diff Lock</b>	When in 4 LO, if one rear wheel without traction is spinning.	RR DIFF LOCK	-	Press RR DIFF LOCK button.	Center + Rear Locked