




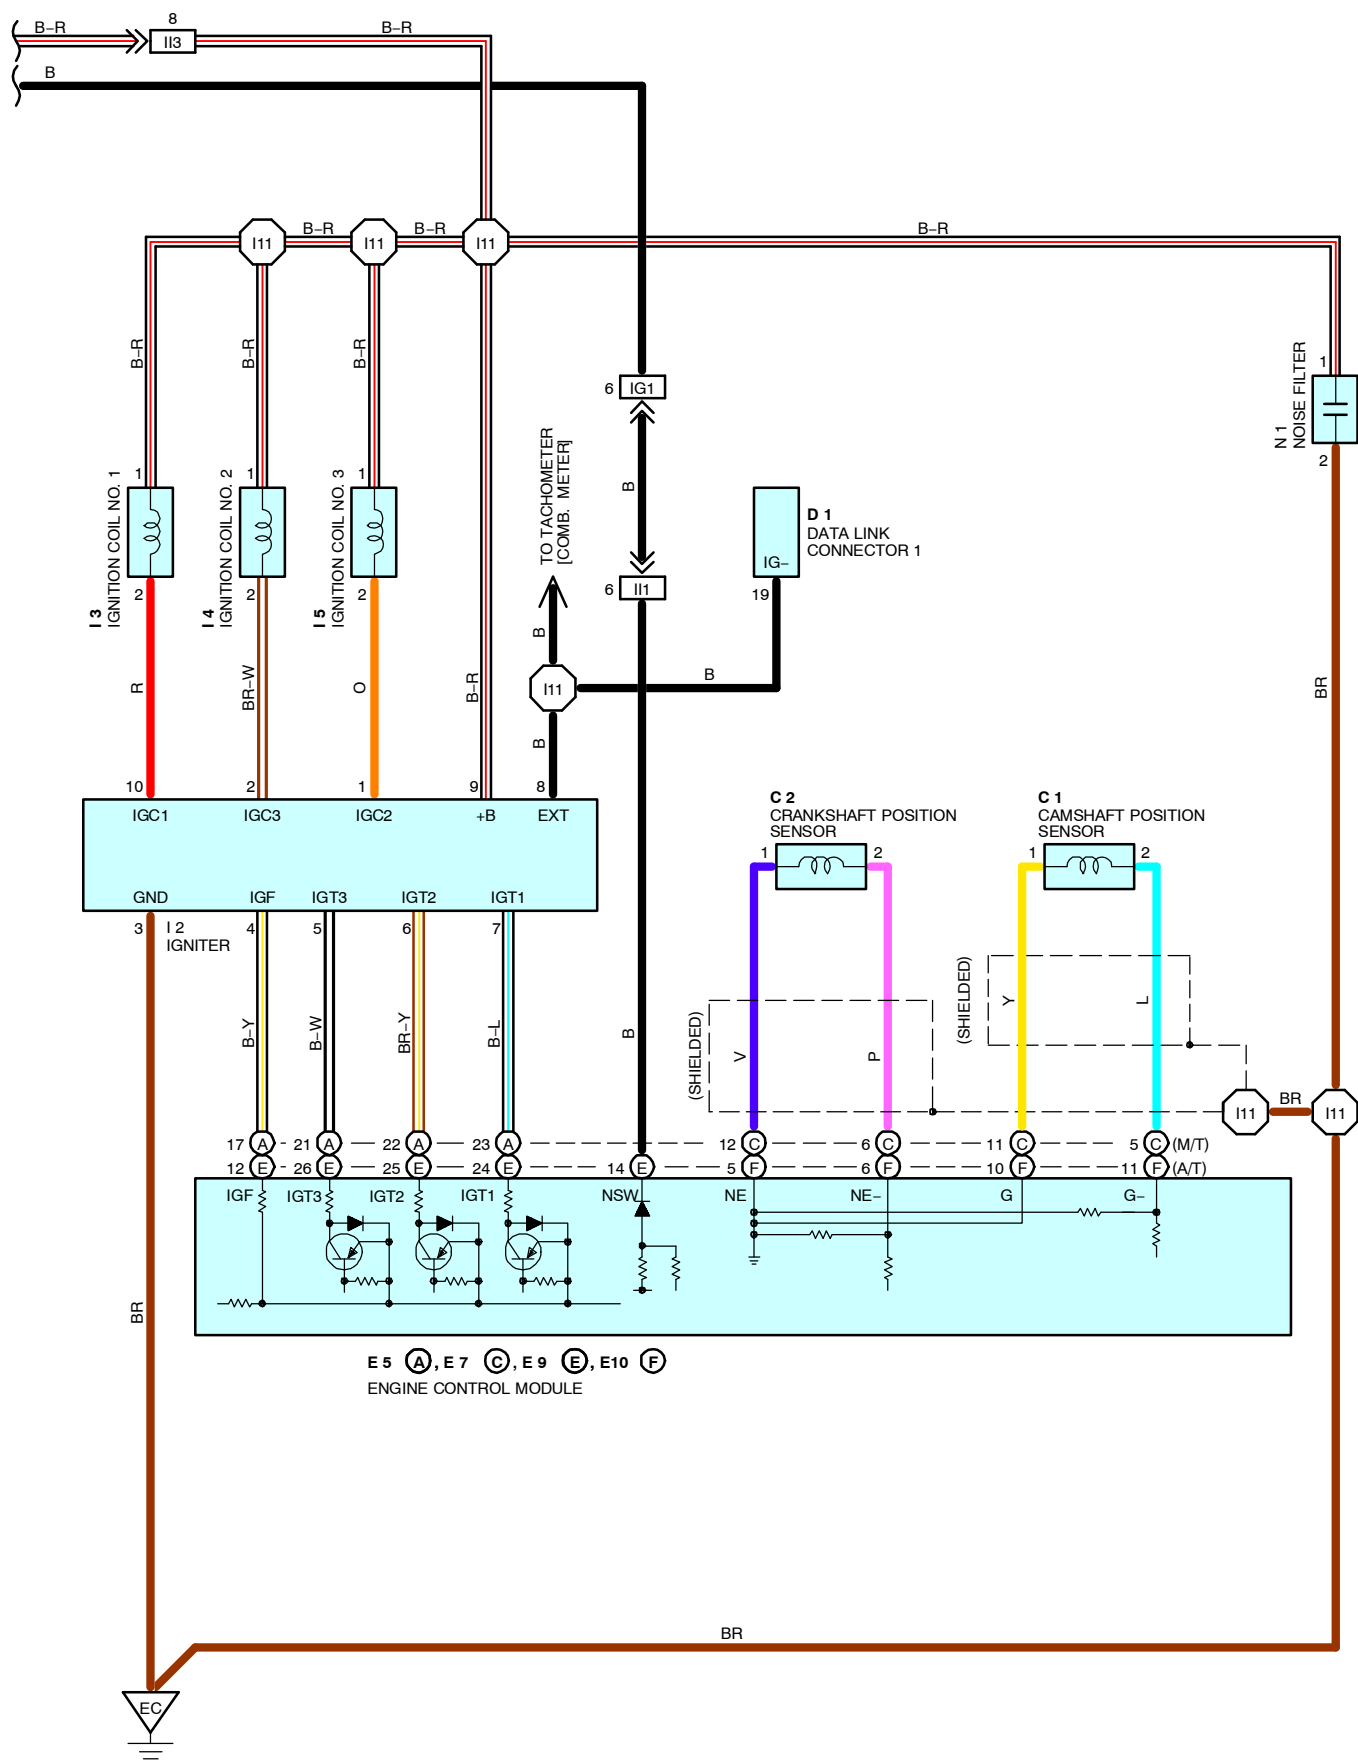

E5 (A), E7 (C), E9 (E), E10 (F)
ENGINE CONTROL MODULE



STARTING AND IGNITION (5VZ-FE)

SERVICE HINTS

S 1 (A) , S 2 (B) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW **P** OR **N** POSITION AND IGNITION SW AT **ST** POSITION (A/T)

POINTS CLOSED WITH CLUTCH START SW OR CLUTCH START CANCEL SW ON AND IGNITION SW AT **ST** POSITION (M/T)

I14 IGNITION SW

2-4, 7-6 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

7-8 : CLOSED WITH IGNITION SW AT **ST** POSITION

P 1 PARK/NEUTRAL POSITION SM (A/T)

6-5 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

STARTER RELAY

3-5 : CLOSED WITH PARK/NEUTRAL POSITION SW AT **P** OR **N** POSITION AND IGNITION SW AT **ST** POSITION (A/T)

3-5 : CLOSED WITH CLUTCH START SW OR CANCEL SW ON AND IGNITION SW AT **ST** POSITION (N/T)

C 8 CLUTCH START CANCEL SW (M/T)

1-2 : CLOSED WITH IGNITION SW ON AND CANCEL SW ON

C 9 CLUTCH START SW (M/T)

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	26 (5VZ-FE)	E 9	E	31	J 9
C 2	26 (5VZ-FE)	E10	F	31	N 1
C 8	30	I 2	27 (5VZ-FE)	P 1	27 (5VZ-FE)
C 9	30	I 3	27 (5VZ-FE)	S 1	A
D 1	26 (5VZ-FE)	I 4	27 (5VZ-FE)	S 2	B
E 5	A	I 5	27 (5VZ-FE)		
E 7	C	I14	31		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1F	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1H	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1I		
3D	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)
3E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	36 (5VZ-FE)	ENGINE NO.2 WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE ENGINE ROOM R/B)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
II1	40	ENGINE WIRE AND COWL WIRE (ON THE GLOVE BOX)
II3		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	36 (5VZ-FE)	INTAKE MANIFOLD LEFT
IF	40	COWL SIDE PANEL RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	36 (5VZ-FE)	ENGINE ROOM MAIN WIRE	I 4	40	COWL WIRE
I 2	40	COWL WIRE	I11	40	ENGINE WIRE
I 3	40	ENGINE ROOM MAIN WIRE			

