


# SEAT HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

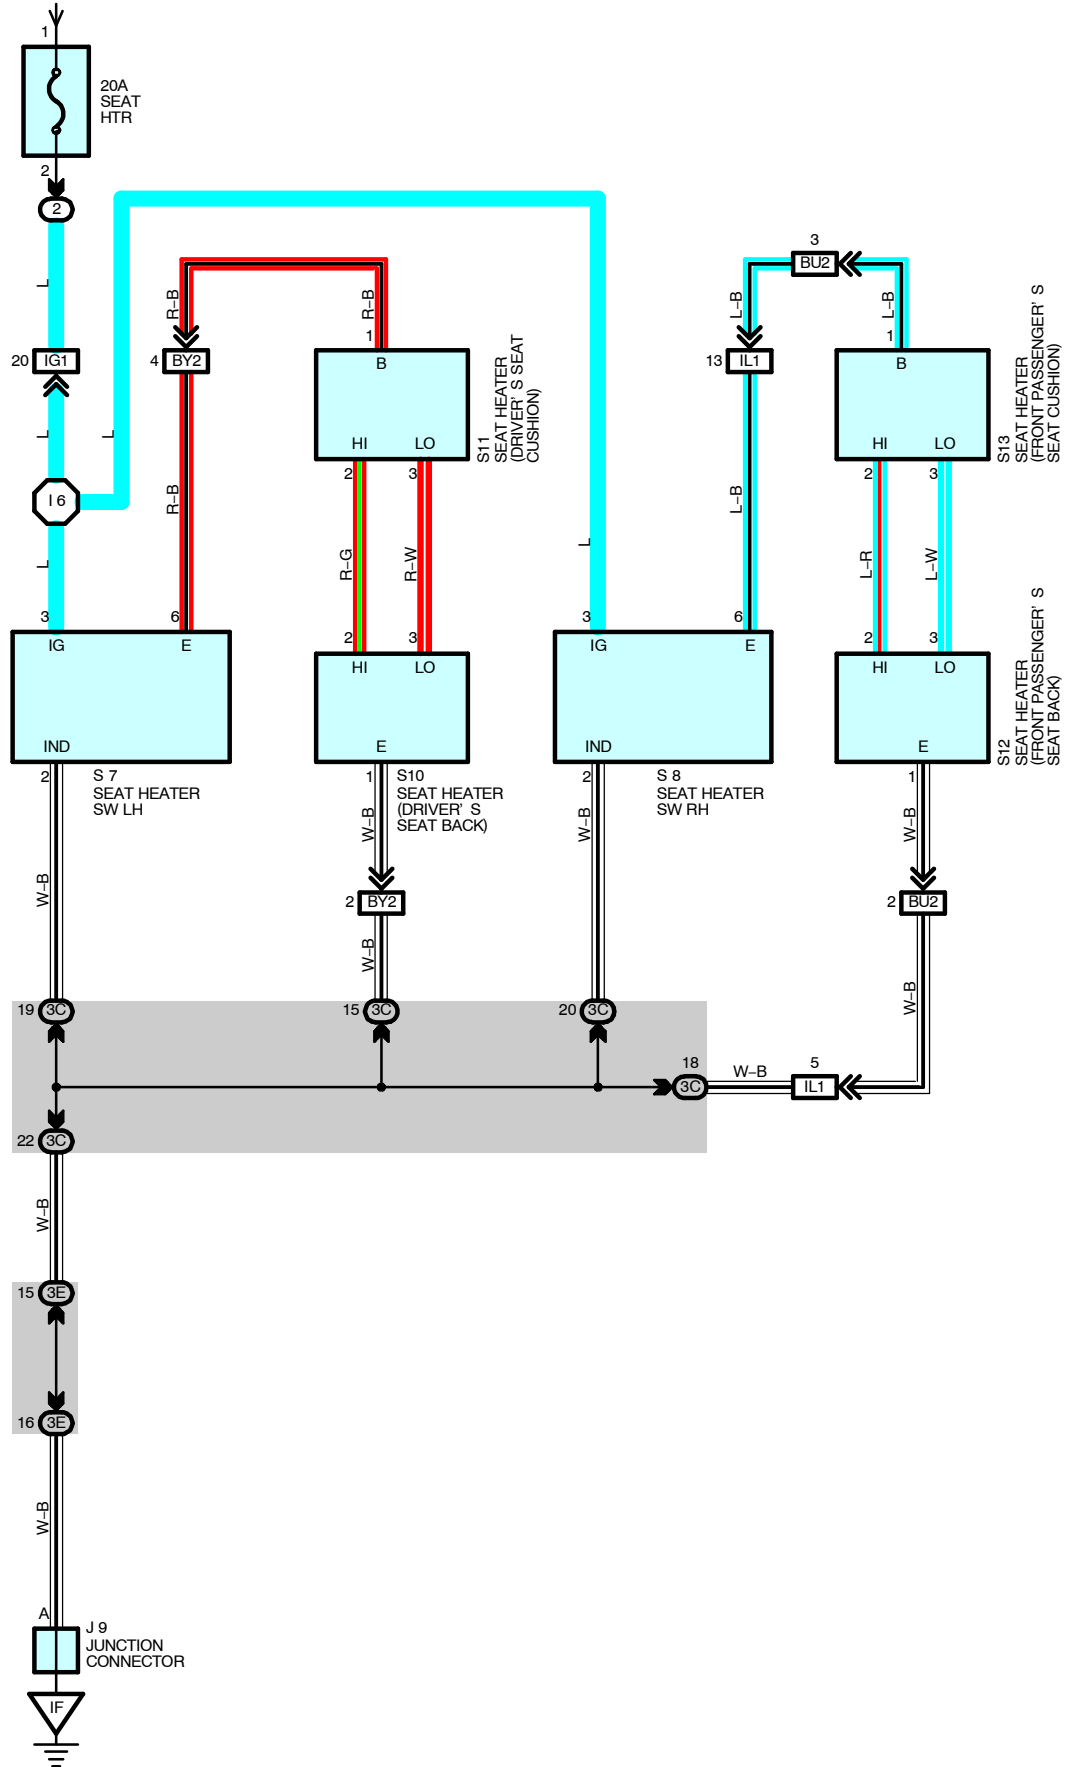

## SERVICE HINTS

### S7, S8 SEAT HEATER SW LH, RH

3-GROUND : Approx. 12 volts with the ignition SW at **ON** or **ST** position

2-GROUND : Always continuity

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J9	31	S10	34	S13	34
S7	31	S11	34		
S8	31	S12	34		

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IL1	40	Cowl Wire and Floor Wire (Right Kick Panel)
BU2	44	Floor Wire and Seat No.2 Wire (Under the Front Passenger's Seat)
BY2	44	Cowl Wire and Seat No.1 Wire (Under the Driver's Seat)

## : GROUND POINTS

Code	See Page	Ground Points Location
IF	38	Cowl Side Panel RH

## : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	40	Cowl Wire			