





# REAR WINDOW DEFOGGER AND MIRROR HEATER

## SYSTEM OUTLINE

When the rear window defogger SW (Center cluster SW) is turned on while the ignition SW is on and the back window is closed, the rear window defogger and mirror heater is operated through the control of the body ECU, and the rear window defogger indicator light comes on.

## SERVICE HINTS

### B11 BACK WINDOW LIMIT SW

1-2 : Closed with back power window fully closed

### DEFOG RELAY [ENGINE ROOM R/B]

3-5 : Closed with ignition SW at **ON** position, rear window fully closed (Limit SW on) and rear window defogger SW on

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B11	<a href="#">34</a>	J3	<a href="#">33</a>	R18	B <a href="#">35</a>
B16	A <a href="#">32</a>	J4	<a href="#">33</a>	R20	<a href="#">35</a>
B18	<a href="#">34</a>	J9	<a href="#">33</a>	R21	<a href="#">35</a>
C23	<a href="#">32</a>	R17	A <a href="#">35</a>		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	<a href="#">24</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	<a href="#">24</a>	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
1J		
3E	<a href="#">26</a>	Cowl Wire and Center J/B (Near the Steering Column Tube)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	<a href="#">42</a>	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IE2		
IF1	<a href="#">42</a>	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF2		
IG1	<a href="#">42</a>	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IK1	<a href="#">42</a>	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BR1	<a href="#">44</a>	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BR2		
BS1	<a href="#">44</a>	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	<a href="#">42</a>	Cowl Side Panel LH
IF	<a href="#">42</a>	Cowl Side Panel RH
BH	<a href="#">44</a>	Left Quarter Panel Inner

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	<a href="#">42</a>	Cowl Wire	B7	<a href="#">44</a>	Back Door No.2 Wire

