

SERVICE HINTS

R5, R22 REMOTE CONTROL MIRROR SW

10-GROUND : Always continuity

10-6 : Continuity with operation SW at **UP** or **LEFT** position

9-6 : Continuity with operation SW at **DOWN** or **RIGHT** position

9-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J4	33	R5	33	R21	35
J9	33	R20	35	R22	35

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
1H		
3B	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	42	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IK1	42	Front Door RH Wire and Cowl Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IE	42	Cowl Side Panel LH
IF	42	Cowl Side Panel RH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	44	Front Door LH Wire			