


FRONT FOG LIGHT

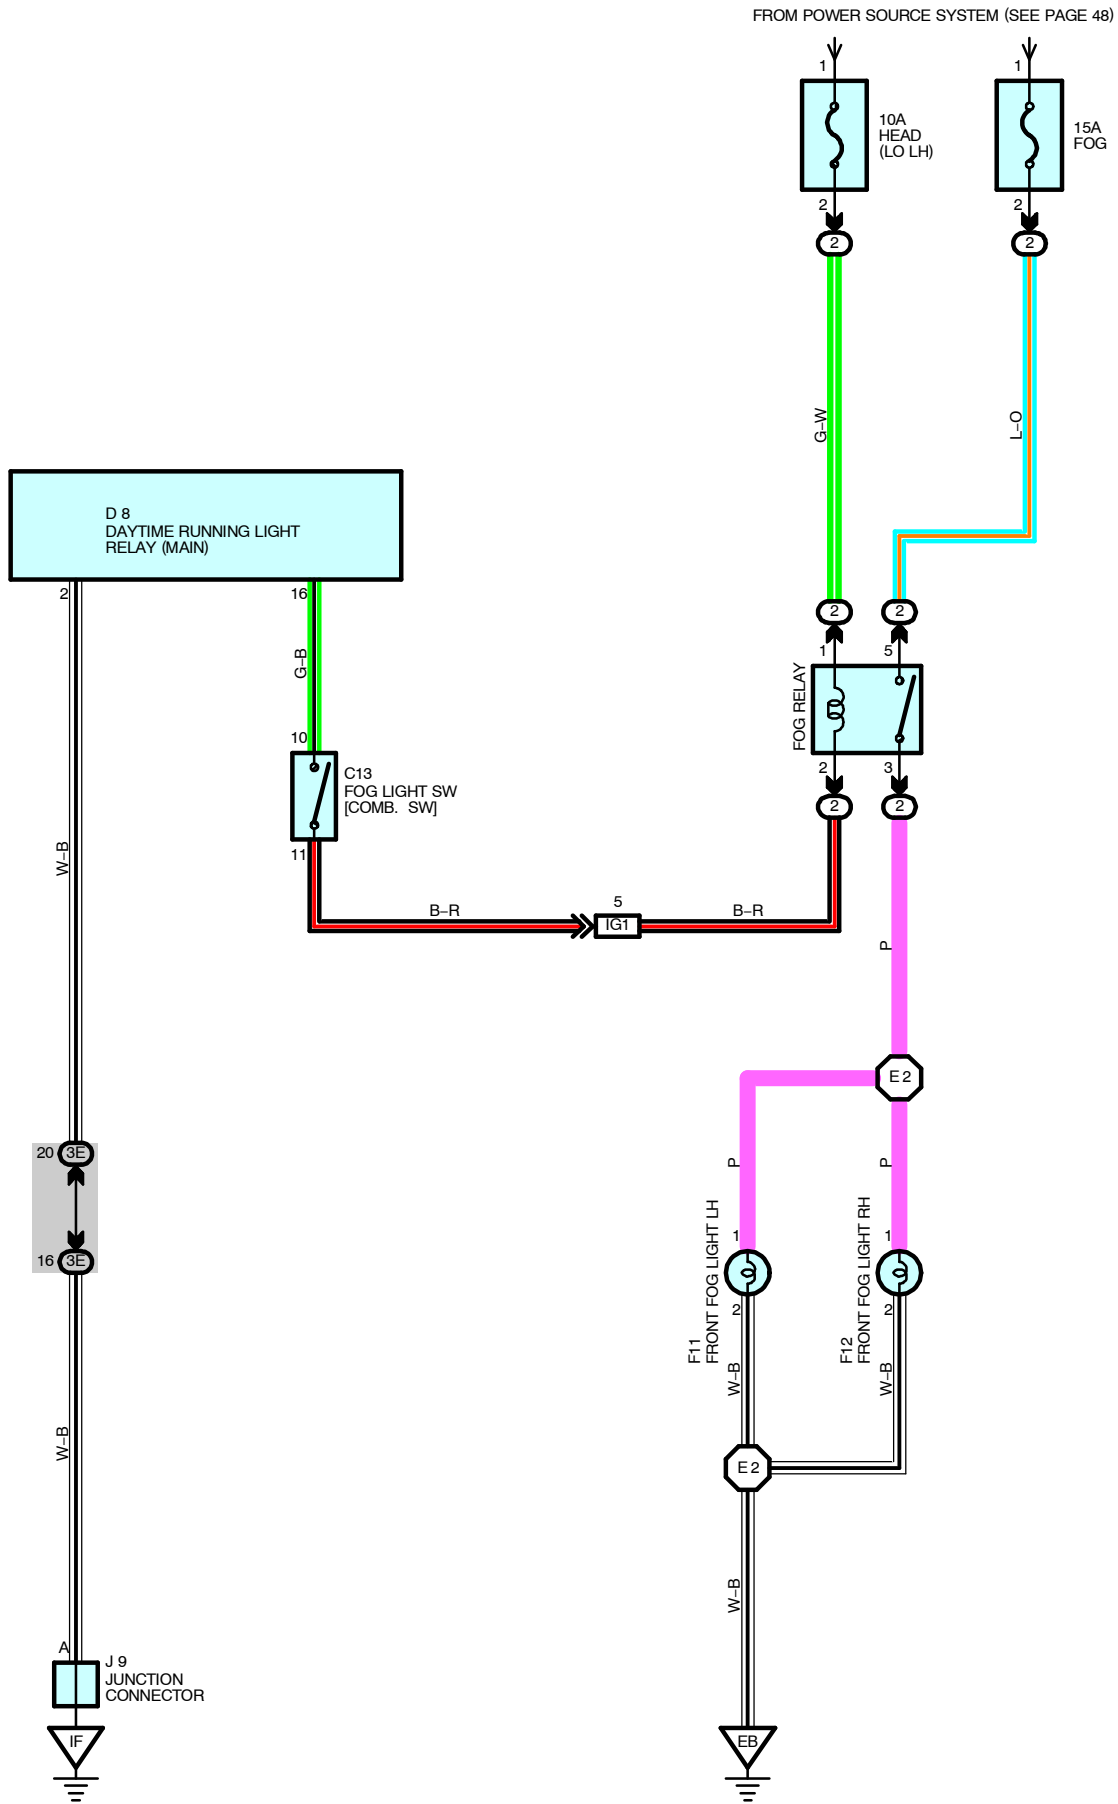

SERVICE HINTS**FOG RELAY**

5-3 : Closed with light control SW at **HEAD** position, dimmer SW at **LOW** position and fog light SW at **ON** position

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C13	30	F11	28	J9	31
D8	30	F12	28		

 : **RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
3E	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	38	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
EB	36	Front Left Fender
IF	38	Cowl Side Panel RH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	36	Engine Room Main Wire			